

Ultmost CL9946EN

Ultmost CL-9946-EN Talking Tabletop 4-Alarm Alarm Clock

Model: CL9946EN | Brand: Ultmost

INTRODUCTION

The Ultmost CL-9946-EN is a versatile talking alarm clock designed for convenience and ease of use. It features a clear, human voice that announces the time and date at the press of a button. The large LCD display is equipped with a backlight for easy reading in various lighting conditions. This clock offers the flexibility of setting up to four independent alarms, making it suitable for multiple reminders or users.

KEY FEATURES

- **Talking Function:** Announces current time and date in English with a clear human voice.
- **Large LCD Display:** Provides clear visibility of time and settings.
- **Backlight:** Illuminates the display for easy reading in low-light environments.
- **Four Independent Alarms:** Allows setting up to four distinct alarm times.
- **Tabletop Design:** Compact and stable for placement on any flat surface.

SETUP GUIDE

Follow these steps to set up your Ultmost CL-9946-EN Talking Alarm Clock for the first time.

1. **Battery Installation:** Locate the battery compartment on the back of the clock. Insert the required batteries (not included) ensuring correct polarity (+/-). Close the battery compartment cover securely.
2. **Initial Power-On:** Once batteries are inserted, the clock display should activate. If not, check battery orientation or replace with fresh batteries.
3. **Set Time and Date:** Refer to the "Operating Instructions" section for detailed steps on setting the current time and date.



Figure 1: Front view of the Ultmost CL-9946-EN Talking Alarm Clock.

OPERATING INSTRUCTIONS

Setting the Time and Date

- **Time Setting:** Press the **MODE** button repeatedly until the time setting mode is displayed. Use the **ADJUST** button to change hours, minutes, and 12/24-hour format. Press **MODE** again to confirm each setting.
- **Date Setting:** After setting the time, the date setting mode will typically follow. Use the **ADJUST** button to set the year, month, and day. Press **MODE** to confirm each setting.

Setting Alarms (AL1, AL2, AL3, AL4)

- **Select Alarm:** Press the **ALARM SET** button to cycle through AL1, AL2, AL3, AL4.
- **Set Alarm Time:** Once an alarm is selected, use the **ADJUST** button to set the desired hour and minute for that alarm.

- **Activate/Deactivate Alarm:** Press the **ALARM ON/OFF** button to toggle the selected alarm on or off. An alarm icon will appear on the display when active.

Using the Talking Feature and Backlight

- **Announce Time/Date:** Press the large **TALK** button (often located on top or front) to hear the current time and date announced.
- **Activate Backlight:** Press the **LIGHT** or **SNOOZE/LIGHT** button to illuminate the display for a few seconds.
- **Snooze Function:** When an alarm sounds, press the **SNOOZE/LIGHT** button to temporarily silence the alarm for a few minutes. The alarm will sound again after the snooze period.

MAINTENANCE

- **Cleaning:** Wipe the clock surface with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or display.
- **Battery Replacement:** When the display dims or the talking function becomes unclear, it is time to replace the batteries. Follow the battery installation steps in the "Setup Guide" section. Always use the recommended battery type.
- **Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead batteries; incorrect battery polarity.	Replace batteries with new ones, ensuring correct +/- orientation.
Talking function is unclear or not working.	Low batteries.	Replace batteries.
Alarm does not sound.	Alarm is not activated; alarm volume is too low (if adjustable); incorrect alarm time set.	Ensure the alarm is turned ON (icon visible). Check alarm time. Some models may have a volume switch.
Buttons are unresponsive.	Temporary software glitch; very low batteries.	Remove and reinsert batteries to reset the clock. Replace batteries if old.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Ultmost
Model Number	CL9946EN
Display Type	LCD
Special Feature	Talking, Alarm, Backlight
Power Source	Battery Powered

Feature	Detail
Are Batteries Included	No
Mounting Type	Tabletop
Colour	Black or White
Frame Material	Plastic
Item Weight	181 g
UPC	856017002359

WARRANTY AND SUPPORT

For specific warranty information regarding your Ultmost CL-9946-EN Talking Tabletop 4-Alarm Alarm Clock, please refer to the documentation included with your purchase or contact Ultmost customer support directly. Warranty terms and conditions may vary by region and retailer.

For technical support or further assistance, please visit the official Ultmost website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 Ultmost Technology. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

