

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Leviton](#) /

› [Leviton 1-Gang 1-Decora Midway Nylon Wallplate PJ26-TM Instruction Manual](#)

Leviton PJ26-TM

Leviton 1-Gang 1-Decora Midway Nylon Wallplate PJ26-TM Instruction Manual

[Introduction](#)

[Features](#)

[Installation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)


[Warranty &](#)

[Support](#)

[Safety Information](#)

1. INTRODUCTION

This instruction manual provides guidance for the installation and maintenance of the Leviton 1-Gang 1-Decora Midway Nylon Wallplate, model PJ26-TM. This wall plate is designed to cover a single Decora-style electrical device, such as a switch or receptacle, and is made from durable thermoplastic nylon. Its midway size offers greater coverage than standard wall plates, helping to conceal wall surface irregularities.

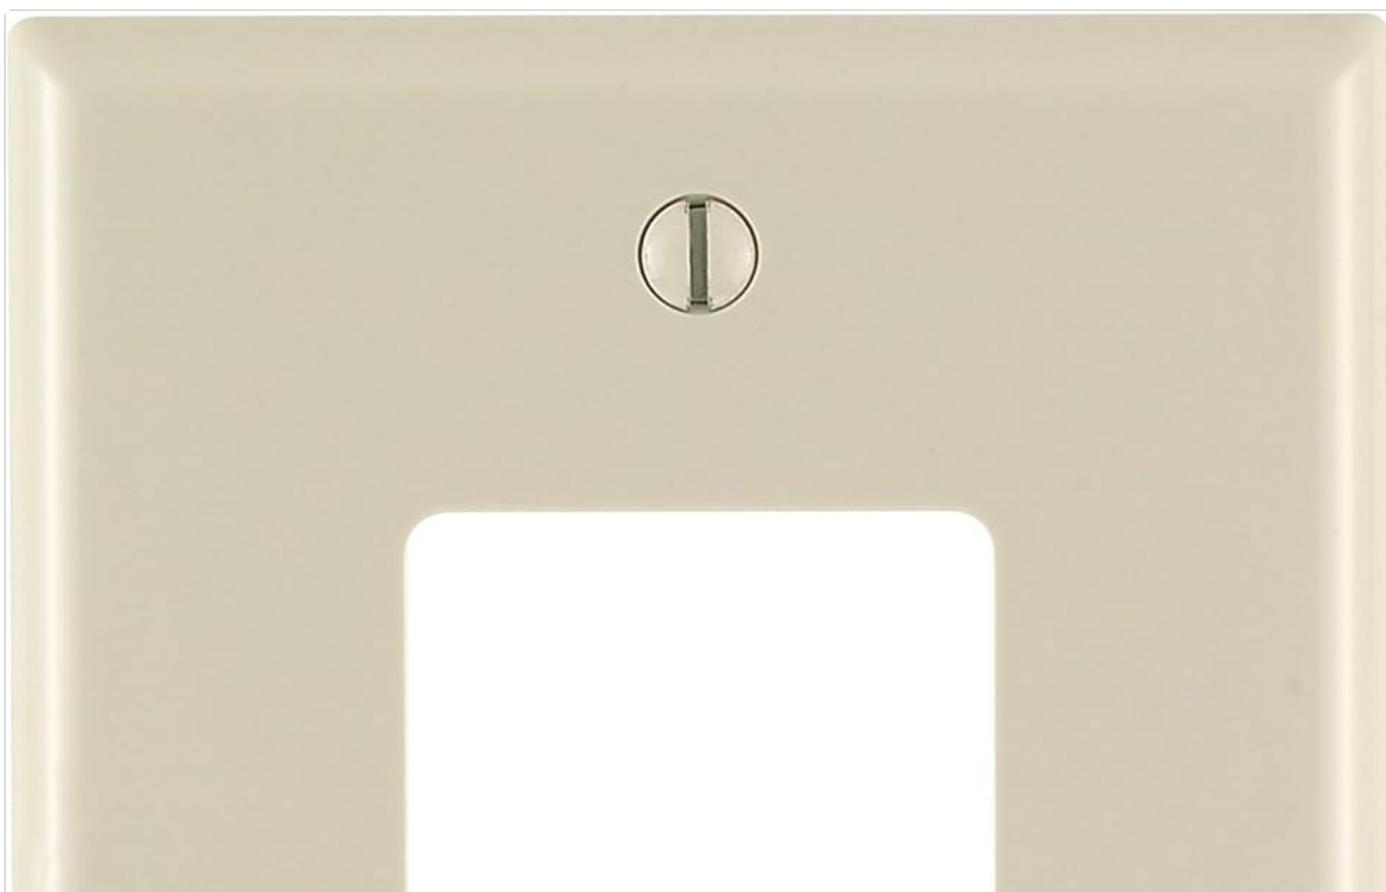

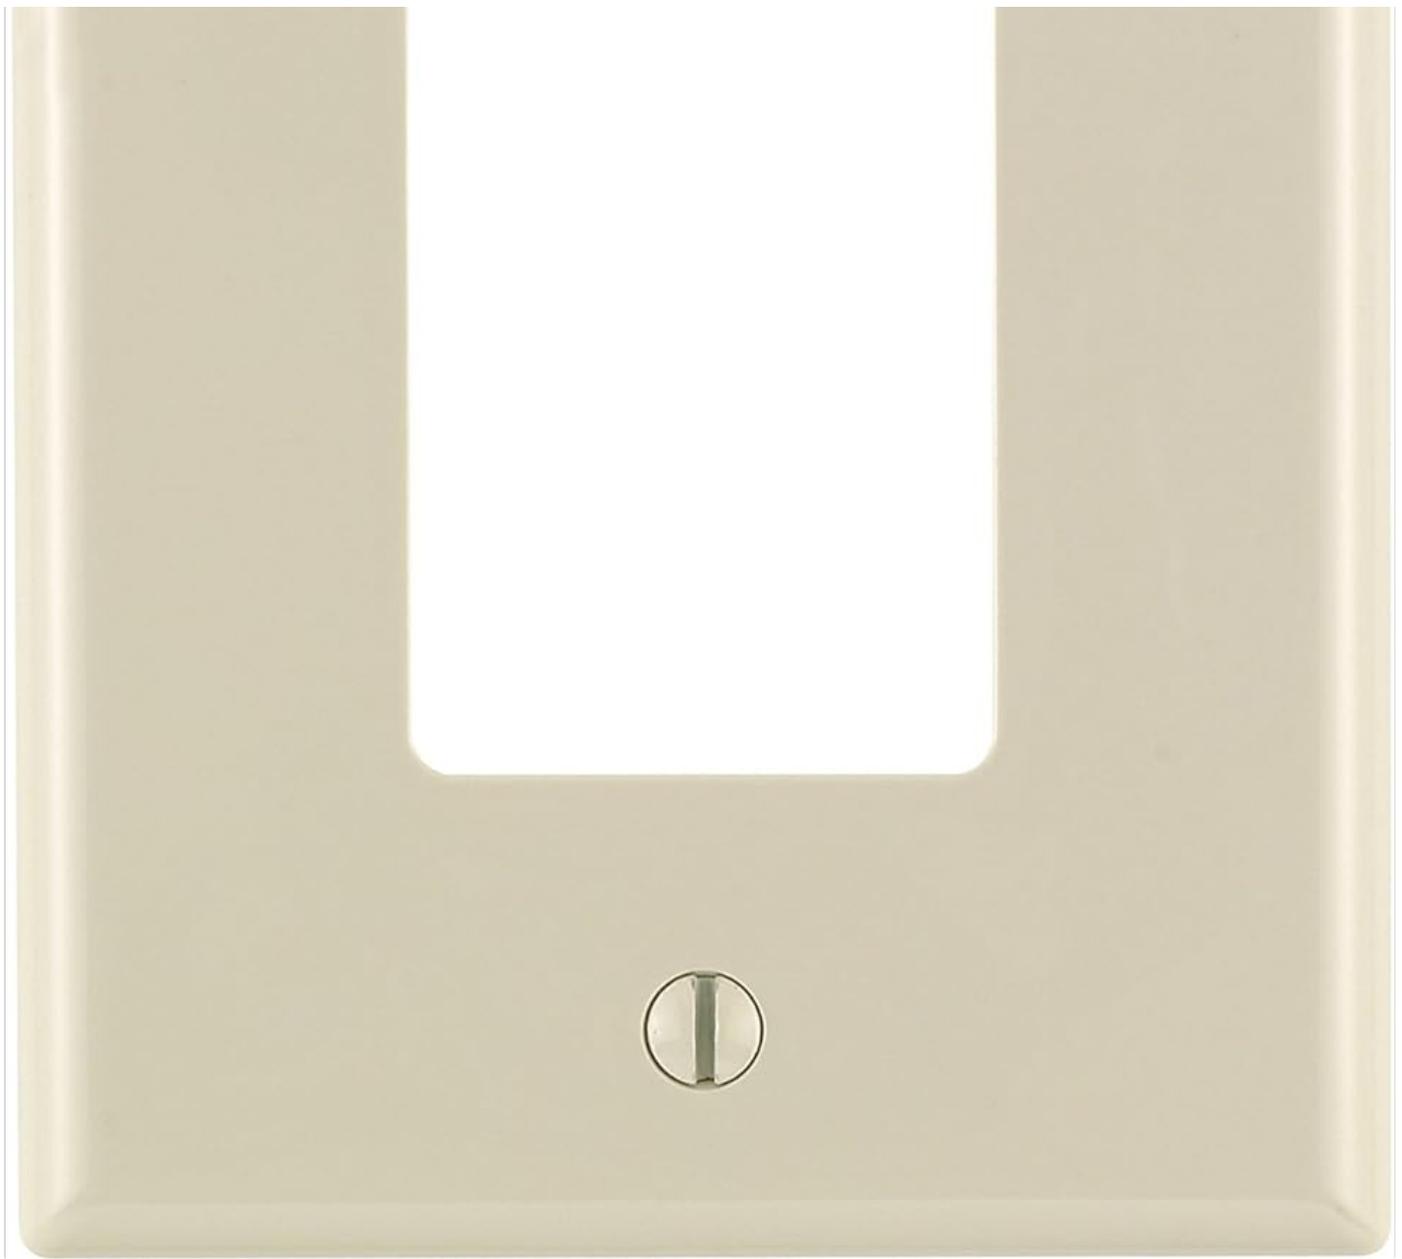


Figure 1: Leviton 1-Gang 1-Decora Midway Nylon Wallplate (Light Almond)

2. PRODUCT FEATURES

- **Midway Size:** Approximately 0.375 inches taller and wider than standard wall plates, ideal for covering larger outlet boxes or minor wall imperfections.
- **Durable Material:** Constructed from molded thermoplastic nylon for maximum resistance to impact, abrasion, fading, and discoloration.
- **Easy to Clean:** Features a smooth face and rounded edges that resist dust accumulation, simplifying cleaning.
- **High Abuse Resistance:** Designed to withstand mechanical stress, suitable for high-traffic areas.
- **Color:** Light Almond finish to complement various interior designs.

3. INSTALLATION INSTRUCTIONS

3.1 Safety First

WARNING: To avoid fire, shock, or death, always turn off power at the circuit breaker or fuse box before wiring. It is recommended to consult a qualified electrician if you are unsure about any part of the installation process.

3.2 Tools Required

- Screwdriver (flathead or Phillips, depending on existing screws)

3.3 Step-by-Step Installation

1. **Turn Off Power:** Locate the circuit breaker or fuse box that controls the power to the electrical device you are working on. Turn off the corresponding breaker or remove the fuse to cut off power. Verify power is off using a voltage tester.
2. **Remove Existing Wall Plate:** Carefully unscrew and remove the existing wall plate from the electrical box.
3. **Position New Wall Plate:** Align the Leviton 1-Gang 1-Decora Midway Nylon Wallplate over the electrical device. Ensure the opening in the wall plate correctly frames the device.
4. **Secure Wall Plate:** Insert the provided screws into the top and bottom holes of the wall plate. Tighten the screws until the wall plate is snug against the wall. Do not overtighten, as this can damage the plate or the electrical box. The nylon material allows for slight flexibility to accommodate minor wall irregularities without cracking.
5. **Restore Power:** Once the new wall plate is securely installed, return to the circuit breaker or fuse box and restore power to the circuit.

4. OPERATING INSTRUCTIONS

The Leviton 1-Gang 1-Decora Midway Nylon Wallplate serves as a protective and aesthetic cover for a single Decora-style electrical device. Its operation is passive; it does not control the function of the device it covers. To operate the electrical device (e.g., light switch, receptacle), use the device itself as intended.

5. MAINTENANCE

5.1 Cleaning

To clean your Leviton wall plate, simply wipe it with a soft, damp cloth. For tougher stains, a mild soap solution can be used. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish of the nylon material. Ensure the cloth is not excessively wet to prevent moisture from entering the electrical box.

6. TROUBLESHOOTING

- **Wall Plate Does Not Sit Flush:**
 - Ensure the electrical device (switch/receptacle) is properly seated and flush within the electrical box.
 - Check for any obstructions behind the wall plate.
 - The nylon material offers some flexibility; gently adjust the plate while tightening screws to achieve a flush fit.
- **Screws Do Not Tighten:**
 - Verify that you are using the correct size screwdriver for the screws.
 - Ensure the screws are properly aligned with the threaded holes in the electrical device.
 - If the threads are stripped, the electrical device itself may need to be replaced.

7. SPECIFICATIONS

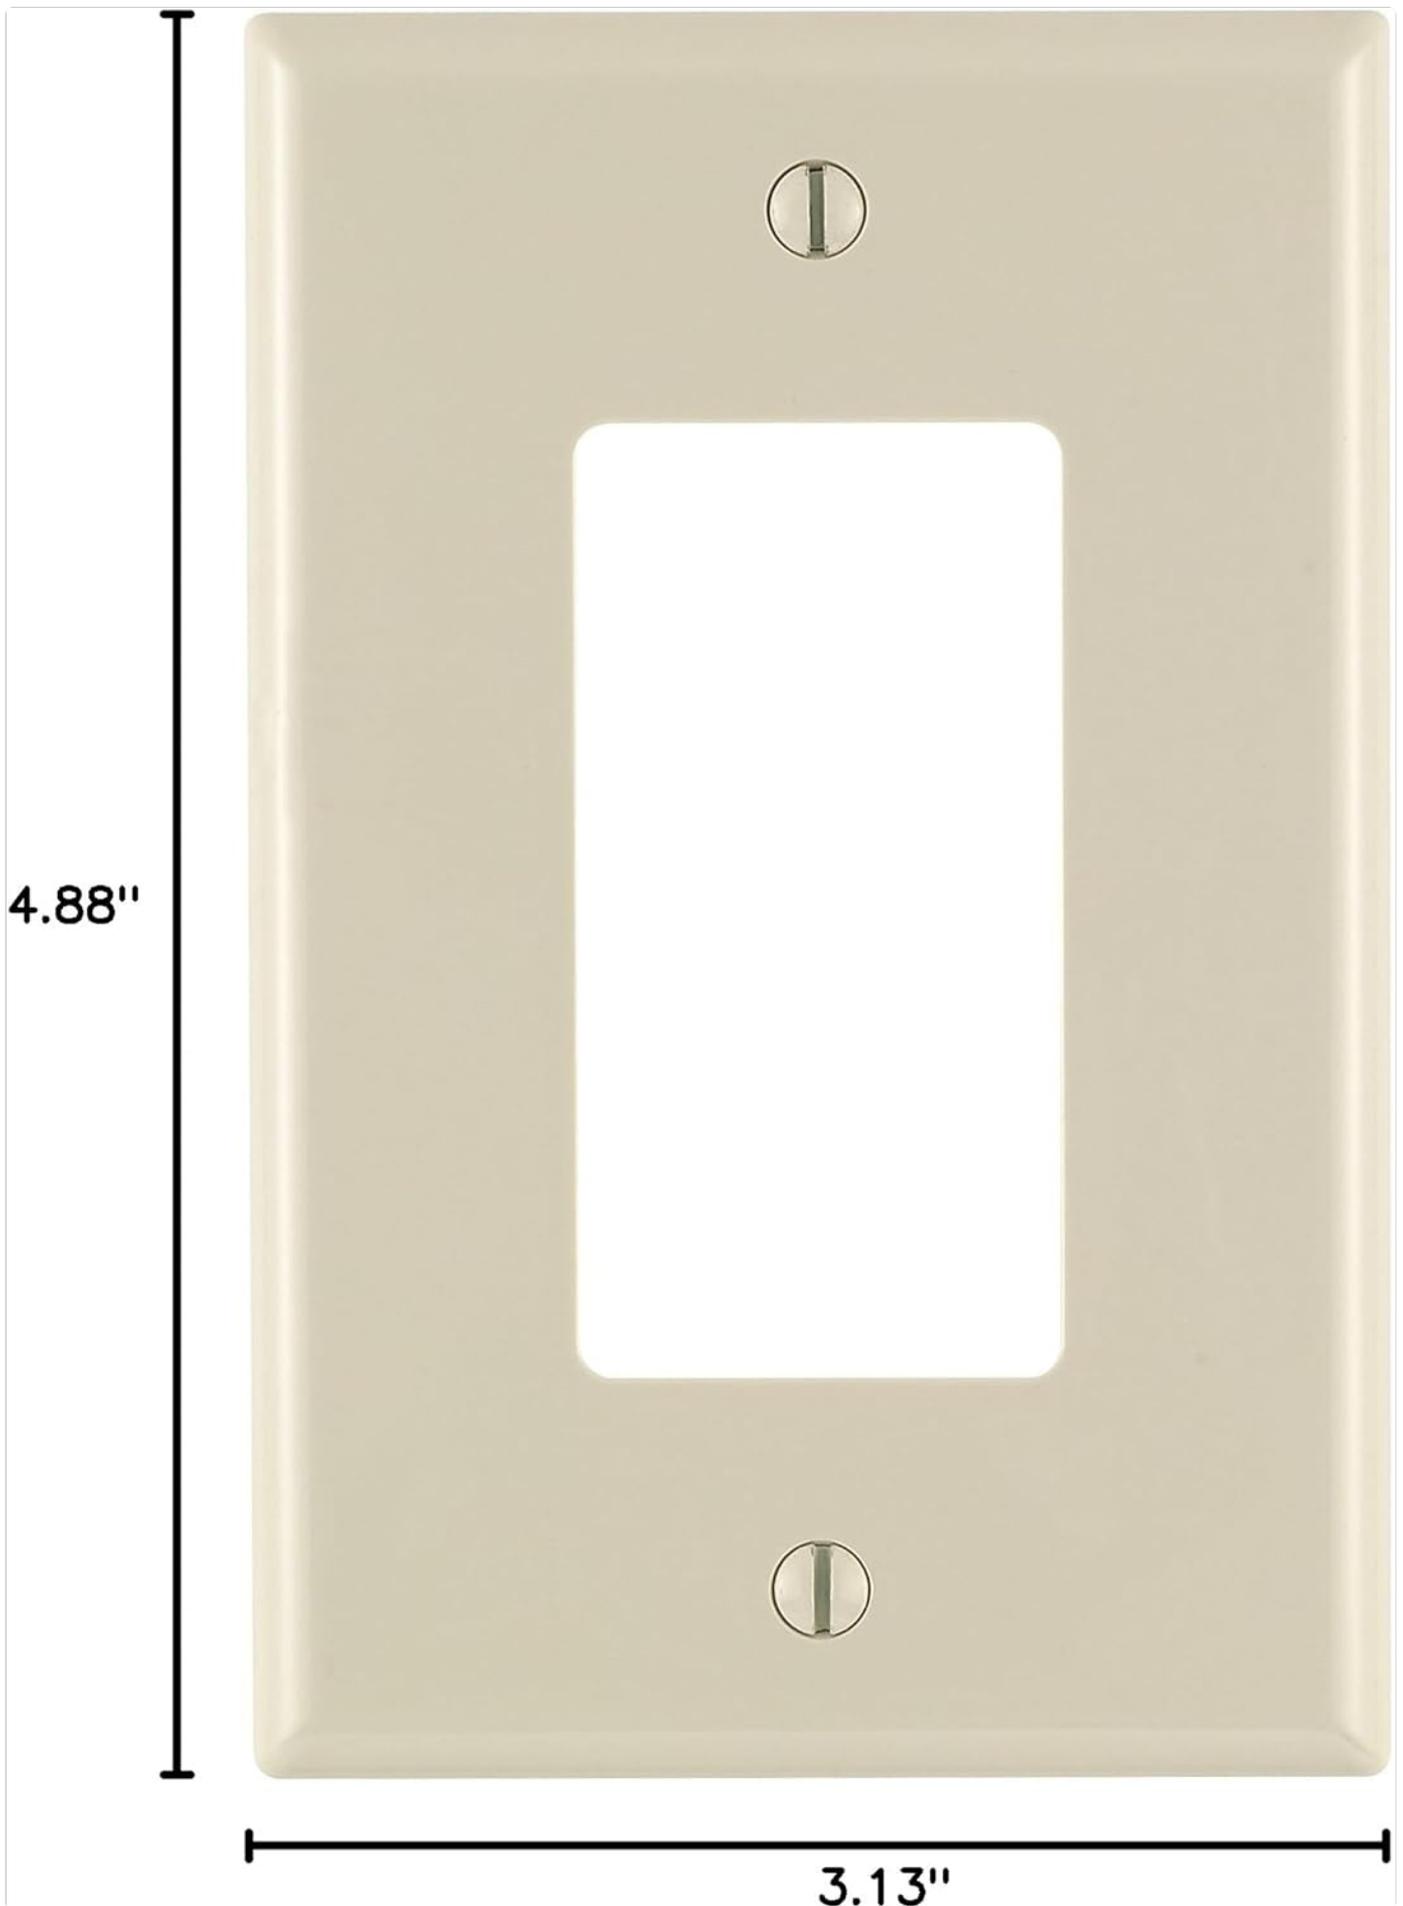


Figure 2: Product Dimensions (Height: 4.88", Width: 3.13")

Product Specifications - Leviton PJ26-TM

| Attribute | Value |
|-------------------|---------------------|
| Brand | Leviton |
| Model Number | PJ26-TM |
| Material | Thermoplastic Nylon |
| Color | Light Almond |
| Number of Gangs | 1 |
| Wall Plate Style | Decora / Rocker |
| Height | 4.88 inches |
| Width | 3.13 inches |
| Finish Type | Nylon |
| Installation Type | Screw-In |
| UPC | 078477459140 |

8. WARRANTY AND SUPPORT

Leviton provides a manufacturer's warranty for this product. For specific warranty details, including coverage and duration, please refer to the documentation included with your purchase or visit the official Leviton website. For technical support or further assistance, please contact Leviton customer service.

9. SAFETY INFORMATION

WARNING: This product may expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

