

Philips AT890/20

Philips AquaTouch AT890/20 Electric Shaver User Manual

Wet and Dry Rechargeable Electric Shaver with Pop-Up Trimmer

1. INTRODUCTION

Welcome to the Philips AquaTouch AT890/20 user manual. This electric shaver is designed to provide a comfortable and close shave, whether used wet with foam or gel, or dry. Its waterproof design ensures versatility and ease of cleaning. Please read this manual carefully before first use to ensure proper operation and maintenance of your device.

2. IMPORTANT SAFETY INFORMATION

Always observe the following safety precautions when using this appliance:

- This appliance is waterproof and suitable for use in the bath or shower. For safety reasons, it can only be used cordlessly.
- Do not use the appliance if it is damaged.
- Keep the charger dry. Do not immerse the charger in water or rinse it under the tap.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use the original charger provided with the appliance.

3. WHAT'S IN THE Box

Upon unpacking your Philips AquaTouch AT890/20, please ensure all the following items are present:

- Philips AquaTouch AT890/20 Electric Shaver
- Charger
- Protective Cap (may be pre-installed)

- Cleaning Brush (may be included)

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Philips AquaTouch AT890/20 shaver:

1. Shaving heads
2. Power button
3. Charging indicator light
4. Pop-up trimmer
5. Charging socket



Figure 1: Front view of the Philips AquaTouch AT890/20 shaver.



Figure 2: Close-up of the rotary shaving heads.

5. CHARGING THE SHAVER

Before first use, fully charge the shaver. A full charge provides approximately 45 minutes of shaving time.

1. Ensure the shaver is switched off.
2. Insert the small plug of the charger into the charging socket at the bottom of the shaver.
3. Plug the charger into a wall outlet.
4. The charging indicator light will illuminate, indicating that the shaver is charging.
5. A full charge takes approximately 8 hours. Once fully charged, the indicator light may change color or turn off, depending on the model.
6. After charging, unplug the charger from the wall outlet and then from the shaver.

Note: The shaver cannot be operated while connected to the charger for safety reasons (cordless use only).

6. OPERATING THE SHAVER

6.1. Wet Shaving

For a comfortable and refreshing shave, use the AquaTouch AT890/20 with shaving foam or gel.

1. Wet your face with water.
2. Apply shaving foam or gel to your skin.
3. Press the power button to switch on the shaver.
4. Move the shaving heads in small, circular motions over your skin. Ensure gentle pressure.
5. Rinse the shaving heads under warm water during shaving to prevent clogging.

6. After shaving, rinse your face thoroughly and clean the shaver as described in the 'Cleaning and Maintenance' section.

6.2. Dry Shaving

For a quick and convenient shave, you can use the AquaTouch AT890/20 dry.

1. Ensure your face is clean and dry before shaving.
2. Press the power button to switch on the shaver.
3. Move the shaving heads in small, circular motions over your skin.
4. For best results, stretch your skin with your free hand to make the hairs stand upright.
5. After shaving, clean the shaver as described in the 'Cleaning and Maintenance' section.

6.3. Using the Pop-Up Trimmer

The integrated pop-up trimmer is ideal for shaping sideburns, moustaches, and trimming longer hairs before shaving.

1. Slide the trimmer release button (usually located on the back or side of the shaver) upwards to activate the trimmer.
2. Switch on the shaver.
3. Hold the trimmer at a right angle to your skin and move it downwards to trim.
4. After use, push the trimmer back into its original position until it clicks.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and hygiene of your shaver.

1. **Daily Cleaning (Quick Rinse):** After each shave, switch off the shaver and rinse the shaving unit under warm running water. You can also open the shaving unit by pressing the release button and rinsing the inside thoroughly. Shake off excess water and let it air dry.
2. **Thorough Cleaning (Weekly):** For a more thorough clean, detach the shaving unit from the shaver body. Disassemble the shaving heads by turning the retaining ring counter-clockwise. Remove the cutters and combs. Clean each part individually under running water. Ensure all parts are completely dry before reassembling.
3. **Lubrication:** Occasionally, you may apply a drop of sewing machine oil or Philips shaver oil to the shaving heads to maintain smooth operation.
4. **Storage:** Store the shaver in a dry place, away from direct sunlight. Use the protective cap to prevent damage to the shaving heads.



Figure 3: Shaver stored in its travel case.

Note: Replace shaving heads approximately every two years for best results. Replacement heads are available from Philips retailers.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not switch on.	Battery is empty.	Charge the shaver for at least 8 hours.
Shaver does not shave well.	Shaving heads are dirty or worn out.	Clean the shaving heads thoroughly. If performance does not improve, replace the shaving heads.
Skin irritation after shaving.	Incorrect shaving technique or sensitive skin.	Ensure you are using small, circular motions with gentle pressure. Allow your skin to adapt to electric shaving (may take a few weeks). Consider wet shaving with foam/gel for more comfort.
Shaver stops during use.	Battery is low.	Recharge the shaver.

9. SPECIFICATIONS

- **Model:** AT890/20
- **Power Source:** Rechargeable Battery

- **Charging Time:** Approximately 8 hours for a full charge
- **Shaving Time:** Up to 45 minutes cordless shaving
- **Special Feature:** Waterproof (Wet & Dry use)
- **Included Components:** Shaver, Charger
- **Item Weight:** Approximately 14.1 ounces (0.88 Pounds)
- **Manufacturer:** Philips

10. WARRANTY AND SUPPORT

Your Philips AquaTouch AT890/20 shaver comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, product registration, or to find replacement parts and accessories, please visit the official Philips website or contact Philips customer service in your region. Keep your proof of purchase for warranty claims.

© 2023 Philips. All rights reserved.