

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [PDP](#) /
- › [PDP Kinect Sensor TV Mounting Clip for Xbox 360 User Manual](#)

PDP MS-3608

PDP Kinect Sensor TV Mounting Clip for Xbox 360

Model: MS-3608

Product Overview

The PDP Kinect Sensor TV Mounting Clip is designed to securely position your Xbox 360 Kinect Sensor above your flat panel HDTV. This accessory provides an optimal viewing and tracking angle for the Kinect Sensor, enhancing your gaming and interactive experience. Its design allows for easy installation and removal, ensuring both stability and convenience.



Image: The PDP Kinect Sensor TV Mounting Clip.

Key Features:

- Mounts the Kinect Sensor securely on flat panel televisions.
- Features a slide-in and slide-out platform for effortless sensor placement and storage.
- Officially licensed by Microsoft for the Xbox 360, ensuring compatibility and quality.

Setup Instructions

Follow these steps to properly install your PDP Kinect Sensor TV Mounting Clip and attach your Kinect Sensor.

1. **Prepare the Mounting Clip:** Unpack the mounting clip. The clip features an adjustable rear leg and a front lip designed to rest on your TV.
2. **Attach Kinect Sensor to Clip:** Locate the two small holes on the stand of your Kinect Sensor. Align these holes with the corresponding clips on the mounting platform of the PDP clip. Gently press the Kinect Sensor onto the clip until it securely clicks into place.
3. **Position on TV:** Carefully place the assembled clip and Kinect Sensor on top of your flat panel HDTV. Ensure the front lip of the clip rests firmly on the front edge of your TV.



Image: The Kinect Sensor TV Mounting Clip securely holding the Kinect Sensor on a flat-panel TV.

4. **Adjust for Stability:** Adjust the rear leg of the mounting clip downwards until it makes firm contact with the back of your television. The clip uses tension to hold itself in place. Ensure the non-skid surfaces on both the front lip and the rear leg are in contact with your TV to prevent slipping and protect its surface.



Image: Top view of the mounting clip, highlighting the adjustable mechanism.

5. **Verify Placement:** Confirm that the Kinect Sensor is level and stable. Gently test its stability by applying light pressure. It should not wobble or feel loose.
6. **Calibrate Kinect:** After installation, it is recommended to recalibrate your Kinect Sensor through your Xbox 360 system settings to ensure optimal motion tracking and recognition from its new position.

Operating Instructions

Once installed, the PDP Kinect Sensor TV Mounting Clip requires no specific operation. Its function is to provide a stable and elevated platform for your Kinect Sensor. Ensure the Kinect Sensor is properly connected to your Xbox 360 console as per the Kinect Sensor's own instructions.

- Always ensure the clip and sensor are securely seated on the TV before use.
- Avoid bumping or applying excessive force to the TV or the mounted sensor during gameplay to maintain stability.

Maintenance

The mounting clip is designed for durability and requires minimal maintenance.

- **Cleaning:** Use a soft, dry cloth to wipe down the clip if it accumulates dust. Avoid abrasive cleaners or solvents.
- **Inspection:** Periodically check the clip for any signs of wear or damage. Ensure the adjustable leg mechanism functions smoothly and securely.
- **Storage:** If removing the clip for storage, detach the Kinect Sensor first, then carefully remove the clip from the TV. Store in a cool, dry place.

Troubleshooting

If you encounter issues with your mounting clip, consider the following:

- **Kinect Sensor Wobbles:**
 - Ensure the rear leg is fully extended and making firm contact with the back of your TV.
 - Verify that the Kinect Sensor is properly clipped into the mounting platform.
 - Check if your TV's top edge is stable and not prone to movement.
- **Kinect Sensor Not Tracking Properly:**
 - Recalibrate the Kinect Sensor through your Xbox 360 system settings after installation or if its position has been altered.
 - Ensure the sensor's view is unobstructed and that it is positioned at an appropriate height for your play area.

Product Specifications

Feature	Detail
Brand	PDP
Model Number	MS-3608
Compatible Devices	Xbox 360 Kinect Sensor, Television
Mounting Type	Tabletop (TV Top)
Fastening Type	Clip Holder
Color	Black
Item Dimensions (L x W x H)	1.97 x 4.84 x 7.01 inches

Form Factor	Tower
Adjustable Length	No (adjustable leg for TV thickness)
Unit Count	1.0 Count

Warranty Information

For specific warranty details regarding your PDP Kinect Sensor TV Mounting Clip, please refer to the documentation included with your purchase or visit the official PDP website. Warranty terms typically cover manufacturing defects for a specified period from the date of purchase.

Customer Support

If you require further assistance, have questions about installation, or need to report a product issue, please contact PDP customer support. You can usually find contact information on the product packaging or on the official PDP website.

Online Resources:

- Visit the [PDP Store on Amazon](#) for product information.
- Refer to your Xbox 360 Kinect Sensor manual for sensor-specific troubleshooting or calibration.