

Jack LaLanne's Power Juicer Deluxe

Jack LaLanne's Power Juicer Deluxe Instruction Manual

Model: Power Juicer Deluxe | Brand: Jack LaLanne's

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Safety Information](#) [Product](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before operating your Jack LaLanne's Power Juicer Deluxe. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the juicer from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate the juicer with a damaged cord or plug, or if the appliance malfunctions or has been dropped or damaged in any manner.
- Keep hands and utensils out of the feed chute during operation to prevent the risk of severe injury to persons or damage to the juicer. Use only the food pusher provided.
- Ensure all parts are correctly assembled and the safety locking bar is securely in place before turning on the appliance.
- Do not use outdoors. This appliance is for household use only.
- Do not immerse the motor base in water or other liquids.
- Supervise children closely when the appliance is in use.

2. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the various parts of your Power Juicer Deluxe for optimal use and maintenance.



Figure 2.1: Front view of the Jack LaLanne's Power Juicer Deluxe, showcasing its sleek black and chrome design, surrounded by fresh fruits and a glass of extracted juice.



Figure 2.2: Side view of the juicer, illustrating the integrated pulp collector at the rear of the unit.

Key Components:

- **Motor Base:** The main unit containing the motor and controls.
- **Pulp Collector:** Detachable container at the back for collecting discarded pulp.
- **Filter Basket/Blade:** Stainless steel blade and mesh filter for extracting juice.
- **Juicer Cover:** Top part that covers the filter basket and includes the feed chute.
- **Food Pusher:** Used to guide fruits and vegetables down the feed chute.
- **Safety Locking Bar:** Ensures the juicer is securely assembled before operation.

- **Juice Spout:** Where the extracted juice flows out.

3. SETUP INSTRUCTIONS

Before first use, wash all removable parts (pulp collector, filter basket, juicer cover, food pusher) in warm, soapy water, rinse thoroughly, and dry. Ensure the motor base is unplugged.

1. Place the motor base on a stable, flat, and dry surface.
2. Insert the pulp collector into its designated slot at the back of the motor base.
3. Carefully place the stainless steel filter basket onto the motor base, ensuring it sits securely.
4. Position the juicer cover over the filter basket, aligning it properly.
5. Lift the safety locking bar and secure it into the grooves on the juicer cover. The juicer will not operate unless this bar is locked into place.
6. Place a glass or pitcher under the juice spout to collect the juice.
7. Insert the food pusher into the feed chute.
8. Plug the juicer into a grounded electrical outlet.

4. OPERATING INSTRUCTIONS

Follow these steps to extract fresh juice from your favorite fruits and vegetables.

Preparation of Ingredients:

- Wash all fruits and vegetables thoroughly.
- For larger items, chop them into pieces that fit easily into the feed chute.
- Remove any hard pits from fruits (e.g., peaches, plums) and large seeds.
- For fruits with thick or inedible peels (e.g., oranges, grapefruits, pineapples), peel them before juicing.

Juicing Process:

1. Ensure the juicer is properly assembled and plugged in.
2. Turn on the juicer using the power switch.
3. Gradually feed the prepared fruits and vegetables into the feed chute.
4. Use the food pusher to gently guide the produce down. Do not force the produce, as this can strain the motor.
5. The fresh juice will flow out of the spout into your collecting container, while the pulp will be separated into the pulp collector.
6. Once juicing is complete, turn off the juicer and unplug it from the outlet.

Example Juice Recipe:

A popular and refreshing juice blend includes:

- 2 Carrots
- 1 Orange
- 1 Apple
- 1 Grapefruit
- 1 Lemon
- 1 Chunk of Ginger

Adjust quantities to taste. Ensure all ingredients are washed and appropriately sized before juicing.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your juicer.

1. Always unplug the juicer before cleaning.
2. Disassemble all removable parts: food pusher, juicer cover, filter basket, and pulp collector.
3. Rinse all removable parts under running water to remove large pulp residues.
4. Wash the parts with warm, soapy water. For stubborn stains or residue, a mixture of water and vinegar can be used for effective cleaning.
5. The removable parts are dishwasher safe for convenience.
6. Use a brush to clean the mesh of the filter basket thoroughly to ensure all pulp is removed.
7. Wipe the motor base with a damp cloth. Never immerse the motor base in water.
8. Ensure all parts are completely dry before reassembling or storing the juicer to prevent mold or mildew.

6. TROUBLESHOOTING GUIDE

If you encounter issues with your juicer, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in, safety locking bar not engaged, power switch off.	Ensure the juicer is securely plugged into a working outlet. Check that the safety locking bar is fully engaged. Verify the power switch is in the "ON" position.
Juicer stops during operation or overheats.	Overloading with produce, continuous operation for too long.	Turn off and unplug the juicer. Allow it to cool down for at least 30 minutes. Reduce the amount of produce fed at one time. Ensure produce is chopped into appropriate sizes.
Low juice yield or excessive pulp in juice.	Filter basket clogged, produce not fresh, improper feeding.	Clean the filter basket thoroughly, especially the mesh. Use fresh, firm produce. Feed produce slowly and steadily, using the food pusher gently.
Loud noise or vibration.	Improper assembly, damaged parts.	Turn off and unplug the juicer. Disassemble and reassemble all parts, ensuring they are correctly seated. If noise persists, contact customer support.

7. PRODUCT SPECIFICATIONS

Brand: Jack LaLanne's

Model: Power Juicer Deluxe

Color: Chrome

Special Feature: Portable

Finish Type: Chrome

Recommended Uses: Citrus Fruits, Fruits, Vegetables, Carrot, Apple, Kale, Grape, Cucumber, Beetroot, Pear

Product Care Instructions: Dishwasher Safe

Capacity: 1 Liters

Maximum Power: 200 Watts

Power Source: Corded Electric
Blade Material: Stainless Steel
Is Dishwasher Safe: Yes
Manufacturer: Jack LaLanne's
UPC: 752356784379
Package Dimensions: 14 x 8 x 8 inches
Item Weight: 15 pounds
ASIN: B004Z20GF8
Date First Available: May 8, 2012

8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Jack LaLanne's Power Juicer Deluxe, please refer to the warranty card included with your purchase or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.

For further assistance, you may also visit the official Jack LaLanne's website or contact their customer service department.

© 2024 Jack LaLanne's. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

