

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Senco](#) /

› [SENUO SFT10XP 6S0041N Pneumatic Fine Wire Crown Stapler User Manual](#)

Senco SFT10XP 6S0041N

SENUO SFT10XP 6S0041N Pneumatic Fine Wire Crown Stapler User Manual

MODEL: SFT10XP (6S0041N)

1. Introduction

The SENUO SFT10XP is a compact and durable pneumatic fine wire stapler designed for a variety of light fastening applications. This tool is suitable for tasks such as upholstery, cabinet work, molding installation, furniture assembly, framing, insulation, light wood assembly, wire and cable securing, hobbies, automotive repairs, and general fastening projects. It features a robust all-metal motor and a thread-in steel cap for enhanced durability and reduced recoil.

2. Important Safety Information

Always adhere to safety guidelines when operating pneumatic tools. Failure to do so can result in serious injury.

- Always wear eye protection that conforms to ANSI Z87.1 standards and hearing protection when operating this tool.
- Never point the tool at yourself or others.
- Disconnect the air supply before performing any adjustments, maintenance, or clearing jams.
- Ensure the work area is clear and well-lit.
- Do not operate the tool if it is damaged or malfunctioning.
- This type of upholstery stapler typically does not include a safety mechanism that prevents accidental firing. Exercise extreme caution during operation.

3. Product Overview

Familiarize yourself with the components of your SENUO SFT10XP stapler.



Figure 1: Side view of the SENCO SFT10XP stapler, highlighting the main body, trigger, and magazine.



Figure 2: Alternate side view of the SENCO SFT10XP stapler, showing the exhaust port and magazine release.

Key components include the trigger, magazine, air inlet, exhaust port, and nose.

4. Setup

4.1. Connect Air Supply

1. Attach an air hose to the tool's air inlet.
2. Ensure the air compressor is set to an operating pressure between 60 and 95 PSI (pounds per square inch). Do not exceed 95 PSI.

4.2. Load Staples

1. Press the magazine release to open the magazine.
2. Insert a strip of 20 Gauge 1/2" Crown Fine Wire Collated Staples.
3. **Important Note on Staples:** The SENCO SFT10XP F stapler is specifically designed to accept 13mm wide staples. Staples narrower than 13mm may not feed correctly and can cause jams. Refer to SENCO brand staples such as F04BAAN, F05BAAP, F06BAA, F06BGA, F08BAAN, or other compatible 13mm wide staples.

4. Close the magazine until it latches securely. The unique one-handed magazine release allows for quick and easy reloading.

5. Operating Instructions

- Position the Tool:** Place the nose of the stapler firmly against the workpiece. The slender design and long 1-inch lip improve line of sight and allow access to tight spaces. The smooth aluminum bottom rail glides over fabric, preventing snagging.
- Fire Staples:** Depress the trigger to drive a staple. The tool features a short trigger stroke for efficient operation. Select automatic models can fire up to 30 fasteners per second.
- Rear Exhaust:** The rear exhaust system directs air and oil away from the work surface, maintaining a cleaner environment.

6. Maintenance

Regular maintenance ensures optimal performance and extends the life of your tool.

- Disconnect Air:** Always disconnect the air supply before performing any maintenance.
- Lubrication:** Apply a few drops of pneumatic tool oil into the air inlet daily or before each use.
- Cleaning:** Keep the tool clean and free of debris. Periodically clean the magazine and nose area to prevent staple jams.
- Inspection:** Regularly inspect the tool for any signs of wear or damage, especially the air fittings and seals. The robust all-metal motor and thread-in steel cap are designed for longevity, but seals may require occasional inspection.

7. Troubleshooting

Issue	Possible Cause	Solution
Stapler not firing or misfiring.	Low air pressure.	Check air compressor settings; ensure pressure is within 60-95 PSI.
	Empty magazine.	Reload staples.
	Jammed staples.	Disconnect air supply, open the bottom-load magazine, and carefully remove any jammed staples.
Staples not feeding correctly or jamming frequently.	Incorrect staple width.	Ensure you are using 13mm wide 20 Gauge 1/2" Crown Fine Wire Collated Staples. Narrower staples will not advance properly.
Air leaking from the tool.	Damaged O-rings or seals.	Disconnect air supply. Inspect air fittings and internal seals. Contact SENCO customer support for replacement parts or service if necessary.

8. Specifications

Feature	Detail
---------	--------

Feature	Detail
Manufacturer	SENUCO
Model Number	SFT10XP (6S0041N)
Item Weight	2.1 lbs
Height	6.57 inches
Length	8.58 inches
Power Source	Air Powered (Pneumatic)
Capacity	92-110 staples (Full Strip)
Fastener Range	3/16" - 5/8"
Crown Size	1/2"
Operating Pressure	60 - 95 PSI
Compatible Fastener	20 Gauge 1/2" Crown Fine Wire Collated Staple (13mm width)
Material	Alloy Steel
Included Components	Tool

9. Warranty and Support

9.1. Warranty Information

This SENUCO SFT10XP stapler is covered by a 5-Year Manufacturer's Warranty. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

9.2. Customer Support

For technical assistance, service, or to inquire about replacement parts, please contact SENUCO customer support. Visit the official SENUCO website for current contact information and service center locations.

Related Documents - SFT10XP 6S0041N

	<p><u>SFT10XP-Auto Automatic Fine Wire Stapler Parts Reference Guide</u></p> <p>This document provides a detailed parts reference guide for the SENUCO SFT10XP-Auto Automatic Fine Wire Stapler, including schematic diagrams and a comprehensive list of replacement parts with their corresponding part numbers and descriptions in English, Spanish, and French.</p>
--	---

 <p>SFT10XP-LN Long Nose Fine Wire Stapler Parts Reference Guide Guía de Referencia Pièces Guide de référence</p> <p>SECO</p> <p>CE</p> <p>INFO#1 - Revised April 20, 2010 (Replaces SFT10XP)</p> <p>© 2010 SENCO Industrial Tools, Inc. All rights reserved. SFT10XP is a registered trademark of SENCO Industrial Tools, Inc.</p>	<p><u>SECO SFT10XP-LN Long Nose Fine Wire Stapler Parts Reference</u></p> <p>This document provides a detailed parts reference guide for the SENCO SFT10XP-LN Long Nose Fine Wire Stapler, including part numbers, descriptions in English, Spanish, and French, and schematic diagrams.</p>
 <p>F-LXP Cordless Stapler Parts Reference Guide Guía de referencia Pièces Guide de référence</p> <p>SECO</p> <p>CE</p> <p>INFO#1 - Revised June 8, 2011</p> <p>© 2011 SENCO Industrial Tools, Inc. All rights reserved. F-LXP is a registered trademark of SENCO Industrial Tools, Inc.</p>	<p><u>SECO F-LXP Cordless Stapler Parts Reference Guide</u></p> <p>Comprehensive parts reference guide for the SENCO F-LXP Cordless Stapler, featuring detailed diagrams and part listings in English, Spanish, and French. Includes safety information and contact details.</p>
 <p>SLS25XP Medium Wire Stapler Parts Reference Guide Guía de referencia Pièces Guide de référence</p> <p>SECO</p> <p>CE</p> <p>INFO#1 - Revised April 27, 2011 (Replaces SLS25P)</p> <p>© 2011 SENCO Industrial Tools, Inc. All rights reserved. SLS25XP is a registered trademark of SENCO Industrial Tools, Inc.</p>	<p><u>SECO SLS25XP Medium Wire Stapler Parts Reference Guide</u></p> <p>Official parts reference guide for the SENCO SLS25XP Medium Wire Stapler, including exploded views, part numbers, and a comprehensive replacement parts list in English, Spanish, and French.</p>
 <p>SCP40XP Pneumatic Concrete Pinner Parts Reference Guide Guía de referencia Pièces Guide de référence</p> <p>SECO</p> <p>CE</p> <p>INFO#1 - Revised September 8, 2011 (Replaces SCP40P)</p> <p>© 2011 SENCO Industrial Tools, Inc. All rights reserved. SCP40XP is a registered trademark of SENCO Industrial Tools, Inc.</p>	<p><u>SECO SCP40XP Pneumatic Concrete Pinner Parts Reference Guide</u></p> <p>Detailed parts reference guide for the SENCO SCP40XP Pneumatic Concrete Pinner, including schematic diagrams and a comprehensive parts list with descriptions in English, Spanish, and French.</p>
 <p>F-35FRHXP Cordless Framing Nailer Parts Reference Guide Guía de referencia Pièces Guide de référence</p> <p>SECO</p> <p>CE</p> <p>INFO#1 - January 1, 2001 (Replaces SFT45)</p> <p>© 2001 SENCO Industrial Tools, Inc. All rights reserved. F-35FRHXP is a registered trademark of SENCO Industrial Tools, Inc.</p>	<p><u>SECO F-35FRHXP Cordless Framing Nailer Parts Reference Guide</u></p> <p>Comprehensive parts catalog and reference guide for the SENCO F-35FRHXP Cordless Framing Nailer. Features detailed part breakdowns, assembly diagrams, and part numbers for easy identification and maintenance.</p>