Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Transcend /
- Transcend 32GB microSDHC Memory Card with SD Adapter User Manual for Panasonic HX-A100 Camcorder

Transcend HX-A100-SDC4/32GB

Transcend 32GB microSDHC Memory Card with SD Adapter User Manual

Model: HX-A100-SDC4/32GB

INTRODUCTION

This manual provides essential instructions for the proper use and care of your Transcend 32GB microSDHC Memory Card with SD Adapter. Please read this guide thoroughly to ensure optimal performance and longevity of your product. This memory card is designed for reliable data storage in compatible electronic devices, such as the Panasonic HX-A100 Camcorder.

PRODUCT OVERVIEW

The Transcend 32GB microSDHC Memory Card is a high-capacity storage solution, ideal for devices such as cameras and camcorders. It comes with an SD adapter for broader compatibility.

Key Features:

- Capacity: 32GB for extensive data storage.
- Type: microSDHC (Secure Digital High Capacity).
- Speed Class: Class 4, suitable for standard definition video recording and general data storage.
- **Durability:** Features a waterproof design for enhanced protection.
- Compatibility: Includes an SD adapter for use with devices that accept standard SD cards.

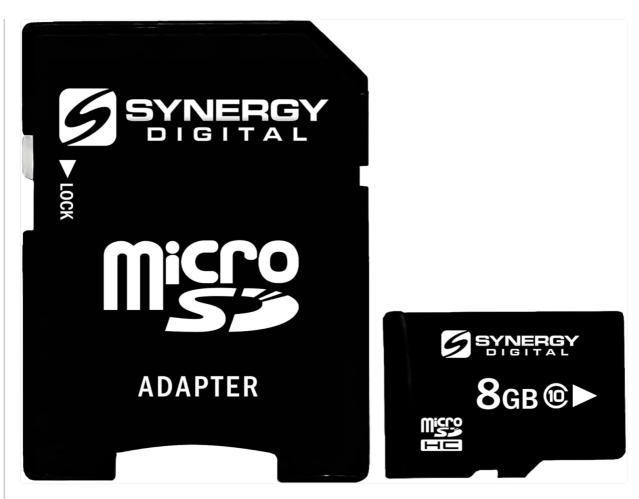


Image: The Transcend 32GB microSDHC memory card shown alongside its included SD adapter. The microSDHC card is small, black, and labeled with its capacity and type. The larger black SD adapter has a slot for the microSDHC card and a lock switch on the side.

SETUP

Inserting the microSDHC Card:

- 1. **Locate the Card Slot:** Identify the microSDHC card slot on your compatible device (e.g., camera, camcorder, smartphone). Refer to your device's manual for exact location.
- 2. **Orient the Card:** Hold the microSDHC card with the gold contacts facing down (or as indicated by your device) and the notched corner aligned with the slot.
- 3. Insert the Card: Gently push the card into the slot until it clicks into place. Do not force the card.
- 4. **Verify Recognition:** Turn on your device and check if the memory card is recognized. Some devices may display a memory card icon or capacity information.

Using the SD Adapter:

- 1. **Insert microSDHC into Adapter:** Slide the Transcend microSDHC card into the designated slot on the side of the SD adapter until it clicks.
- 2. **Unlock the Adapter (if necessary):** Ensure the lock switch on the side of the SD adapter is in the "unlocked" position (usually towards the top) to allow writing to the card.
- 3. **Insert SD Adapter:** Insert the SD adapter (with the microSDHC card inside) into the standard SD card slot of your device (e.g., laptop, DSLR camera, card reader).
- 4. Verify Recognition: Confirm that your device recognizes the memory card via the adapter.

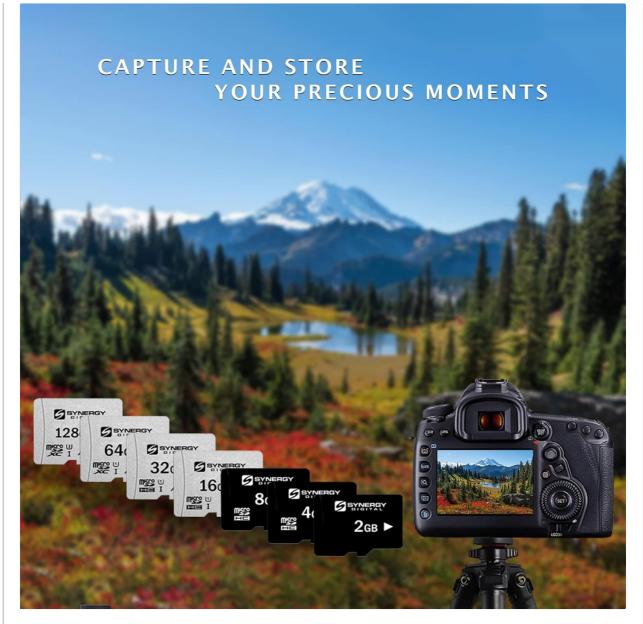


Image: A close-up view of a Transcend microSDHC card being inserted into its larger SD adapter. The small microSDHC card is partially slid into the adapter's slot, demonstrating the correct orientation for assembly.

OPERATING

Recording and Storing Data:

- **Device Compatibility:** Ensure your device is compatible with microSDHC cards and supports the 32GB capacity.
- **Formatting:** For first-time use or if experiencing issues, it is recommended to format the card using your device's internal formatting function. This prepares the card for optimal performance with that specific device. **Warning:** Formatting will erase all data on the card.
- **Data Transfer:** When transferring files to or from a computer, use a compatible card reader or your device's connection interface. Avoid disconnecting the card or device during data transfer to prevent data corruption.
- Safe Removal: Always safely eject the memory card from your computer or device before physically removing it to prevent data loss or corruption.



Image: A Transcend microSDHC card is shown partially inserted into a device, likely a digital camera or camcorder, indicating its use for capturing and storing media.

MAINTENANCE

- **Physical Protection:** Store the memory card in its protective case or a secure location when not in use to prevent physical damage, dust, and static electricity.
- **Data Backup:** Regularly back up important data from your memory card to another storage device (e.g., computer hard drive, cloud storage) to prevent permanent data loss.
- Avoid Extreme Conditions: Do not expose the card to extreme temperatures, direct sunlight, strong magnetic fields, or excessive moisture, despite its waterproof feature.
- **Cleaning:** If necessary, gently clean the gold contacts with a soft, lint-free cloth. Avoid using harsh chemicals or abrasive materials.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Card not recognized by device.	Ensure the card is fully and correctly inserted. If using the SD adapter, check that the lock switch is in the "unlocked" position. Verify device compatibility with microSDHC cards and 32GB capacity. Try the card in another compatible device or card reader to rule out device issues.
Cannot write or delete files.	If using the SD adapter, ensure the lock switch is in the "unlocked" position. Check if the card is full. Delete unnecessary files or transfer them to another storage device. The card might be write-protected by the device settings. Refer to your device's manual.
Slow data transfer speeds.	Ensure your card reader or device's USB port supports high-speed data transfer. Avoid running multiple applications during data transfer. The card's speed class (Class 4) indicates a minimum write speed. Performance may vary based on the host device.

SPECIFICATIONS

Feature	Detail
Brand	Transcend
Model Number	HX-A100-SDC4/32GB
Memory Type	microSDHC
Storage Capacity	32 GB
Speed Class	Class 4
Hardware Interface	microSDHC
Special Feature	Water Proof
Compatible Devices	Camera (and other microSDHC compatible devices)
Product Dimensions	3.94 x 1.97 x 0.39 inches (packaging/adapter)
Item Weight	0.33 Pounds / 5.3 ounces (packaging/item)
UPC	023005757229

WARRANTY AND SUPPORT

Transcend memory cards are designed for reliability. For specific warranty information, including terms and conditions, please refer to the official Transcend website or the documentation included with your purchase. In case of technical issues or inquiries, please contact Transcend customer support. You may also consider purchasing additional data recovery plans for enhanced protection of your stored data. Details on such plans can often be found where the product was purchased.

- Manufacturer Website: For the latest support information, drivers, and warranty details, visit the official Transcend website.
- Customer Service: Contact Transcend customer service for technical assistance.

© 2023 Transcend. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - HX-A100-SDC4/32GB

