

Trevi ASP404

Trevi ASP404 Portable Rechargeable Vacuum Cleaner for Solids and Liquids User Manual

Model: ASP40400

1. INTRODUCTION

Thank you for purchasing the Trevi ASP404 Portable Rechargeable Vacuum Cleaner. This device is designed for convenient cleaning of both solid debris and small liquid spills in various environments. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance. Keep this manual for future reference.

- Do not use the vacuum cleaner outdoors or on wet surfaces if not specifically designed for it. This model is designed for wet and dry use, but avoid immersing the main unit in water.
- Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use without filter in place.
- Turn off all controls before unplugging.
- Disconnect the charger from the outlet before cleaning or performing any maintenance.
- Store the vacuum cleaner indoors. Put away after use to prevent accidents.
- Use only the charger supplied by the manufacturer to recharge.
- Do not incinerate the appliance even if it is severely damaged. Batteries can explode in a fire.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and in good condition. If any items are missing or damaged, contact your retailer.



Image 1: All components of the Trevi ASP404 portable vacuum cleaner, including the main unit, charging base, power adapter, transparent dust collector, filter, crevice tool, and brush attachment.

- Trevi ASP404 Main Vacuum Unit
- Transparent Dust Collector / Liquid Reservoir
- Washable Filter
- Charging Base
- Power Adapter
- Crevice Tool
- Brush Attachment
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the different parts of your Trevi ASP404 vacuum cleaner.



Image 2: The main unit of the Trevi ASP404 portable vacuum cleaner, showing the handle, power switch, and transparent dust collector with the MAX fill line visible.

- 1. Nozzle/Suction Inlet:** Where debris and liquids are drawn into the vacuum.
- 2. Transparent Dust Collector/Liquid Reservoir:** Collects dust, debris, and liquids. Features a 'MAX' fill line for liquids.
- 3. Filter Housing:** Contains the washable filter.
- 4. Power Switch:** Turns the vacuum cleaner ON and OFF.
- 5. Handle:** For comfortable grip and operation.
- 6. Charging Port:** Located at the bottom or rear, connects to the charging base.

5. SETUP AND INITIAL CHARGING

Before using your Trevi ASP404 for the first time, it is recommended to fully charge the battery.

- 1. Assemble the Charging Base:** Connect the power adapter to the charging base, then plug the adapter into a standard wall outlet.
- 2. Place Vacuum on Base:** Position the vacuum cleaner onto the charging base, ensuring the charging contacts align. A charging indicator light (if present) should illuminate, indicating that the unit is charging.
- 3. Initial Charge:** Allow the vacuum cleaner to charge for approximately 12-16 hours before its first use. This helps to condition the Nickel-Metal Hydride (NiMH) battery for optimal performance and lifespan.
- 4. Attach Accessories:** Select the appropriate attachment (crevice tool or brush attachment) for your cleaning task and firmly push it onto the suction inlet.

Note: The vacuum cleaner will not operate while charging.

6. OPERATING INSTRUCTIONS

6.1. Turning On/Off

- To turn on the vacuum cleaner, slide the power switch to the "ON" position.
- To turn off the vacuum cleaner, slide the power switch to the "OFF" position.

6.2. Cleaning Solids

- Ensure the filter is clean and properly installed.
- Select the appropriate attachment (e.g., brush for upholstery, crevice tool for tight spaces).
- Turn on the vacuum cleaner and move the nozzle over the area to be cleaned.
- For best results, hold the nozzle close to the surface.
- Do not overfill the dust collector. Empty it regularly as described in the Maintenance section.

6.3. Cleaning Liquids

- Ensure the filter is clean and properly installed.
- Do not use attachments when vacuuming liquids, unless specifically designed for wet pickup.
- Turn on the vacuum cleaner and slowly move the nozzle over the liquid spill.
- Do not exceed the 'MAX' fill line indicated on the transparent reservoir. Overfilling can damage the motor.
- Immediately after picking up liquids, turn off the vacuum, empty the reservoir, and clean the filter to prevent odors and mold growth.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

7.1. Emptying the Dust Collector / Liquid Reservoir

1. Ensure the vacuum cleaner is turned off.
2. Locate the release button or latch for the dust collector (usually near the nozzle). Press or slide it to detach the transparent dust collector from the main unit.
3. Carefully remove the filter from the dust collector.
4. Empty the collected solids or pour out the liquids into a suitable receptacle.
5. Rinse the dust collector with water if necessary, especially after vacuuming liquids. Ensure it is completely dry before reassembling.

7.2. Cleaning the Filter

The filter should be cleaned after each use, especially after vacuuming fine dust or liquids, to maintain suction power.

1. After removing the dust collector, gently tap the filter over a waste bin to dislodge loose debris.
2. If heavily soiled, rinse the filter under running water. Do not use detergents or hot water.
3. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum cleaner. Using a wet filter can damage the motor.
4. Replace the filter if it becomes torn or permanently clogged.

7.3. General Cleaning and Storage

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Store the vacuum cleaner and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures.
- Ensure the vacuum is fully charged before storing for extended periods to prolong battery life.

8. TROUBLESHOOTING

If you encounter problems with your Trevi ASP404, refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is discharged. Power switch is in "OFF" position.	Charge the battery fully. Slide the power switch to "ON".
Low suction power.	Dust collector is full. Filter is clogged. Nozzle or hose is blocked.	Empty the dust collector. Clean or replace the filter. Check and clear any blockages in the nozzle or attachments.
Vacuum cleaner is not charging.	Power adapter not properly connected. Charging contacts are dirty. Faulty power outlet.	Ensure the power adapter is securely plugged into the wall and the charging base. Clean the charging contacts on both the vacuum and the base with a dry cloth. Try a different power outlet.
Water leaks from the vacuum.	Liquid reservoir is overfilled. Dust collector not properly sealed.	Do not exceed the 'MAX' fill line. Empty the reservoir. Ensure the dust collector is securely attached and sealed to the main unit.

9. SPECIFICATIONS

- **Model:** ASP40400
- **Brand:** Trevi
- **Product Dimensions:** 37 x 11 x 12 cm
- **Weight:** Approximately 898 grams
- **Form Factor:** Portable
- **Battery Type:** Nickel-Metal Hydride (NiMH)
- **Power Source:** Battery Powered
- **Filter Type:** Cartridge
- **Special Feature:** Portable, Wet & Dry Functionality

10. WARRANTY AND SUPPORT

Trevi products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact your local retailer. For technical support or service inquiries, please visit the official Trevi website or contact their customer service department. Keep your proof of purchase for warranty claims.

Related Documents - ASP404

