

Maxell 191112

Maxell 2.4 GHz Slim Wireless Keyboard

MODEL: 191112 - USER MANUAL

Introduction

Thank you for choosing the Maxell 2.4 GHz Slim Wireless Keyboard. This manual provides essential information for setting up, operating, and maintaining your keyboard. Please read these instructions carefully before use.

Product Overview



This image displays the Maxell 2.4 GHz Slim Wireless Keyboard. It features a full QWERTY layout on the left and a dedicated numeric keypad on the right. The keyboard is black with white key legends. Key functions like 'Shift', 'Ctrl', 'Enter', 'Backspace', 'Delete', 'Home', 'End', 'Page Up', 'Page Down', and 'Num Lock' are visible.

The Maxell 2.4 GHz Slim Wireless Keyboard offers reliable wireless connectivity up to 32 feet (approximately 10 meters) without interference. Its slim design and dedicated numeric keypad enhance usability. A built-in battery indicator alerts you when the batteries are low.

Setup Instructions

1. **Install Batteries:**

Locate the battery compartment on the underside of the keyboard. Open the cover and insert two (2) AAA batteries, ensuring correct polarity (+/-). Close the battery compartment cover securely.

2. **Connect the USB Receiver:**

Locate the small USB wireless receiver, typically stored within the battery compartment or packaged separately. Plug the USB receiver into an available USB port on your computer. Your computer should automatically detect and install the necessary drivers.

3. **Power On:**

There may be a power switch on the keyboard. If present, slide it to the 'ON' position. The keyboard should now be ready for use.

Operating the Keyboard

- **Wireless Connection:** The keyboard operates on a 2.4 GHz wireless frequency, providing a stable connection up to 32 feet (10 meters) from the USB receiver.
- **Compatibility:** This keyboard is compatible with PCs running Windows 2000, Windows XP, Windows Vista, and Windows 7 operating systems.
- **Battery Indicator:** A low battery indicator light will illuminate or flash when the keyboard batteries are running low, signaling that replacement is needed soon.
- **Numeric Keypad:** Utilize the dedicated numeric keypad for efficient data entry. Ensure 'Num Lock' is active if numbers are not registering.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the keyboard surface. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the keyboard. Avoid harsh chemicals or abrasive cleaners.
- **Battery Replacement:** When the low battery indicator appears, replace both AAA batteries with new ones to ensure optimal performance.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage. Store the keyboard in a cool, dry place.

Troubleshooting

Problem	Solution
Keyboard not responding	<ul style="list-style-type: none">• Ensure batteries are correctly installed and not depleted. Replace if necessary.• Verify the USB receiver is securely plugged into a working USB port on your computer.• Move the keyboard closer to the USB receiver to rule out range issues.• Try plugging the USB receiver into a different USB port.• Restart your computer.

Problem	Solution
Keys are sticky or unresponsive	<ul style="list-style-type: none">• Clean around the affected keys with a soft brush or compressed air to remove debris.• Ensure the keyboard is dry and free from liquid spills.
Low battery indicator is on	Replace both AAA batteries with new ones.

Specifications

- **Model:** 191112
- **Brand:** Maxell
- **Connectivity:** 2.4 GHz Wireless
- **Operating System Compatibility:** Windows 2000, Windows XP, Windows Vista, Windows 7
- **Power Source:** 2 x AAA Batteries (included)
- **Color:** Black
- **Material:** Plastic
- **Dimensions:** Approximately 40.64 x 12.7 x 2.54 cm (16 x 5 x 1 inches)
- **Weight:** Approximately 508.02 g (1.12 lbs)
- **Included Components:** Keyboard, Batteries, USB Receiver

Warranty and Support

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official Maxell website. Keep your proof of purchase for warranty claims.