

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Escali](#) /

› **Escali Arti Glass Food Scale Digital Countertop Kitchen, Baking and Cooking Scale with Nutrition and Calorie Counter, 15-Pound Capacity, 9" x 6.5" x .75", Shiny Silver User Manual**

Escali 157

Escali Arti Glass Food Scale Instruction Manual

Model: 157 | Brand: Escali

PRODUCT OVERVIEW

The Escali Arti Glass Food Scale is a versatile digital kitchen scale designed for accurate measurement of both liquid and dry ingredients. Its sleek design, touch-sensitive controls, and large display make it an essential tool for baking, cooking, and portion control. The scale is capable of weighing up to 15 pounds (7 kg) with precise 0.1 ounce (1 gram) increments.

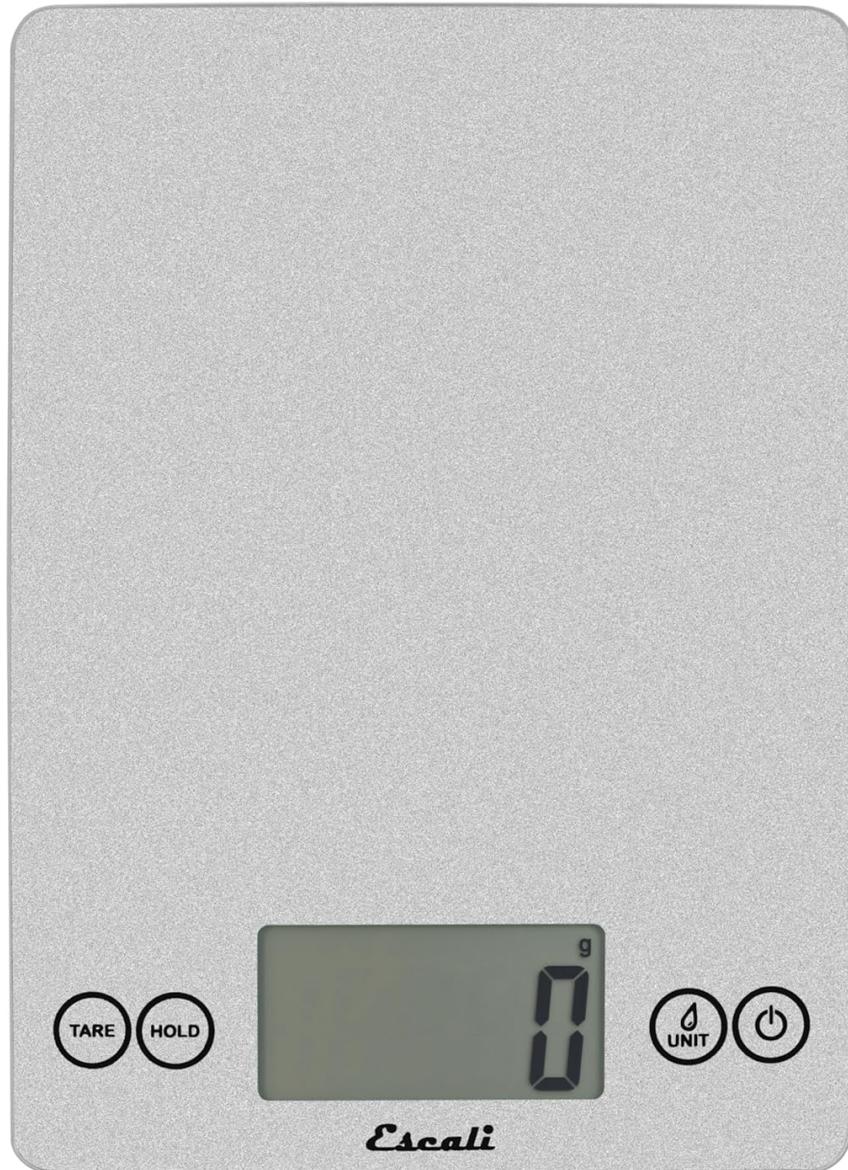


Figure 1: Escali Arti Glass Food Scale, Shiny Silver

WHAT'S IN THE Box

- Escali Arti Glass Food Scale
- 2 x CR2032 Lithium Metal Batteries (pre-installed or included separately)
- Owner's Manual
- Warranty Information

SETUP

Battery Installation

The scale requires two CR2032 lithium metal batteries. These are typically included and may be pre-installed. If not, or if replacing, locate the battery compartment on the underside of the scale. Open the compartment, insert the batteries according to the polarity indicators, and close the compartment securely.



Figure 2: Battery compartment on the underside of the scale.

OPERATING INSTRUCTIONS

Power On/Off

To turn the scale on, gently tap the **Power Control** button (rightmost button with a circle and vertical line). The display will illuminate. To turn the scale off, tap and hold the **Power Control** button for a few seconds until the display turns off. The scale also features an automatic shut-off after five minutes of inactivity to conserve battery life.

Unit Conversion

To change the unit of measurement, tap the **Unit Control** button (button with a droplet and 'UNIT'). The scale

cycles through available units: ounces (oz), pounds + ounces (lb:oz), grams (g), fluid ounces (fl oz), and milliliters (ml).

Tare Feature

The Tare feature allows you to reset the scale to zero weight, enabling you to measure multiple items consecutively or subtract the weight of a container. Place an empty container on the scale, then tap the **TARE** button (leftmost button). The display will reset to zero, and you can then add your ingredients to the container.

Display Hold

The Display Hold function is useful when weighing large items that might obscure the display. Place the item on the scale, then tap the **HOLD** button (middle button). The measurement will be locked on the display even after the item is removed from the scale.

Display Hold
Measurements
stay on display
after removing
oversized items
from the platform.

Tare Feature
Clear the weight
of a plate or bowl
to measure the
contents inside.


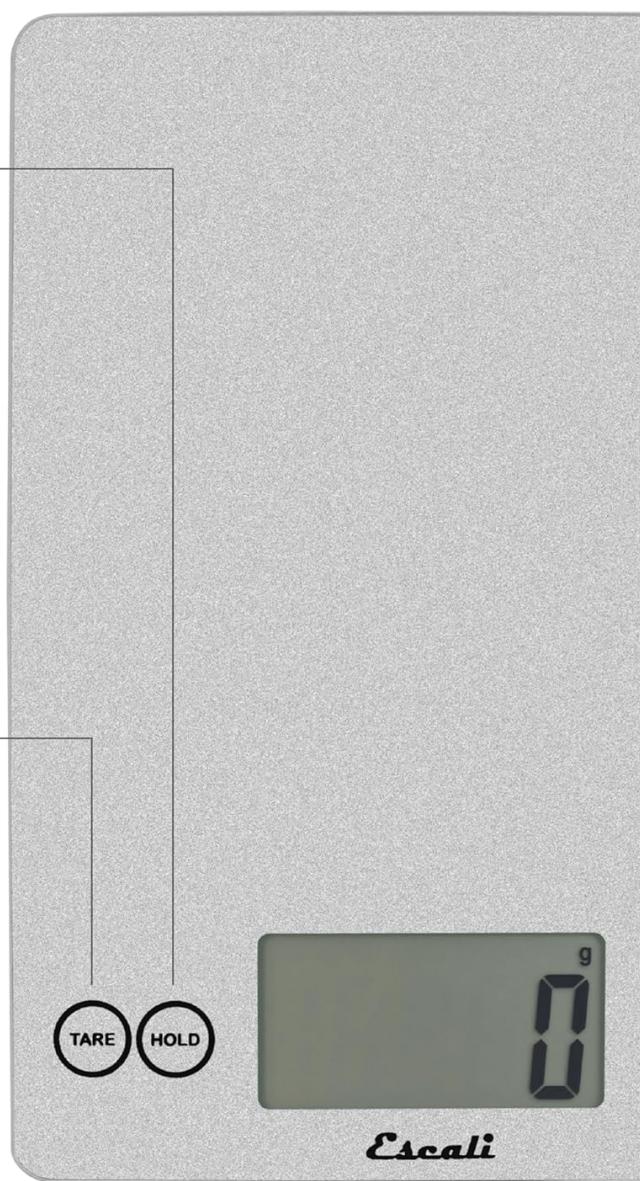


Figure 3: Tare and Hold functions for precise measurements.

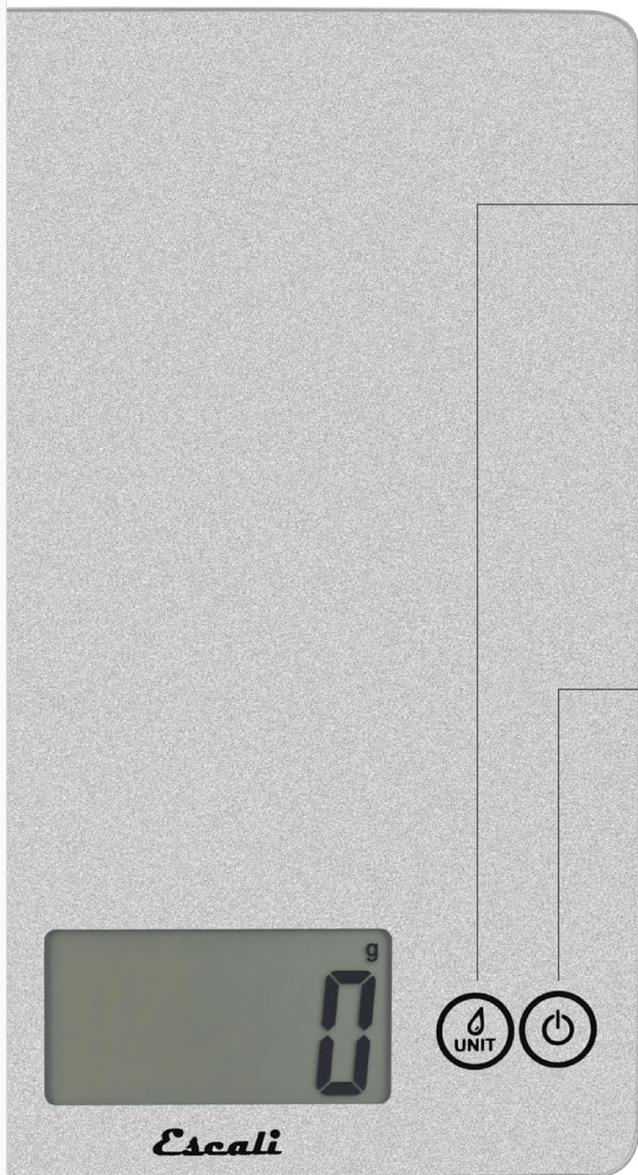

Unit Control

Tap this button to change units of measure: oz, lb:oz, g, fl oz, ml

Power Control

Tap this button to turn on the scale. Tap and hold this button to turn it off.

Figure 4: Unit and Power controls for easy operation.



Figure 5: Accurate weighing of dry ingredients.



Figure 6: Measuring both liquid and dry ingredients.

Official Product Video

Your browser does not support the video tag.

Video 1: An overview of the Escali 157 Arti Glass Kitchen Scale, demonstrating its features and ease of use.

MAINTENANCE

Cleaning

The Escali Arti Glass Food Scale features a single, smooth glass surface that is easy to wipe clean. Use a soft, damp cloth with mild soap if necessary. Avoid abrasive cleaners or submerging the scale in water.

TROUBLESHOOTING

Common Issues and Solutions

- Display not turning on:** Check if batteries are correctly installed and have sufficient charge. Replace batteries if needed.
- Inaccurate readings:** Ensure the scale is placed on a flat, stable surface. Avoid placing items that exceed the maximum weight capacity (15 lbs / 7 kg). Recalibrate by turning off and on, or by performing a tare operation.
- Display showing 'Lo':** Indicates low battery. Replace the CR2032 batteries.
- Display showing 'Err':** Indicates overload. Remove items immediately to prevent damage to the scale.

SPECIFICATIONS

Feature	Detail
Model Number	157
Capacity	15 lbs (7 kg)
Accuracy	0.1 oz (1 g)
Units of Measure	g, oz, lb + oz, fl oz, ml
Display Type	LCD
Controls	Touch-sensitive
Power Source	2 x CR2032 Lithium Metal Batteries (included)
Automatic Shut-off	Yes (after 5 minutes of inactivity)
Product Dimensions	9.06 x 6.3 x 0.79 inches
Product Weight	1.18 Pounds
Color	Shiny Silver

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the included Warranty Information document in your product packaging. You may also visit the official Escali website or contact their customer service directly for assistance.

A digital version of the user manual is available at: [Escali Arti Glass Food Scale User Manual \(PDF\)](#)

