

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Amazon](#) /
- › [Amazon Kindle Fire \(1st Generation\) User Manual](#)

Amazon Kindle Fire (1st Generation)

Amazon Kindle Fire (1st Generation) User Manual

Model: Kindle Fire (1st Generation)

INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your Amazon Kindle Fire (1st Generation) device. Please read this guide thoroughly to ensure proper use and to maximize your device's functionality.

DEVICE OVERVIEW



Figure 1: Front view of the Kindle Fire (1st Generation) with the screen displaying content tiles for books and applications. This image shows the device's primary interface.



Figure 2: Back view of the Kindle Fire (1st Generation), featuring the embossed "Kindle" logo and "amazon" branding

at the bottom. This illustrates the device's rear casing.

The Kindle Fire (1st Generation) is a multimedia tablet designed for reading, web browsing, and consuming digital content. It features a 7-inch color touchscreen display.

SETUP

1. Initial Charge

Before first use, fully charge your Kindle Fire. Connect the included power adapter to the device's charging port and then to a power outlet. The charging indicator light will illuminate.

2. Power On/Off

- To power on: Press and hold the power button located on the bottom edge of the device until the Amazon logo appears.
- To power off: Press and hold the power button until a "Shut Down" prompt appears on the screen. Tap "Shut Down" to confirm.
- To put to sleep: Briefly press the power button. Press it again to wake the device.

3. Wi-Fi Connection

1. From the Home screen, tap the **Quick Settings** icon (gear icon) at the top right.
2. Tap **Wi-Fi**.
3. Select your desired Wi-Fi network from the list.
4. If prompted, enter the network password and tap **Connect**.

4. Amazon Account Registration

Your Kindle Fire must be registered to an Amazon account to access content and services. Follow the on-screen prompts during initial setup to register your device. If already registered, your content will automatically sync.

OPERATING INSTRUCTIONS

1. Navigation

- **Touchscreen:** Interact with the device by tapping, swiping, and pinching on the screen.
- **Home Screen:** Displays recently accessed content and provides quick access to your content libraries (Books, Newsstand, Music, Video, Apps, Web).
- **Back Button:** Located at the bottom of the screen, returns to the previous screen or menu.
- **Search:** Use the search bar at the top of the Home screen to find content on your device or in the Amazon store.

2. Content Libraries

Your Kindle Fire organizes content into distinct libraries:

- **Books:** Access your Kindle e-books. Tap a book cover to open it.
- **Newsstand:** Read magazines and newspapers.
- **Music:** Play music from your Amazon Music library or uploaded files.

- **Video:** Stream or download movies and TV shows from Amazon Video.
- **Apps:** Launch installed applications.
- **Web:** Open the Silk web browser.

3. Reading Experience

When reading a book, tap the center of the screen to bring up reading options, including font size, line spacing, and background color. Swipe left or right to turn pages.

4. App Installation

To install new applications, tap the "Apps" tab on the Home screen, then tap "Store" to browse and download apps from the Amazon Appstore.

5. Volume Control

Volume buttons are located on the side of the device. Press the top button to increase volume and the bottom button to decrease volume.

MAINTENANCE

1. Cleaning

Use a soft, lint-free cloth to clean the screen and exterior of your Kindle Fire. Do not use abrasive cleaners or solvents. Avoid getting moisture into openings.

2. Battery Care

- Avoid exposing the device to extreme temperatures.
- For optimal battery life, avoid fully discharging the battery frequently.
- Use only the charger provided or a compatible Amazon-approved charger.

3. Software Updates

Your Kindle Fire periodically checks for software updates. Ensure your device is connected to Wi-Fi to receive and install updates, which improve performance and add features.

4. Storage Management

To manage storage, go to **Settings > Device > Storage**. You can view available space and uninstall apps or delete content to free up space.

TROUBLESHOOTING

1. Common Issues

- **Device not responding:** Try restarting the device (see below).
- **Wi-Fi connection issues:** Verify your Wi-Fi password, restart your router, or try connecting to a different network.
- **Apps crashing or freezing:** Close and reopen the app. If the issue persists, try uninstalling and reinstalling the app.
- **Screen not rotating:** Check if screen rotation lock is enabled in Quick Settings.

2. Restarting the Device

If your Kindle Fire is unresponsive, press and hold the power button for 20-30 seconds until the device powers off completely. Then, press the power button again to restart it.

3. Factory Reset

A factory reset will erase all data and settings from your device and restore it to its original factory state. This should be used as a last resort for persistent issues. To perform a factory reset, go to **Settings > Device > Reset to Factory Defaults**.

SPECIFICATIONS

Feature	Detail
Display	7-inch multi-touch display with IPS technology, 1024 x 600 resolution at 169 ppi
Processor	Dual-core 1 GHz OMAP4 processor
Storage	8 GB internal (approximately 6 GB available for user content)
RAM	512 MB
Connectivity	Wi-Fi (802.11b/g/n), USB 2.0 (Micro-B connector)
Audio	3.5 mm stereo jack, integrated stereo speakers
Battery Life	Up to 8 hours of continuous reading or 7.5 hours of video playback
Dimensions	7.5" x 4.7" x 0.45" (190 mm x 120 mm x 11.4 mm)
Weight	14.6 ounces (413 grams)

WARRANTY AND SUPPORT

For information regarding your device's warranty, please refer to the warranty documentation included with your purchase or visit the official Amazon support website. For technical assistance, troubleshooting beyond this manual, or to contact customer service, please visit [Amazon Device Support](#).