



Manuals.plus /

- › Epilady /
- › Epilady Speed Corded Epilator EP-810-44 User Manual

Epilady EP-810-44

Epilady Speed Corded Epilator EP-810-44 User Manual

Model: EP-810-44

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Epilady Speed Corded Epilator. Please read this manual thoroughly before first use and retain it for future reference. The Epilady Speed is designed for efficient hair removal, offering smooth skin for several weeks.



Image: The Epilady Speed Corded Epilator, a compact hair removal device, shown with its accompanying cleaning brush.



REMOVE HAIR FROM THE ROOT

ANTI-PINCH

SMOOTH LEGS

ALL BODY PARTS



Image: An illustration highlighting the Epilady Speed's compact dimensions and its function of removing hair from the root for smooth skin on various body areas.



REQUIRES A
POWER CORD
TO OPERATE



**TRAVEL FRIENDLY
COMPACT SIZE**

Image: The Epilady Speed Epilator being placed into a small pouch, demonstrating its compact size suitable for travel.

IMPORTANT SAFETY INFORMATION

- Read all instructions before using the appliance.
- This appliance is for external use only. Do not use on irritated skin, open wounds, or areas with skin conditions.
- Keep the appliance away from water. Do not use it in the shower or bath.
- Ensure your hands are dry when plugging in or unplugging the device.
- Do not use the epilator on eyebrows or eyelashes.
- Keep out of reach of children.
- Unplug the appliance when not in use and before cleaning.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or

instruction concerning use of the appliance by a person responsible for their safety.

PACKAGE CONTENTS

Please check the package for the following items:

- Epilady Speed Corded Epilator
- Power Cord
- Cleaning Brush
- Angled-Trimming Guide



Image: Contents of the Epilady Speed Epilator package, showing the epilator, its power cord, and a small cleaning brush.

PRODUCT FEATURES AND COMPONENTS

The Epilady Speed Corded Epilator is designed for effective and convenient hair removal. Key features include:

- **Corded Operation:** Ensures consistent power without the need for battery charging.
- **Dual Speed Settings:** Two operating speeds for personalized comfort and efficiency. Level 1 is for sensitive areas, and Level 2 is for larger body areas.
- **High-Performance Epilation Head:** Equipped with 40 tweezing roller discs that deliver approximately 31,000 tweezes per minute for thorough hair removal.
- **Angled-Trimming Guide:** Assists in maintaining optimal positioning for efficient hair removal.
- **Compact and Portable Design:** Easy to handle and suitable for travel.
- **Anti-Pinch and Water-Resistant Design:** Enhances safety during use (splash-proof, not for immersion).
- **Anti-Slip Grip:** Provides a secure hold for stable operation.

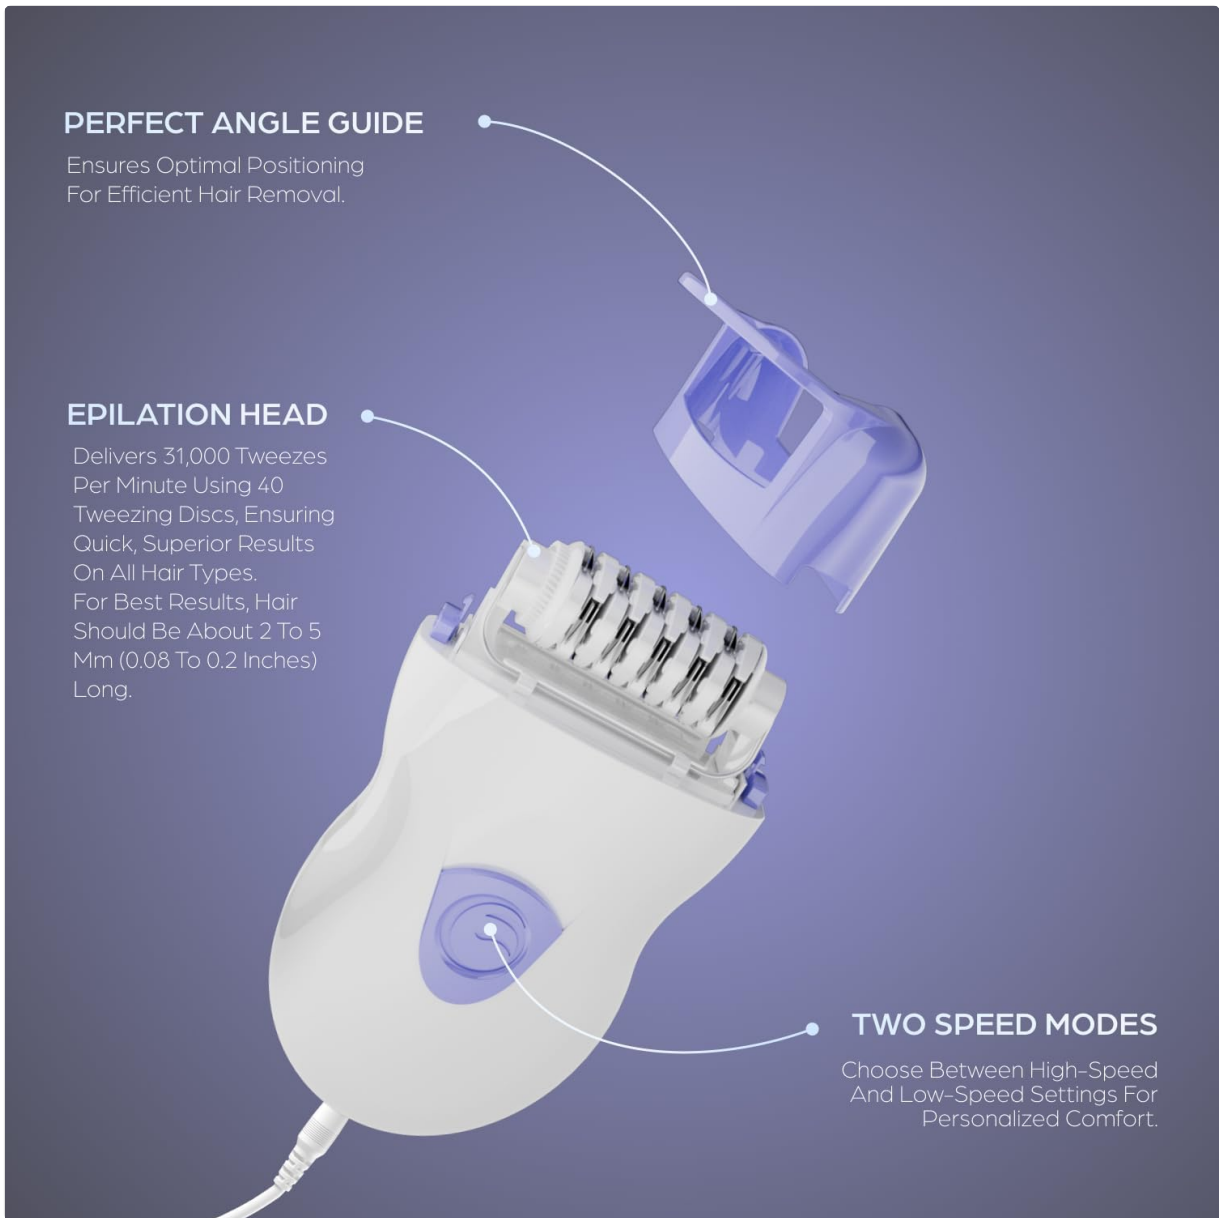 


Image: Detailed view of the epilator head, showing the tweezing discs, the removable angle guide, and the two-speed selector switch.



Image: Diagram explaining the two speed settings: Level 1 for gentle skin and sensitive areas, and Level 2 for larger areas like legs, arms, and armpits.

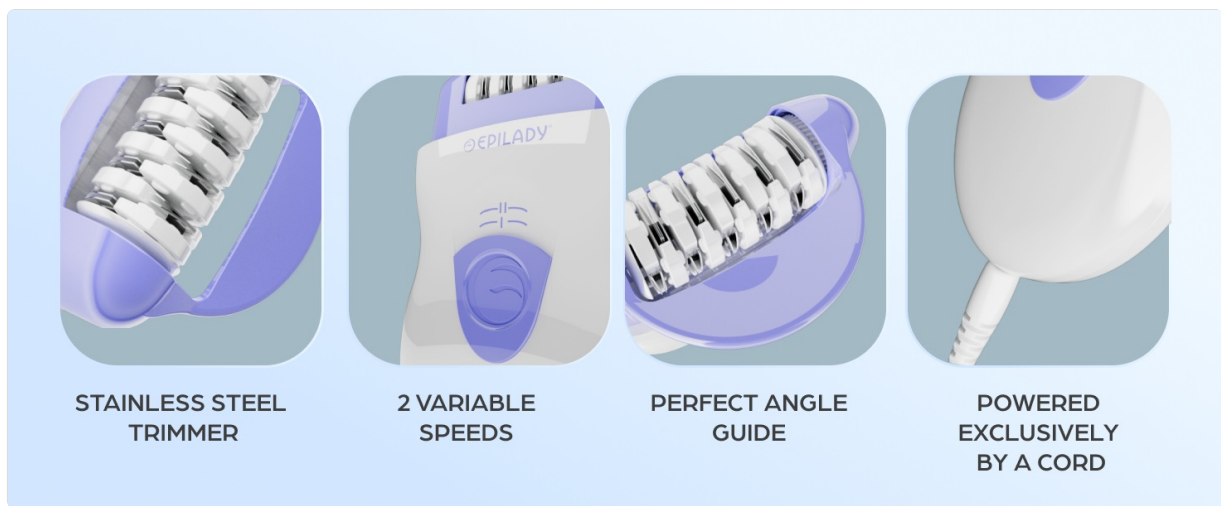


Image: Icons depicting key features: stainless steel trimmer, two variable speeds, a perfect angle guide, and corded power operation.

SETUP

- 1. Prepare Skin:** For best results, ensure your skin is clean and dry. Hair should be between 2–5 mm (0.08"–0.2") long.
- 2. Connect Power:** Plug the power cord into the epilator and then into a suitable electrical outlet. The device is corded and requires continuous power during operation.
- 3. Attach Guide (Optional):** If desired, attach the angled-trimming guide to the epilator head for assistance with optimal positioning.



Image: Illustration of the epilator with its power cord and angle guide, emphasizing the corded operation and the epilation speed.

OPERATING INSTRUCTIONS

- 1. Turn On:** Slide the power switch to select your desired speed setting.
 - **Level 1:** For sensitive areas or initial use (e.g., face, bikini area).
 - **Level 2:** For larger body areas (e.g., arms, legs, underarms).
- 2. Positioning:** Hold the epilator at a 90-degree angle against the skin, moving it slowly against the direction of hair growth.

3. **Epilation:** Gently glide the epilator over the skin. Do not press too hard. The device will remove hair from the root.
4. **Target Areas:** Suitable for legs, underarms, bikini area, and face (avoiding eyebrows).
5. **Post-Epilation:** After epilation, your skin may appear slightly red. This is normal and should subside quickly. Apply a soothing lotion if desired.



Image: Demonstrates holding the epilator at a 90-degree angle against the skin for effective hair removal, highlighting the anti-slip grip.

REMOVE HAIR FROM THE ROOT

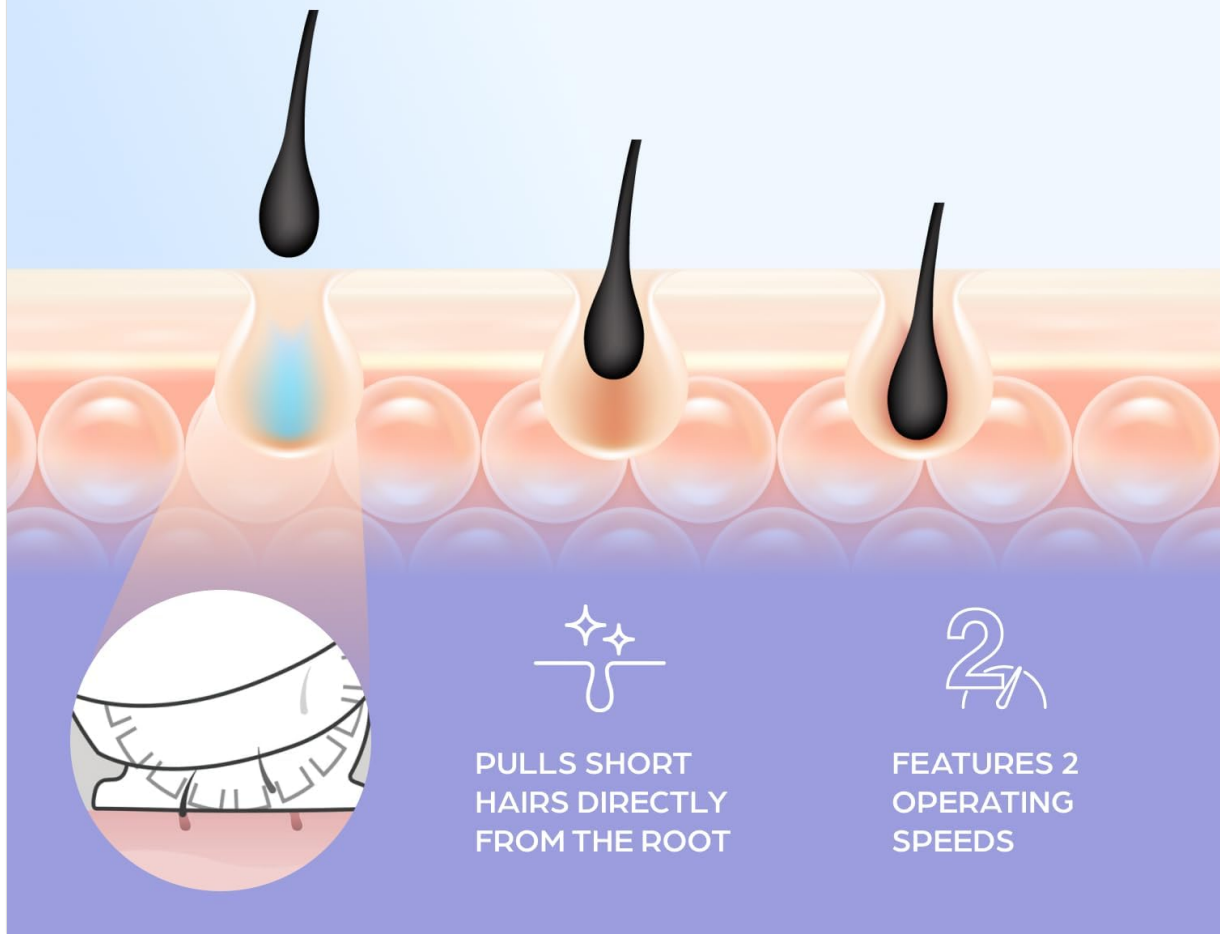


Image: Illustrates the epilation process at a microscopic level, showing how the device pulls short hairs directly from the root, and reiterates the two operating speeds.

MAINTENANCE AND CLEANING

1. **Unplug:** Always unplug the epilator from the power outlet before cleaning.
2. **Clean Epilation Head:** Use the provided cleaning brush to remove any trapped hairs from the tweezing discs. Brush gently to ensure all hair is dislodged.
3. **Wipe Body:** Wipe the body of the epilator with a dry or slightly damp cloth. Do not use abrasive cleaners or immerse the device in water.
4. **Storage:** Store the epilator in a dry place, away from direct sunlight and moisture, when not in use.

TROUBLESHOOTING

Device does not turn on:

Ensure the power cord is securely plugged into both the epilator and a working electrical outlet. Check if the outlet is functional by plugging in another appliance.

Hair is not being removed effectively:

- Ensure hair length is optimal (2–5 mm). If hair is too long, trim it first.
- Hold the epilator at a 90-degree angle against the skin.
- Move the epilator slowly against the direction of hair growth.
- Clean the epilation head thoroughly, as trapped hairs can reduce efficiency.

Discomfort during use:

- Initial use may cause some discomfort. Your skin will adapt over time.
- Use the lower speed setting (Level 1) for sensitive areas or if you are new to epilation.
- Ensure skin is taut during epilation.
- Consider epilating after a warm bath or shower when pores are open.

SPECIFICATIONS

Model Number:	EP-810-44
Power Source:	Corded Electric
Dimensions:	2.5 x 1 x 4 inches
Weight:	4 ounces
Tweezing Discs:	40
Tweezes Per Minute:	Approximately 31,000
Speed Settings:	2 (Level 1 for sensitive, Level 2 for general)
Water Resistance Level:	Water-resistant (splash-proof, not for immersion)

WARRANTY AND SUPPORT

The Epilady Speed Corded Epilator typically comes with a **1-year limited warranty** from the date of purchase. Please refer to your purchase documentation or contact Epilady customer support for specific warranty terms and conditions.

For technical assistance, troubleshooting, or warranty claims, please visit the official Epilady website or contact their customer service department. Contact information can usually be found on the product packaging or the manufacturer's website.