

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TIMEX](#) /

› [Timex Men's T2N507DH Intelligent Quartz T Series Perpetual Calendar Blue Dial Bracelet Watch User Manual](#)

TIMEX T2N507DH

Timex Men's T2N507DH Intelligent Quartz T Series Perpetual Calendar Blue Dial Bracelet Watch User Manual

Model: T2N507DH

INTRODUCTION

Congratulations on your purchase of the Timex Men's T2N507DH Intelligent Quartz T Series Perpetual Calendar Blue Dial Bracelet Watch. This timepiece combines classic design with advanced Intelligent Quartz technology, featuring a perpetual calendar that automatically adjusts for varying month lengths and leap years. This manual provides detailed instructions to help you set up, operate, and maintain your watch for years of reliable service.



Image: Front view of the Timex T2N507DH Intelligent Quartz watch, showcasing its blue dial, silver-tone hands, and stainless steel

SETUP

1. Initial Activation and Time Setting

1. **Remove Crown Protector:** If present, carefully remove the plastic crown protector from under the crown.
2. **Pull Crown Out:** Gently pull the crown (the knob on the side of the watch) out to its outermost position. The second hand will stop, indicating the watch is in time-setting mode.
3. **Set Time:** Rotate the crown clockwise or counter-clockwise to move the hands to the correct time. Ensure you set the correct AM/PM for the date change mechanism. The date will change around midnight.
4. **Push Crown In:** Once the time is set, push the crown back into its normal operating position. The second hand will resume movement.

2. Setting the Perpetual Calendar (Date, Day, Month, Year)

The Intelligent Quartz movement features a perpetual calendar. Refer to the specific instructions for your watch model, as setting procedures can vary slightly. Generally, this involves a combination of crown pulls/pushes and pusher button presses.

- **Consult the Full Manual:** For precise perpetual calendar setting, it is recommended to consult the detailed Timex Intelligent Quartz manual available on the official Timex website or included with your watch packaging. This typically involves using the crown and one or more pushers to cycle through and set the date, day, month, and year.
- **Example (General Principle):** A common method involves pulling the crown to a specific position and then using a pusher (often at 2 or 4 o'clock) to advance the date, day, or month. The year setting might involve a longer press or a different crown position.

3. Adjusting the Bracelet

The stainless steel bracelet may need adjustment for a comfortable fit. This typically requires specialized tools and is best performed by a professional jeweler or watch repair service.

- **Link Removal:** Links are usually removed from the bracelet to shorten it. Pins or screws hold the links together.
- **Micro-Adjustment:** Many clasps have micro-adjustment holes that allow for fine-tuning the fit without removing full links.

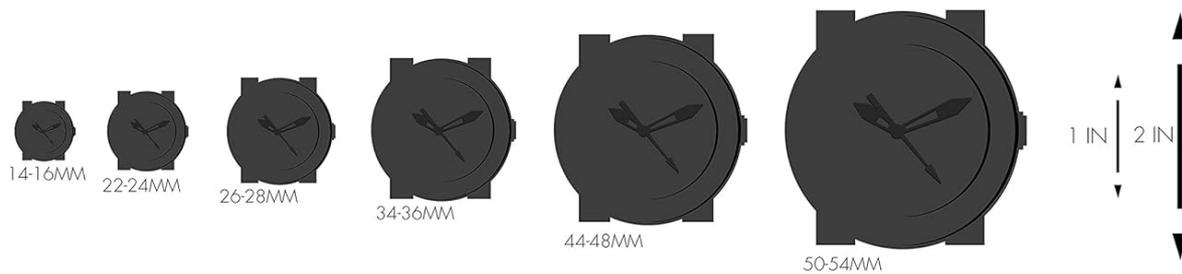


Image: Side view of the Timex T2N507DH watch, highlighting the crown and any additional pushers for calendar adjustments.

OPERATING YOUR WATCH

1. Basic Timekeeping

Your Timex Intelligent Quartz watch operates continuously once the crown is pushed in. The quartz movement ensures accurate timekeeping.

- **Second Hand:** The second hand moves in discrete steps, characteristic of a quartz movement.
- **Date Change:** The perpetual calendar will automatically advance the date, day, and month, including adjustments for leap years, once correctly set.

2. Water Resistance

Your watch has a water resistance rating of 330 feet (100 meters). This rating indicates suitability for swimming and snorkeling.

- **Important:** Do not operate the crown or pushers while the watch is wet or submerged, as this can compromise the water resistance.
- **Avoid Hot Water:** Exposure to hot water (e.g., in showers, hot tubs) can damage the watch's seals and is not recommended.
- **After Saltwater Exposure:** Rinse the watch with fresh water and dry thoroughly after exposure to saltwater.

MAINTENANCE

1. Cleaning Your Watch

- **Case and Bracelet:** Use a soft, damp cloth to wipe the watch case and stainless steel bracelet. For stubborn dirt, a mild soap solution can be used, followed by rinsing with fresh water (only if the watch's water resistance rating permits, and ensure crown is pushed in). Dry thoroughly.
- **Avoid Chemicals:** Do not use harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or seals.

2. Battery Replacement

Your quartz watch is powered by a battery. The battery life typically ranges from 2 to 5 years, depending on the watch's features and usage.

- **Professional Service:** Battery replacement should be performed by a qualified watch technician to ensure proper sealing and to maintain water resistance. Attempting to replace the battery yourself may void the warranty and damage the watch.
- **Battery Type:** Refer to the watch's case back or a service manual for the specific battery type required.

3. Storage

- **Keep Dry:** Store your watch in a dry place, away from extreme temperatures, direct sunlight, and strong magnetic fields.
- **Protective Case:** When not wearing the watch for extended periods, store it in its original box or a soft pouch to prevent scratches.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	<ul style="list-style-type: none">• Crown pulled out• Depleted battery• Internal malfunction	<ul style="list-style-type: none">• Push crown fully in.• Replace battery (professional service recommended).• Contact Timex customer support or an authorized service center.
Incorrect time/date	<ul style="list-style-type: none">• Time/date not set correctly• Crown accidentally pulled out	<ul style="list-style-type: none">• Refer to "Setup" section to reset time and perpetual calendar.• Ensure crown is fully pushed in after setting.
Condensation under crystal	<ul style="list-style-type: none">• Exposure to extreme temperature changes• Compromised water resistance	<ul style="list-style-type: none">• If condensation persists, seek professional service immediately to prevent internal damage.• Avoid exposing watch to sudden temperature shifts.

SPECIFICATIONS

Model Number: T2N507DH

Brand: TIMEX

Movement Type: Quartz (Intelligent Quartz)

Display Type: Analog

Case Material: Stainless Steel

Case Diameter: 42 Millimetres

Case Thickness: 12 Millimetres

Band Material: Stainless Steel

Band Colour: Silver

Band Width: 20 Millimetres

Dial Colour: Blue

Crystal Material: Mineral

Water Resistance Depth: 330 Feet (100 Meters)

Closure Type: Push-Button Deployment Clasp

Special Features: Perpetual Calendar

Item Weight: 181 g

WARRANTY & SUPPORT

Your Timex watch is covered by a limited warranty against manufacturing defects. The specific terms and duration of the warranty may vary by region.

- **Warranty Information:** Please refer to the warranty card included with your watch or visit the official Timex website for detailed warranty terms and conditions.
- **Customer Support:** For technical assistance, service, or warranty claims, please contact Timex customer support through their official website or the contact information provided in your watch's packaging.
- **Online Resources:** Additional support, FAQs, and detailed manuals for specific Intelligent Quartz movements can often be found on the [Timex official website](#).