

Frigidaire 134370000

Frigidaire 134370000 Washing Machine Drawer

INSTRUCTION MANUAL

1. Product Overview

This manual provides instructions for the installation, operation, and maintenance of the Frigidaire 134370000 Washing Machine Drawer. This is a genuine Original Equipment Manufacturer (OEM) authorized replacement part designed for specific Frigidaire washing machine models.

Compatible Models: This drawer is compatible with Frigidaire washing machine models including ATF6000ES0, ATF6000ES1, ATF6000FS, and ATF6000FS0. Always verify compatibility with your specific appliance model before installation.



Image: The Frigidaire 134370000 Washing Machine Drawer. This image displays the complete drawer unit, typically made of durable plastic, designed to fit into the washing machine's designated compartment.

2. Safety Information

Please read all safety instructions before attempting to install or service this part. Failure to follow these instructions could result in personal injury or property damage.

- Always disconnect power to the washing machine before beginning any repair or installation.

- Wear appropriate personal protective equipment, such as gloves, to prevent injury.
- If you are unsure about any step, consult a qualified technician.
- Keep small parts away from children.

3. Package Contents

Verify that all components are present before proceeding with installation.

- 1 x Frigidaire 134370000 Washing Machine Drawer

4. Setup & Installation

4.1 Before You Begin

- Ensure the washing machine is unplugged from the power outlet.
- Turn off the water supply to the washing machine.
- Clear the area around the washing machine to allow for easy access.

4.2 Installation Steps

Follow these steps to replace or install the washing machine drawer:

1. **Remove the Old Drawer (if applicable):** Gently pull the existing drawer out until it stops. Look for a release tab or button, usually located in the center or on the side of the drawer. Press or lift this tab while pulling the drawer further to fully remove it.
2. **Inspect the Compartment:** Clean any detergent residue or debris from the drawer compartment within the washing machine.
3. **Insert the New Drawer:** Align the new Frigidaire 134370000 drawer with the tracks in the washing machine compartment.
4. **Slide into Place:** Gently push the drawer into the compartment. You should feel it slide smoothly along the tracks. Continue pushing until it clicks securely into place. Do not force the drawer.
5. **Test Operation:** Open and close the drawer a few times to ensure it moves freely and latches correctly.
6. **Restore Power:** Plug the washing machine back into the power outlet and turn on the water supply.

5. Operating Instructions

The Frigidaire 134370000 drawer functions as the dispenser for detergent, fabric softener, and other laundry additives. Refer to your washing machine's main user manual for specific instructions on how to load detergents and select wash cycles.

- **Detergent Compartment:** Typically the largest compartment, used for liquid or powder detergent.
- **Fabric Softener Compartment:** Marked with a symbol (often a flower) or 'MAX' line, for liquid fabric softener.
- **Pre-wash/Bleach Compartment:** Smaller compartment for pre-wash detergent or liquid bleach.

Always ensure the drawer is fully closed before starting a wash cycle.

6. Maintenance & Care

Regular cleaning of the detergent drawer is essential to prevent residue buildup and ensure proper dispensing.

- **Weekly Cleaning:** Remove the drawer completely (refer to installation step 1). Rinse all compartments under warm running water to remove any detergent or softener residue. Use a small brush if necessary to clean stubborn buildup.
- **Compartment Cleaning:** Periodically clean the drawer housing inside the washing machine with a damp cloth to remove any accumulated grime.
- **Drying:** Allow the drawer to air dry completely before reinserting it into the washing machine to prevent mold or mildew growth.

7. Troubleshooting

If you encounter issues with the drawer, refer to the table below for common problems and solutions.

| Problem | Possible Cause | Solution |
|------------------------------------|-------------------------------------|--|
| Drawer does not slide in smoothly. | Misalignment or obstruction. | Ensure the drawer is correctly aligned with the tracks. Check for any foreign objects or residue blocking the tracks. |
| Detergent residue left in drawer. | Insufficient water flow or buildup. | Clean the drawer thoroughly as described in the Maintenance section. Check water pressure to the machine. |
| Drawer leaks during cycle. | Drawer not fully closed or damaged. | Ensure the drawer is pushed in completely until it latches. Inspect the drawer for cracks or damage; replace if necessary. |

8. Specifications

| Feature | Detail |
|-----------------------|------------------------|
| Part Number | 134370000 |
| Item Model Number | 134370000 |
| Manufacturer | Frigidaire |
| Item Weight | 12.8 ounces |
| Package Dimensions | 18.3 x 8 x 5.25 inches |
| Color | Multi |
| Item Package Quantity | 1 |

9. Warranty Information

This Frigidaire 134370000 Washing Machine Drawer is an OEM Authorized part. For specific warranty details, please refer to the warranty documentation provided with your original washing machine appliance or contact Frigidaire customer support directly. OEM parts typically carry a limited warranty against manufacturing defects.

10. Customer Support

If you require further assistance with the installation, operation, or troubleshooting of your Frigidaire 134370000 Washing Machine Drawer, please contact Frigidaire customer support. Have your washing machine model number and the part number (134370000) ready when you call. You can typically find contact information for Frigidaire on their official website or in your washing machine's main user manual.