

[Manuals.plus](#) /

› [NU BRILLIANCE](#) /

› NU BRILLIANCE Microdermabrasion Skin Care System Model 30212 User Manual

NU BRILLIANCE 30212

NU BRILLIANCE Microdermabrasion Skin Care System Model 30212 User Manual

Rejuvenate. Restore. Renew.

1. PRODUCT OVERVIEW

The NU BRILLIANCE Microdermabrasion Skin Care System is a non-invasive aesthetic treatment designed to exfoliate dead and flaking cells from the skin's surface and rejuvenate the underlying layers. This system combines exfoliation and suction to promote a healthy skin appearance.

Benefits: Visibly improves skin texture, tone, and elasticity. Reduces the appearance of fine lines and wrinkles.



Image 1.1: The NU BRILLIANCE Microdermabrasion Skin Care System, showcasing the device and its retail packaging.

2. PACKAGE CONTENTS

Verify that all components are present in your package:

- NU BRILLIANCE Microdermabrasion Device
- 3 Diamond Tips (Normal, Fine, Precision)
- 30 Disposable Hygienic Filters
- AC Adapter Power Supply



NUBRILLIANCE

REAL MICRODERMABRASION AT HOME

Dual Action System / Exfoliation and Vacuum Stimulation

Set Includes: 3 diamond tips, 30 disposable hygienic filters and an AC adapter power

Image 2.1: The microdermabrasion system displayed with its various components, including the main unit, wand, and different tips.



Image 2.2: A detailed view of the three interchangeable diamond tips: Normal for less sensitive areas, Fine for sensitive areas, and Precision for hard-to-reach areas.

3. INITIAL SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Connect Power:** Plug the AC adapter into the device and then into a standard electrical outlet.
3. **Insert Filter:** Open the filter compartment and insert a new hygienic filter. Ensure it is seated correctly.
4. **Attach Tip:** Select the desired diamond tip (Normal, Fine, or Precision) and securely attach it to the treatment wand.

4. OPERATING INSTRUCTIONS

Follow these steps for effective use of your microdermabrasion system:

1. **Cleanse Skin:** Ensure your skin is clean and dry before treatment. Remove all makeup, lotions, and oils.
2. **Power On:** Press the 'Start/Stop' button to turn on the device.
3. **Adjust Intensity:** Use the intensity controls to select a comfortable suction level. Start with the lowest setting and gradually increase as your skin tolerates.
4. **Perform Treatment:** Gently glide the diamond tip across your skin in short, even strokes. Avoid lingering in one area to prevent excessive exfoliation. Keep the skin taut with your free hand to ensure good contact.
5. **Post-Treatment:** After treatment, apply a soothing moisturizer.
6. **Power Off:** Press the 'Start/Stop' button to turn off the device.



**Diminish the
appearance
of fine lines and
wrinkles with
continued use.**

As well as acne, scars
and age spots



Image 4.1: A user demonstrating the application of the microdermabrasion wand to the facial area.



Diamond Tip Exfoliation

Gently removes surface cells, for fresher, smoother skin

Image 4.2: A visual representation of how the diamond tip gently removes surface skin cells for smoother skin.

Vacuum Stimulation

Simulates the production of collagen for smoother, more youthful looking skin



Image 4.3: A diagram showing the vacuum stimulation process, which helps simulate collagen production for improved skin texture.

5. CARE AND MAINTENANCE

Proper maintenance ensures the longevity and effectiveness of your device:

- **Tip Replacement:** Replace diamond tips after every 10-20 treatments, or sooner if you notice reduced effectiveness.
- **Filter Replacement:** Replace the hygienic filter after every two uses to maintain optimal suction and prevent debris from entering the system.
- **Cleaning Tips:** After each use, remove the diamond tip and clean it thoroughly. Ensure no skin cell debris remains, especially where the tip contacts the sealing ring.
- **Device Cleaning:** Wipe the main unit with a soft, damp cloth. Do not immerse the device in water.

6. TROUBLESHOOTING GUIDE

If you encounter issues with your NU BRILLIANCE Microdermabrasion System, refer to the following common solutions:

Problem	Possible Cause	Solution
Loss of suction	- Filter is clogged or improperly installed. - Diamond tip is clogged with debris. - Sealing ring is not properly seated or damaged.	- Replace the hygienic filter. - Clean the diamond tip thoroughly, especially the inner surface where it meets the sealing ring. - Ensure the white sealing ring is correctly in place and undamaged.
Device does not turn on	- Power adapter not properly connected. - No power from outlet.	- Check that the AC adapter is securely plugged into both the device and the wall outlet. - Test the outlet with another appliance to ensure it is functional.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	NU BRILLIANCE
Model Number	30212
Product Dimensions	12 x 12 x 6 inches
Item Weight	0.32 ounces
UPC	633235302122
GTIN	633235302122
Manufacturer	Nubrilliance
Skin Type Recommendation	Sensitive
Material Feature	Natural
Number of Items	1

8. WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support inquiries, please refer to the documentation included with your purchase or contact the retailer from whom the product was purchased. For direct manufacturer support, please visit the official Nubrilliance website or contact their customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question