

[manuals.plus](#) /› [MAYFLASH](#) /› [MAYFLASH Max Shooter Pro for XBOX 360 User Manual](#)

MAYFLASH MAX005

MAYFLASH Max Shooter Pro for XBOX 360 User Manual

Model: MAX005 | Brand: MAYFLASH

1. INTRODUCTION

The MAYFLASH Max Shooter Pro is an adapter designed to connect standard USB mice and keyboards to your XBOX 360 console. This device allows users to experience First Person Shooter (FPS) games and other titles with the precision and control offered by a mouse and keyboard setup. It is fully programmable and includes pre-installed key configurations for popular XBOX 360 games. Advanced features such as Deadzone adjustments and mouse control inversion are available to customize your gaming experience.

2. KEY FEATURES

- Enables connection of USB mice and keyboards to XBOX 360.
- Compatible with all XBOX 360 games and console versions.
- Optimized for First Person Shooter (FPS) games.
- Offers high sensitivity, precision, and smooth control.
- Features 9 programmable levels of mouse speed adjustment.
- Includes 9 degrees of mouse deadzone setup.
- Fully programmable with pre-installed key configurations for popular games.
- Built-in Turbo and Auto Fire functionality.
- Supports firmware and game configuration updates via the official website.
- Plug and play functionality; no wired XBOX 360 controller required for initial setup.
- Compatible with most wired and wireless USB mice and keyboards.

3. PACKAGE CONTENTS

The Max Shooter Pro package typically includes:

- 1x MAYFLASH Max Shooter Pro Adapter (Model: MAX005)
- 1x User Manual (this document)



Image: The MAYFLASH Max Shooter Pro adapter shown with its retail packaging. The adapter is white, rectangular, with two USB ports on one end and a USB cable extending from the other. It features a central button and indicator lights.

4. SETUP INSTRUCTIONS

- 1. Connect the Max Shooter Pro:** Plug the USB cable of the Max Shooter Pro adapter directly into an available USB port on your XBOX 360 console.
- 2. Connect Keyboard and Mouse:** Plug your USB keyboard and USB mouse into the two USB ports on the Max Shooter Pro adapter. Ensure they are securely connected.
- 3. Power On:** Turn on your XBOX 360 console. The adapter should be recognized automatically.
- 4. Firmware Update (Recommended):** Before first use, it is highly recommended to check for and install the latest firmware.
 - Visit the official MAYFLASH website for the latest firmware and update instructions.
 - Typically, you will need to connect the Max Shooter Pro to a PC while holding down a specific button on the device until it is recognized, then run the update utility.
- 5. Compatibility:** While most wired and wireless USB mice and keyboards are compatible, a list of tested

devices may be available on the manufacturer's website. If your device is not listed, it may still work.

5. OPERATION AND CONFIGURATION

The Max Shooter Pro allows extensive customization of mouse and keyboard controls. Configuration is performed directly via the connected keyboard.

5.1 Basic Adjustments

- **Mouse Speed Adjustment:** Press **ALT + [1-9]** to adjust mouse sensitivity. (e.g., ALT+7 for level 7).
- **Mouse Deadzone Setup:** Press **ESC + [1-3]** to set the mouse deadzone. This controls how small movements are registered.
- **Profile Selection:** The device supports 11 memory slots for custom profiles. Press **ALT + F[1-11]** to switch between profiles.
- **XBOX Live Menu:** The XBOX Live menu can be accessed by pressing the central button on the Max Shooter Pro device.

5.2 Creating Custom Profiles (Key Mapping)

To create a custom key mapping profile:

1. **Enter Configuration Mode:** Hold down the **ESC** key on your keyboard.
2. **Map a Control:** While holding **ESC**, first press the *keyboard key that represents the XBOX 360 controller action* you wish to map (e.g., 'W' for Left Stick Forward, 'X' for Left Stick Press, '3' for Right Stick Press, Left Mouse Button for Right Trigger, Right Mouse Button for Left Trigger). Second, press the *actual keyboard key or mouse button* you want to assign to that controller action. Release **ESC**.
3. **Repeat for all desired mappings:** Continue this process for all buttons and movements you wish to remap.
4. **Save Profile:** After completing your mappings, hold down **ESC** and then press one of the function keys **F1-F11** to save your new profile to that slot.
5. **Exit Configuration Mode:** Release **ESC**.

Example: To map 'W' to Left Stick Forward, 'Right Mouse Button' to Left Trigger, 'Left Mouse Button' to Right Trigger, 'Scroll Wheel Click' to Left Stick Press, and 'Q' to Right Stick Press, and save to F9:

1. Press **ALT + F9** to select an empty profile slot.
2. Hold **ESC**, press **W** (representing Left Stick Forward), then press **W** (actual keyboard key). Release **ESC**.
3. Hold **ESC**, press **Right Mouse Button** (representing Left Trigger), then press **Right Mouse Button** (actual mouse button). Release **ESC**.
4. Hold **ESC**, press **Left Mouse Button** (representing Right Trigger), then press **Left Mouse Button** (actual mouse button). Release **ESC**.
5. Hold **ESC**, press **X** (representing Left Stick Press), then press **Scroll Wheel Click** (actual mouse button). Release **ESC**.
6. Hold **ESC**, press **3** (representing Right Stick Press), then press **Q** (actual keyboard key). Release **ESC**.
7. Hold **ESC**, then press **F9** to save.

Refer to the detailed manual provided with the product for a complete list of controller control keys and their representations.

5.3 Turbo and Auto Fire

The Max Shooter Pro includes built-in Turbo and Auto Fire functionalities. Specific activation methods for these

features are typically detailed in the full product manual. These functions allow for rapid, automatic button presses, which can be advantageous in certain games.

6. TROUBLESHOOTING

- **Input Delay:** Some users may experience a slight input delay. This is often inherent to converter devices. Ensure your firmware is up to date, and experiment with mouse sensitivity and deadzone settings to find an optimal balance.
- **Keyboard/Mouse Not Recognized:**
 - Ensure both the Max Shooter Pro and your peripherals are securely connected to the XBOX 360.
 - Try different USB ports on the XBOX 360.
 - Verify that your keyboard and mouse are compatible. Check the manufacturer's website for a compatibility list.
 - Update the Max Shooter Pro firmware to the latest version.
- **Configuration Issues:** If you are having difficulty setting up custom key mappings, refer to Section 5.2 and the detailed product manual. Ensure you are correctly entering and saving profiles.
- **No 1:1 PC Feeling:** The Max Shooter Pro converts mouse/keyboard inputs to controller signals. While it enhances precision, it may not perfectly replicate the 1:1 feel of PC gaming due to the console's inherent input processing. Adjusting in-game sensitivity and Max Shooter Pro settings can help optimize the experience.

7. SPECIFICATIONS

Model Number	MAX005
ASIN	B0054NNVWC
Product Dimensions	1.77 x 1.26 x 2.36 inches
Item Weight	7.1 ounces
Manufacturer	Totalconsole (Brand: MAYFLASH)
Date First Available	September 3, 2011

8. WARRANTY AND SUPPORT

Specific warranty details and direct support contact information are not provided in the available product data. For warranty claims, technical support, or the latest firmware updates, please refer to the official MAYFLASH website or contact your retailer.

9. OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found in the provided data.

Related Documents - MAX005

 <p>Quick Start Guide Mayflash PS5 Adapter</p>	<p>MAYFLASH PS5 Adapter: Connect PS4/PS5 Controllers to Joysticks & FPS Adapters</p> <p>Enhance your gaming experience with the MAYFLASH PS5 Adapter. This device allows you to connect wired PS4/PS5 controllers to joysticks and FPS gaming adapters for both PS4 and PS5 consoles. Features plug-and-play functionality and easy firmware updates.</p>
 <p>Quick Start Guide Mayflash Magic NS Controller Adapter</p>	<p>Mayflash Magic NS Controller Adapter Quick Start Guide</p> <p>A comprehensive quick start guide for the Mayflash Magic NS Wireless Bluetooth Controller USB Adapter, detailing setup for Nintendo Switch, PC, and PS3 with various controllers, LED indicators, mode switching, and software updates.</p>
 <p>User Manual Mayflash MAGIC-NS Lite USB Wireless Adapter</p>	<p>MAYFLASH MAGIC-NS Lite USB Wireless Adapter User Manual</p> <p>User manual for the MAYFLASH MAGIC-NS Lite, a USB wireless adapter that enables connection of various Bluetooth controllers to Nintendo Switch, PC, PlayStation 3, macOS, and other systems. Includes setup, compatibility, mode switching, vibration, and dead zone adjustments.</p>
 <p>User Manual Mayflash MAGIC-NS Wireless Controller Adapter</p>	<p>Mayflash MAGIC-NS Wireless Controller Adapter User Manual</p> <p>User manual for the Mayflash MAGIC-NS Wireless Controller Adapter, detailing setup and usage for various gaming consoles including Nintendo Switch, PS3, PC, NEOGEO mini, and PS Classic. Covers wired and wireless controller connections, button mapping, and software updates.</p>
 <p>User Manual and Quick Start Guide Mayflash Arcade Stick F500 Elite</p>	<p>MAYFLASH Arcade Stick F500 Elite User Manual and Quick Start Guide</p> <p>Comprehensive guide for the MAYFLASH Arcade Stick F500 Elite, detailing its features, operation, and connectivity with various gaming consoles and platforms including PS4, Xbox, Switch, PC, Android, and more. Includes setup instructions and button mapping.</p>
 <p>User Manual and Guide Mayflash MAGIC-S PRO 2 USB Wireless Adapter</p>	<p>Mayflash MAGIC-S PRO 2 USB Wireless Adapter User Manual and Guide</p> <p>Comprehensive user manual for the Mayflash MAGIC-S PRO 2 USB Wireless Adapter, detailing system compatibility, controller setup, advanced features like vibration and dead zone adjustment, software updates, and FCC compliance.</p>