

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kanlux](#) /

› [Kanlux Gloria TI3011 18W Light Fixture Instruction Manual](#)

Kanlux TI3011

Kanlux Gloria TI3011 18W Light Fixture Instruction Manual

Model: TI3011 (ka-510)

INTRODUCTION

This instruction manual provides essential information for the safe and efficient installation, operation, and maintenance of your Kanlux Gloria TI3011 18W light fixture. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INSTRUCTIONS

Adherence to these safety instructions is crucial for preventing accidents and ensuring proper function of the device. Failure to follow these instructions may result in electric shock, fire, or injury.

- Always disconnect power at the main circuit breaker before installation, maintenance, or cleaning.
- Installation must be performed by a qualified electrician in accordance with all local and national electrical codes.
- Do not modify the fixture in any way. Unauthorized modifications may void the warranty and create safety hazards.
- Ensure the fixture is securely mounted to a stable surface.
- Do not expose the fixture to excessive moisture or direct water spray unless specifically rated for such conditions.
- Keep flammable materials away from the light fixture.
- If the fixture or its cable is damaged, do not use it. Contact a qualified technician for repair or replacement.

PACKAGE CONTENTS

Verify that all components are present and undamaged upon unpacking:

- Kanlux Gloria TI3011 18W Light Fixture (1 unit)
- Mounting hardware (screws, anchors)
- Instruction Manual (this document)

SETUP AND INSTALLATION

Follow these steps for proper installation of your light fixture:

- Preparation:** Ensure the power supply to the installation area is turned off at the circuit breaker.
- Mounting Location:** Select a suitable, flat, and stable surface for mounting. Mark the drilling points for the mounting hardware.
- Drilling:** Drill pilot holes at the marked locations. Insert wall anchors if necessary.
- Wiring:** Connect the fixture's electrical cable to the main power supply wiring. Ensure correct polarity (Live, Neutral, Earth) according to local electrical codes. All connections must be secure. This fixture operates on 240 Volts.
- Mounting the Fixture:** Secure the fixture to the mounting surface using the provided screws. Ensure it is firmly attached.
- Final Check:** Double-check all connections and mounting security.



Figure 1: Kanlux Gloria TI3011 18W Light Fixture. This image displays the Kanlux Gloria TI3011 18W light fixture. It is a long, slender, white fixture designed for surface mounting. A small toggle switch is visible on the top surface, indicating its on/off control. The light source is integrated along the length of the fixture, covered by a translucent diffuser.

OPERATION

Once installed and connected to the power supply, the Kanlux Gloria TI3011 18W light fixture can be operated as follows:

- **Power On:** Restore power at the main circuit breaker.
- **Turning On/Off:** Locate the toggle switch on the top surface of the fixture (refer to Figure 1). Flip the switch to the 'ON' position to illuminate the fixture. Flip it to the 'OFF' position to turn off the light.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your light fixture.

- **Cleaning:** Before cleaning, ensure the power is disconnected. Use a soft, dry, or slightly damp cloth to wipe the exterior of the fixture. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- **Light Source:** The light source in this fixture is integrated and not user-replaceable. If the light source fails, the entire fixture may need to be replaced.

- **Inspection:** Periodically inspect the fixture and its wiring for any signs of damage, wear, or loose connections. Address any issues promptly.

TROUBLESHOOTING

If you encounter issues with your Kanlux Gloria TI3011 18W light fixture, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fixture does not turn on.	No power supply. Switch is in 'OFF' position. Faulty wiring connection.	Check circuit breaker. Ensure switch is 'ON'. Verify wiring connections (consult a qualified electrician).
Light flickers or is dim.	Loose wiring connection. Voltage fluctuation.	Check wiring connections (consult a qualified electrician). Consult an electrician to check household voltage.
Fixture makes unusual noise.	Internal component issue.	Disconnect power immediately and contact a qualified electrician or the manufacturer.

If the problem persists after attempting these solutions, contact a qualified electrician or the manufacturer for assistance.

SPECIFICATIONS

Brand	Kanlux
Model Number	TI3011 (ka-510)
Dimensions (L x W x H)	10 x 10 x 60 cm
Weight	200 g
Voltage	240 Volts
Power	18 Watts
Color	White
Special Features	Energy efficiency
Plug Type	Electrical cable

WARRANTY AND SUPPORT

Specific warranty information for the Kanlux Gloria TI3011 18W light fixture is not provided in this manual. For details regarding warranty coverage, terms, and conditions, please refer to the documentation included with your purchase or contact Kanlux customer support directly.

For technical support, spare parts, or service inquiries, please contact the manufacturer or your retailer. Always provide the model number (TI3011 or ka-510) when seeking support.

© 2023 Kanlux. All rights reserved.