

[Manuals.plus](#) /

› [GE](#) /

› GE WB30T10146 12-Inch Halogen Heating Element Instruction Manual

GE WB30T10146

GE WB30T10146 12-Inch Halogen Heating Element Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and effective installation, operation, and maintenance of the GE WB30T10146 12-inch halogen heating element. This is an Original Equipment Manufacturer (O.E.M.) authorized replacement part designed to fit various GE brand stove and oven models. Please read these instructions thoroughly before proceeding with any installation or maintenance.

2. SAFETY INFORMATION

WARNING: Electrical shock hazard. Disconnect power before servicing. Failure to do so can result in serious injury or death.

- Always ensure the appliance is completely unplugged from the electrical outlet or the circuit breaker is turned off before attempting any installation, removal, or maintenance.
- This heating element operates on high voltage (typically 220V). Exercise extreme caution.
- Wear appropriate personal protective equipment, such as gloves and safety glasses.
- If you are unsure about any step, consult a qualified appliance technician.
- Keep children and pets away from the work area.

3. PRODUCT OVERVIEW

The GE WB30T10146 is a genuine replacement 12-inch halogen heating element. It is designed to restore heating functionality to the corresponding burner on your GE range or oven. This part ensures proper heat distribution and cooking performance.



Figure 1: GE WB30T10146 12-Inch Halogen Heating Element. This image displays the circular heating element with its electrical terminals and mounting brackets.

4. SETUP AND INSTALLATION

This section outlines the general steps for replacing a 12-inch halogen heating element. Specific procedures may vary slightly depending on your GE appliance model. Always refer to your appliance's specific service manual if available.

Required Tools:

- Screwdriver set (Phillips and/or flathead)
- Pliers
- Work gloves
- Camera or smartphone (for documenting wiring)

Installation Steps:

1. **Disconnect Power:** Crucially, unplug the appliance from the wall outlet or turn off the corresponding circuit

breaker at your home's electrical panel. Verify that power is off before proceeding.

2. **Access the Burner Area:** Depending on your stove model, you may need to lift the cooktop, remove burner grates, or access the element from underneath.
3. **Document Wiring:** Before disconnecting any wires, take clear photographs of the existing wiring connections to the old heating element. This will serve as a reference for connecting the new element correctly.
4. **Remove Old Element:** Carefully disconnect the electrical wires from the terminals of the old heating element. Then, unfasten any screws or clips securing the element in place and remove it.
5. **Install New Element:** Position the new GE WB30T10146 heating element in the same location as the old one. Secure it with the appropriate screws or clips.
6. **Connect Wiring:** Using your photographs as a guide, carefully connect the electrical wires to the terminals of the new heating element. Ensure all connections are secure.
7. **Reassemble Appliance:** Replace any covers, grates, or cooktop sections that were removed to access the element.
8. **Restore Power:** Plug the appliance back into the electrical outlet or turn the circuit breaker back on.
9. **Test Functionality:** Turn on the burner associated with the newly installed element to ensure it heats up properly.

5. OPERATION

Once installed, the GE WB30T10146 heating element operates as part of your stove's cooking system. When the corresponding burner knob is turned on, electrical current flows through the element, causing it to heat up and radiate heat to your cookware. The element's temperature is regulated by the stove's controls.

6. MAINTENANCE

The GE WB30T10146 heating element is designed for durability and typically requires minimal maintenance. However, proper care can extend its lifespan and ensure optimal performance.

- **Cleaning:** If spills occur on the heating element, allow it to cool completely before attempting to clean. Gently wipe the surface with a damp cloth. Avoid using abrasive cleaners or sharp objects that could damage the element.
- **Inspection:** Periodically inspect the element for any visible signs of damage, such as cracks or discoloration. If damage is observed, discontinue use and consider replacement.
- **Electrical Connections:** Ensure that the electrical connections remain secure. If you notice any loose wires, disconnect power and re-secure them.

7. TROUBLESHOOTING

If your GE WB30T10146 heating element is not functioning as expected after installation, consider the following troubleshooting steps:

- **No Heat:**
 - Check if the appliance is properly plugged in or if the circuit breaker is tripped.
 - Verify that the burner control knob is correctly set to an ON position.
 - Ensure all electrical connections to the element are secure and correctly wired.
 - The element itself may be faulty. If all other checks pass, the element may need replacement.
- **Uneven Heating:**

- Ensure the cookware being used is flat and making good contact with the element.
- Inspect the element for any visible damage or deformities.

If troubleshooting does not resolve the issue, it is recommended to contact a qualified appliance repair technician.

8. SPECIFICATIONS

Attribute	Detail
Part Number	WB30T10146
Manufacturer	GE
Item Weight	3.54 pounds
Package Dimensions	18.3 x 17.3 x 4.3 inches
Item Model Number	WB30T10146
Item Package Quantity	1

9. WARRANTY AND SUPPORT

This GE O.E.M. authorized part is typically covered by a manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or contact GE customer support directly. For technical assistance or further inquiries, please visit the official GE Appliances website or contact their customer service department.

Always ensure you are purchasing genuine GE replacement parts to maintain the integrity and performance of your appliance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0055MVTBM>

More documents and user manuals: <https://manuals.plus/>