

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hoover](#) /

› [Hoover WindTunnel Max Bagged Upright Vacuum Cleaner UH30600 User Manual](#)

Hoover UH30600

Hoover WindTunnel Max Bagged Upright Vacuum Cleaner UH30600 User Manual

Model: UH30600

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this vacuum cleaner.
- Always unplug the appliance from the electrical outlet before cleaning or servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store your appliance indoors in a cool, dry area.

PRODUCT OVERVIEW

The Hoover WindTunnel Max Bagged Upright Vacuum Cleaner UH30600 is engineered for powerful cleaning performance across various floor types. Featuring WindTunnel MAX technology and HEPA Media Bag filtration, it effectively captures dirt, dust, and allergens, ensuring a cleaner home environment. Its versatile design includes multiple tools and adjustable settings for comprehensive cleaning.



Figure 1: The Hoover WindTunnel Max Bagged Upright Vacuum Cleaner, showcasing its full assembly and design.

ASSEMBLY AND SETUP

Before operating your Hoover WindTunnel Max vacuum, ensure it is properly assembled.

- Handle Assembly:** Insert the handle into the top of the vacuum body until it clicks securely into place.
- Hose and Tool Attachment:** Connect the flexible hose to the designated port on the vacuum. Securely attach the extension wand, crevice tool, upholstery/dusting brush, and air powered hand tool to their storage locations on the vacuum for easy access during use.
- Power Cord:** Unwind the power cord completely before plugging it into a suitable electrical outlet. Ensure the cord is not tangled or obstructed during operation.

OPERATING INSTRUCTIONS

The Hoover WindTunnel Max is designed for efficient cleaning on various surfaces.

Powering On/Off

To turn the vacuum on or off, locate the power switch on the main body of the unit. Press the switch to activate or deactivate the vacuum.

Floor Height Adjustment

This vacuum features 7 floor height adjustment settings, allowing you to optimize suction for different floor types.

- For bare floors and low-pile carpets, select a lower setting.
- For medium to high-pile carpets, select a higher setting to allow the brush roll to agitate the carpet fibers effectively without excessive resistance.

Adjust the dial on the vacuum head to the desired setting before beginning to vacuum.





Figure 2: Close-up of the vacuum head on carpet, showing the floor height adjustment dial for optimal cleaning on different surfaces.

Using Attachments

The vacuum includes several tools for specialized cleaning tasks:

- **Extension Wand:** Provides extended reach for cleaning high areas, ceilings, or under furniture.
- **Crevice Tool:** Ideal for narrow spaces, corners, and along baseboards.
- **Upholstery/Dusting Brush:** Use for cleaning furniture, curtains, and delicate surfaces.
- **Air Powered Hand Tool:** Designed for deep cleaning upholstery, stairs, and pet hair removal.



Figure 3: A person operating the Hoover WindTunnel Max to clean a large carpeted area, demonstrating its maneuverability.



Figure 4: A user utilizing the hose and extension wand to clean carpeted stairs, highlighting the vacuum's extended reach capabilities.



Figure 5: A hand operating the upholstery tool to clean a fabric couch, illustrating its use for delicate surfaces.



Figure 6: The crevice tool being used to clean along a baseboard, demonstrating its effectiveness in tight spaces.

Official Product Video

Video 1: An official demonstration of the Hoover WindTunnel Max Bagged Upright Vacuum Cleaner, showcasing its features and operation.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Bag Replacement

The Hoover WindTunnel Max uses HEPA Media Bags that trap 99.7% of dust, dirt, pollen, and allergens down to 0.3 microns. Replace the bag when it is full to maintain suction power and filtration efficiency.

1. Ensure the vacuum is unplugged from the power outlet.
2. Open the front panel of the vacuum to access the bag compartment.
3. Carefully remove the full dust bag by pressing the release button or lever. The bag is designed for hassle-free disposal without touching the mess.
4. Insert a new HEPA Media Bag, ensuring it is properly seated and sealed within the compartment.
5. Close the front panel securely.



Figure 7: A close-up view of the vacuum's bag compartment opened, illustrating the process of removing a full HEPA Media Bag for disposal.

Filter Maintenance

Periodically check and clean or replace other filters as recommended in the full product manual to maintain air quality and vacuum performance.

Brush Roll Cleaning

Inspect the brush roll regularly for tangled hair, strings, or debris. Remove any obstructions to ensure the brush roll spins freely and effectively agitates carpet fibers.

TROUBLESHOOTING

Refer to this section for solutions to common issues you might encounter.

Problem	Possible Cause	Solution
Vacuum does not turn on	No power to the unit; tripped circuit breaker.	Check power cord connection; check household circuit breaker.
Loss of suction	Full dust bag; clogged hose or filters; brush roll obstructed.	Replace dust bag; clear any clogs in hose or filters; clean brush roll.
Brush roll not spinning	Belt broken or dislodged; brush roll obstructed.	Inspect and replace belt if necessary; remove obstructions from brush roll.
Unusual noise	Foreign object in brush roll or fan; worn motor bearings.	Turn off and unplug, then remove foreign object; contact customer support if noise persists.

SPECIFICATIONS

Feature	Detail
Brand	Hoover
Model Name	Wind Tunnel MAX Bagged Corded
Model Number	UH30600
Filter Type	HEPA Filter
Power Source	Corded Electric
Wattage	1150 watts
Amperage	12 Amps
Motor Horsepower	2.3 horsepower
Hose Length	15 Feet
Product Dimensions	15.7" L x 12.5" W x 31.8" H

Feature	Detail
Item Weight	14 pounds
Noise Level	84 Decibels
Recommended Uses	Bare Floor, Carpet, Hard Floor, Home, Pet Hair Removal, Rug
Included Components	HEPA Filter, Telescoping Extension Wand, 12 inch crevice tool, upholstery/dusting brush, and air powered hand tool

WARRANTY AND SUPPORT

This Hoover WindTunnel Max Bagged Upright Vacuum Cleaner UH30600 comes with a **2-year limited warranty**. For detailed warranty information, service, or support, please refer to the official Hoover website or contact their customer service.

You can also visit the official Hoover Store for more product information and support resources [Hoover Store on Amazon](#)