

[Manuals.plus](#) /

> [EDESA](#) /

> Edesa ZEN-LS1226 Washer-Dryer User Manual

## EDESA ZENLS1226

# Edesa ZEN-LS1226 Washer-Dryer User Manual

Model: ZENLS1226

## 1. PRODUCT OVERVIEW

---

This manual provides essential information for the safe and efficient operation of your Edesa ZEN-LS1226 front-load washer-dryer. Please read it thoroughly before installation and use, and keep it for future reference.



*Figure 1: Front view of the Edesa ZEN-LS1226 washer-dryer. This image shows the appliance's exterior, including the front-loading door and control panel.*

## 2. SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not wash or dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.

- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual.
- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.

## 3. SETUP AND INSTALLATION

---

### 3.1 Unpacking

Carefully remove all packaging materials. Ensure all transit bolts are removed from the rear of the appliance before use. Failure to do so can cause severe vibration and damage.

### 3.2 Location

Place the appliance on a firm, level floor. Avoid direct sunlight or extreme temperatures. Ensure adequate ventilation around the unit.

### 3.3 Leveling

Adjust the leveling feet at the bottom of the appliance until it is perfectly stable and level. Use a spirit level to verify.

### 3.4 Water and Drain Connections

- Connect the cold water inlet hose to a cold water tap with a 3/4" thread. Ensure the connection is tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during operation. The drain hose should be at a height between 60 cm and 100 cm from the floor.

### 3.5 Electrical Connection

Plug the appliance into a grounded electrical outlet. Do not use extension cords or adapters. Ensure the voltage and frequency match the specifications on the rating plate of the appliance.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Preparing Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Check pockets for small items like coins, keys, or tissues.
- Close zippers, hooks, and buttons. Tie loose strings or belts.

### 4.2 Loading the Appliance

Open the door and load the laundry into the drum. Do not overload the appliance; leave enough space for clothes to tumble freely. For optimal washing and drying, the maximum load capacity is 3 kg.

### 4.3 Adding Detergent and Additives

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent to the main wash compartment. If using fabric softener or pre-wash detergent, add them to their respective compartments. Refer to detergent packaging for dosage recommendations.

### 4.4 Selecting a Program

Turn the program selector dial to choose the desired wash or wash-dry program. The LCD display will show the program details. Available cycle options include "Aclarado" (Rinse) and "Enjuague extra" (Extra Rinse).

## 4.5 Starting the Program

Press the Start/Pause button to begin the selected program. The door will lock, and the appliance will start filling with water.

## 4.6 Drying Function

For drying, select a suitable drying program after the wash cycle, or choose a combined wash-dry program. Ensure the load size is appropriate for drying (typically smaller than washing loads) to achieve optimal results.

## 4.7 End of Program

Once the program is complete, the appliance will signal with an audible alert (if enabled) and the door will unlock. Remove laundry promptly to prevent creasing.

# 5. MAINTENANCE

---

## 5.1 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 5.2 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer under running water to remove any detergent residue.

## 5.3 Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) regularly to keep the drum clean and free from odors.

## 5.4 Cleaning the Drain Pump Filter

Locate the drain pump filter, usually at the bottom front of the appliance. Open the cover, place a shallow tray underneath to catch water, and carefully unscrew the filter. Clean any lint or debris, then reinsert and secure the filter.

## 5.5 Door Seal Care

Wipe the door seal after each wash to remove any moisture or lint, preventing mold and odors.

# 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Appliance does not start	No power supply; Door not closed properly; Program not selected; Start/Pause button not pressed.	Check power plug and fuse; Ensure door is firmly closed; Select a program; Press Start/Pause.
Excessive vibration during spin cycle	Transit bolts not removed; Appliance not level; Uneven load.	Remove transit bolts; Adjust leveling feet; Redistribute laundry in the drum.
Water leakage	Hoses not properly connected; Drain pump filter loose or clogged.	Check and tighten water inlet/drain hoses; Clean and secure drain pump filter.
Poor washing results	Overloading; Insufficient detergent; Incorrect program selection.	Reduce load size; Use correct detergent amount; Select appropriate program.
Clothes not drying properly	Overloading the dryer; Lint filter clogged; Incorrect drying program.	Reduce load size; Clean lint filter; Select appropriate drying program.

If the problem persists after attempting these solutions, please contact customer support.

## 7. SPECIFICATIONS

---

**Brand:** EDESA

**Model Number:** ZENLS1226

**Type:** Front-load Washer-Dryer

**Maximum Wash Capacity:** 3 kg

**Cycle Options:** Rinse (Aclarado), Extra Rinse (Enjuague extra)

**Control Type:** LCD

**ASIN:** B0055ZIARA

**GTIN (EAN/UPC):** 08413880196442

*Note: Specifications are subject to change without notice for product improvement.*

## 8. WARRANTY AND SUPPORT

---

Your Edesa ZEN-LS1226 washer-dryer comes with a manufacturer's warranty. Please refer to the separate warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact Edesa customer support. Contact details can typically be found on the Edesa official website or in the warranty documentation.

**Online Support:** [www.edesa.com/support](http://www.edesa.com/support) (*Note: This is a placeholder URL. Please refer to your product documentation for the actual support website.*)

