

Denver CR-CD211

Denver CR-CD211 Radio Alarm Clock with CD Player and Time Projection User Manual

INTRODUCTION

Thank you for purchasing the Denver CR-CD211 Radio Alarm Clock. This device combines a digital alarm clock with a radio tuner, a front-loading CD player, and a convenient time projection feature. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your product.

IMPORTANT SAFETY INFORMATION

- Read all instructions carefully before use and retain them for future reference.
- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Ensure the power cord is not pinched or walked on.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.

PRODUCT OVERVIEW



Image Description: A silver-colored Denver CR-CD211 radio alarm clock. The device has a rounded, futuristic design with a clear plastic dome covering the CD player compartment. The front features a digital display showing '7:09' in green, surrounded by control buttons for functions like 'SNOOZE', 'ALARM', 'SET', 'TUNING', and 'VOLUME'. A small projector arm extends from the top, capable of rotating to project the time. A speaker grille is visible on the left side. The overall appearance is compact and modern, designed for a bedside table or desk.

The Denver CR-CD211 is a versatile bedside companion. Its key features include:

- **Digital Clock Display:** Clear, easy-to-read digital time display.
- **FM/AM Radio Tuner:** For listening to your favorite radio stations.
- **Front-Loading CD Player:** Compatible with standard audio CDs.
- **Dual Alarm Function:** Wake up to radio or buzzer.
- **Time Projection:** Project the current time onto a wall or ceiling.
- **Snooze Function:** Temporarily pause your alarm.

SETUP

1. Power Connection

1. Unpack the unit and place it on a stable, flat surface.
2. Connect the AC power adapter (if included) or power cord to the DC IN jack on the back of the unit.
3. Plug the other end of the power cord into a standard wall outlet. The display should light up.
4. **Optional Backup Batteries:** For maintaining time settings during power outages, locate the battery compartment (usually on the bottom or back) and insert 2 x AAA batteries (not included), observing correct polarity.

2. Setting the Time

1. Press and hold the **TIME SET** button (or similar, refer to your unit's specific button layout). The hour digits will begin to flash.
2. Use the **HOUR** and **MINUTE** buttons (or **TUNING +/-** buttons) to adjust the hour and minute respectively.
3. Press **TIME SET** again to confirm the time.

OPERATING INSTRUCTIONS

1. Radio Operation

1. Press the **POWER** button to turn on the unit.
2. Press the **FUNCTION/MODE** button repeatedly until 'RADIO' or the radio frequency is displayed.
3. Use the **TUNING +/-** buttons to manually tune to your desired station.
4. For automatic scanning, press and hold the **TUNING +/-** button for a few seconds. The radio will scan and stop at the next strong station.
5. Adjust the volume using the **VOLUME +/-** buttons.

2. CD Player Operation

1. Press the **POWER** button to turn on the unit.
2. Press the **FUNCTION/MODE** button repeatedly until 'CD' is displayed.
3. Gently open the CD compartment cover (if applicable) or insert a CD into the front-loading slot with the

label side facing up.

4. The CD player will automatically start playing the first track. If not, press the **PLAY/PAUSE** button.
5. Use the **SKIP +/-** buttons to navigate between tracks.
6. Press **PLAY/PAUSE** to pause or resume playback.
7. Press the **STOP** button to stop playback.

3. Setting the Alarm

The CR-CD211 typically features two independent alarms (Alarm 1 and Alarm 2).

1. Press and hold the **ALARM 1 SET** button (or **ALARM** button and then select Alarm 1). The alarm hour digits will flash.
2. Use the **HOUR** and **MINUTE** buttons to set the desired alarm time.
3. Press **ALARM 1 SET** again to confirm the time.
4. Next, select the alarm source: Press the **ALARM 1 MODE** button (or similar) repeatedly to cycle through options: **BUZZER**, **RADIO**, or **OFF**.
5. Repeat for **ALARM 2** if desired.

4. Snooze Function

When the alarm sounds, press the large **SNOOZE** button (usually located on top of the unit). The alarm will temporarily stop and sound again after approximately 9 minutes.

5. Time Projection

1. Locate the projector arm on top of the unit.
2. Adjust the angle of the projector arm to direct the time display onto a wall or ceiling.
3. Use the **FOCUS** wheel (if available, usually on the projector arm) to sharpen the projected image.
4. Press the **PROJECTION ON/OFF** button (or similar) to activate or deactivate the projection.
5. Some models may have a **FLIP** button to rotate the projected image 180 degrees.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **CD Player Care:** Handle CDs by their edges. Keep the CD compartment clean and free of dust. Do not attempt to clean the CD lens yourself.
- **Ventilation:** Ensure the ventilation openings are not blocked to prevent overheating.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Power cord not properly connected.	Check power cord connection to the unit and wall outlet.
Alarm does not sound.	Alarm not set correctly; Alarm volume too low; Alarm mode set to OFF.	Verify alarm time and mode (Buzzer/Radio). Increase alarm volume. Ensure alarm is activated.

Problem	Possible Cause	Solution
Poor radio reception.	Antenna not extended or positioned correctly; Interference.	Extend and adjust the position of the FM wire antenna. Try moving the unit to a different location away from other electronic devices.
CD does not play or skips.	CD is dirty or scratched; CD inserted incorrectly; CD format not supported.	Clean the CD with a soft cloth. Re-insert the CD with the label side up. Ensure it is an audio CD.
Time projection is blurry or not visible.	Focus not adjusted; Projector angle incorrect; Room too bright.	Adjust the focus wheel on the projector. Reposition the projector arm. Ensure the room is sufficiently dark.


SPECIFICATIONS




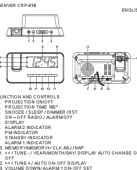
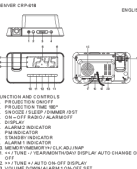
- **Brand:** Denver
- **Model:** CR-CD211
- **Power Source:** Electric (AC power adapter), Optional Battery Backup (AAA batteries, not included)
- **Display Type:** Digital
- **Material:** Plastic
- **Dimensions (approx.):** 26.8 x 20.8 x 20.2 cm
- **Weight (approx.):** 1.7 kg
- **Special Features:** Radio, CD Player, Alarm Clock, Time Projection

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact your local Denver retailer or service center. Keep your proof of purchase for warranty claims.

Related Documents - CR-CD211

	<p>Denver ECP-715NR Clock Radio with Time Projection - User Manual</p> <p>User manual for the Denver ECP-715NR clock radio, featuring time projection, alarm functions, and detailed specifications. Includes safety instructions, control descriptions, and contact information.</p>
---	---

 <p>USER MANUAL CR-421</p> <p>WWW.DENVERELECTRONICS.COM Please read this user manual carefully before using the product.</p>	<p>DENVER CR-421 User Manual: Clock Radio with Alarm and FM</p> <p>Comprehensive user manual for the DENVER CR-421 clock radio. This guide provides detailed instructions on setting the time and alarms, operating the FM radio, utilizing sleep and nap modes, adjusting display brightness, and understanding disposal guidelines. Essential information for owners of the DENVER CR-421.</p>
 <p>CPR-710 www.denver.eu</p>	<p>Denver CPR-710 LED Clock Radio with Time Projection User Manual</p> <p>User manual and safety information for the Denver CPR-710 LED Clock Radio with Time Projection. Learn how to set time, alarms, use radio functions, and understand safety precautions.</p>
 <p>denver 1206</p> <p>ECP-715NR denver.eu</p>	<p>Denver ECP-715NR Clock Radio with Time Projection - User Manual</p> <p>User manual for the Denver ECP-715NR clock radio, featuring time projection, alarm functions, and external device charging. Includes safety instructions, operation guide, and technical specifications.</p>
 <p>denver 1206</p> <p>CRP-618</p>	<p>DENVER CRP-618 Clock Radio with Projection User Manual</p> <p>User manual for the DENVER CRP-618 clock radio, detailing functions, setup, radio operation, alarms, sleep mode, dimmer control, NAP timer, DST, projection features, specifications, and safety warnings.</p>
 <p>denver 1206</p> <p>CRP-618</p>	<p>DENVER CRP-618 User Manual: Features, Operation, and Safety</p> <p>Comprehensive user manual for the DENVER CRP-618 clock radio with projection. Learn about its functions, setup, alarm settings, radio operation, sleep timer, dimmer control, and important safety warnings.</p>