

[Manuals.plus](#) /

› [MEDION](#) /

› Medion 5845 Microwave Oven Instruction Manual

MEDION 5845

Medion 5845 Microwave Oven Instruction Manual

Model: 5845

1. INTRODUCTION

Thank you for purchasing the Medion 5845 Microwave Oven. This manual provides essential information for the safe and efficient operation of your appliance. Please read it thoroughly before use and keep it for future reference.


2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate the oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Use only utensils that are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, keep a close watch on the oven due to the possibility of ignition.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- The appliance is intended for household use only.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Medion 5845 Microwave Oven.

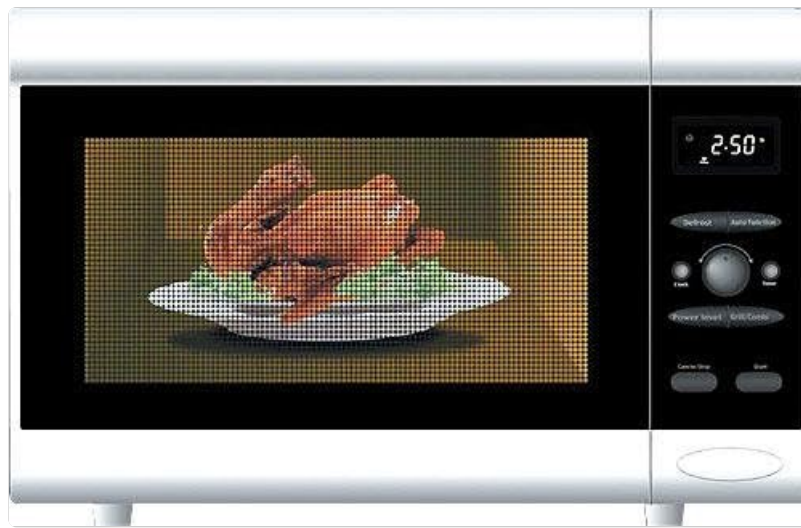

This image displays the Medion 5845 Microwave Oven, showing its front view. The transparent door reveals food cooking inside, and the right-side control panel features a digital display, various function buttons, and a rotary dial.

Key Components:

- **Oven Cavity:** Interior space for cooking.
- **Glass Turntable:** Rotates food for even cooking.
- **Control Panel:** Houses the digital display, function buttons, and rotary dial.
- **Door Release Button:** Opens the oven door.
- **Digital Display:** Shows time, power level, and cooking status.
- **Function Buttons:** Include Defrost, Auto Function, Power Level, Grill/Combi, Cancel/Stop, Start.
- **Rotary Dial:** Used for setting time and adjusting settings.

4. SETUP

4.1 Unpacking

1. Carefully remove the microwave oven and all packing materials from the carton.
2. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
3. Remove any protective film from the surface of the oven.

4.2 Placement

- Place the oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in the oven.
- Ensure adequate ventilation. Leave a minimum of 10 cm (4 inches) clearance at the rear, 20 cm (8 inches) at the top, and 5 cm (2 inches) on both sides.
- Do not block air vents. Blocking vents can damage the oven and affect cooking results.
- Keep the oven away from heat sources and strong magnetic fields.

4.3 Power Connection

- Plug the power cord into a properly grounded electrical outlet.
- Ensure the voltage and frequency of your power supply match the specifications on the oven's rating label.

5. OPERATING INSTRUCTIONS

5.1 Setting the Clock

1. Plug in the oven. The display will show "0:00".
2. Press the "Clock" button (if available, otherwise use the rotary dial or a combination of buttons as per specific model instructions).
3. Rotate the dial to set the hour.
4. Press the "Clock" button again.
5. Rotate the dial to set the minutes.
6. Press the "Clock" button to confirm.

5.2 Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door.
3. Press the "Power Level" button repeatedly to select the desired power level (e.g., P100 for full power, P80 for 80% power, etc.).
4. Rotate the dial to set the cooking time.
5. Press the "Start" button to begin cooking.

5.3 Defrost Function

The Defrost function allows you to thaw food quickly and efficiently.

1. Place the frozen food on the turntable.
2. Press the "Defrost" button.
3. Rotate the dial to select the weight of the food or the defrost time, depending on the model's specific defrost modes.
4. Press the "Start" button. The oven may pause during defrosting to allow you to turn or separate the food.

5.4 Auto Function (Pre-set Programs)

The "Auto Function" button provides convenient pre-set cooking programs for various food types.

1. Place the food in the oven.
2. Press the "Auto Function" button repeatedly to cycle through the available programs (e.g., popcorn, potato, pizza, beverage).
3. Once the desired program is selected, rotate the dial to adjust the quantity or weight if prompted.
4. Press the "Start" button.

5.5 Grill / Combi Function

The "Grill/Combi" function allows for grilling or combination cooking (microwave + grill) for crispy results.

1. Place food on the grill rack (if provided) or a suitable heat-resistant dish.
2. Press the "Grill/Combi" button repeatedly to select the desired mode (Grill, Combi 1, Combi 2, etc.).
3. Rotate the dial to set the cooking time.
4. Press the "Start" button.

5.6 Cancel / Stop

- Press once to pause cooking.
- Press twice to cancel the current program and clear the display.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

6.1 Exterior Cleaning

- Wipe the exterior with a damp cloth and mild detergent.
- Avoid abrasive cleaners or solvents.

6.2 Interior Cleaning

- Clean the oven cavity regularly, especially after spills.
- For stubborn stains, place a bowl of water with lemon slices inside and microwave for 5-10 minutes. The steam will loosen food particles.
- Wipe with a soft, damp cloth.

6.3 Turntable Care

- The glass turntable and roller ring can be removed for cleaning.
- Wash them in warm, soapy water or in the dishwasher.
- Ensure they are completely dry before placing them back in the oven.

7. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not start	Door not closed properly; Power cord not plugged in; Fuse blown or circuit breaker tripped.	Ensure door is firmly closed; Check power cord connection; Check household fuse/circuit breaker.
Food not cooking evenly	Food not stirred or turned; Incorrect power level or cooking time; Turntable not rotating.	Stir or turn food during cooking; Adjust power level/time; Check if turntable and roller ring are correctly placed.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Excessive steam inside door	Normal condensation from high moisture food.	Wipe the inside of the door after cooking. This is normal.

8. SPECIFICATIONS

Feature	Detail
Brand	MEDION
Model Number	5845
Microwave Power Output	800 Watts

Feature	Detail
Installation Type	Freestanding
ASIN	B0055ZOPII

9. WARRANTY AND SUPPORT

Information regarding specific warranty terms and conditions for the Medion 5845 Microwave Oven is not available in this document. Please refer to the warranty card included with your product or visit the official MEDION website for detailed warranty information and customer support contacts.

For technical assistance or service inquiries, please contact MEDION customer support through their official channels. Always provide your model number (5845) and purchase details when seeking support.

You can visit the official MEDION store on Amazon for more products and information:[MEDION Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0055ZOPII>

More documents and user manuals: <https://manuals.plus/>