

Teka MW-20 BF

Teka MW-20 BF Microwave Oven User Manual

Model: MW-20 BF

INTRODUCTION

Thank you for choosing the Teka MW-20 BF Microwave Oven. This manual provides essential information for the safe and efficient use of your appliance. Please read these instructions carefully before installation and operation, and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic precautions, including:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Regularly inspect the oven for any damage. Do not operate if damaged.

PRODUCT OVERVIEW



Figure 1: Front view of the Teka MW-20 BF Microwave Oven. This image displays the front view of the Teka MW-20 BF microwave oven. It features a white exterior, a transparent glass door, and two rotary control dials on the right side for setting functions and time.

The Teka MW-20 BF is a freestanding microwave oven designed for convenient and efficient food preparation. It features a compact design and user-friendly controls.

SETUP AND INSTALLATION

- Unpacking:** Carefully remove the microwave oven from its packaging. Retain packaging materials for future transport if needed.
- Placement:** Place the oven on a flat, stable surface capable of supporting its weight. Ensure there is adequate ventilation space around the oven (at least 10 cm at the back, 20 cm at the top, and 5 cm on the sides). Do not block air vents.
- Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the appliance.
- First Use:** Before first use, wipe the interior and exterior with a damp cloth. Place the turntable and turntable support ring inside the oven cavity.

OPERATING INSTRUCTIONS

Basic Microwave Cooking

- Place food in a microwave-safe container on the glass turntable.
- Close the oven door securely.
- Use the **Power Level Dial** (typically the top dial) to select the desired cooking power (e.g., High, Medium, Low). The Teka MW-20 BF has 800 watts of power.
- Use the **Timer Dial** (typically the bottom dial) to set the desired cooking time.
- The oven will start automatically once the timer is set. The cooking process stops when the timer reaches zero.

Defrost Function

The defrost function allows for thawing frozen foods. Refer to the markings on the Power Level Dial for specific defrost settings (e.g., by weight or time). Adjust the timer accordingly.

Express Cooking

For quick heating, some models offer an express cooking option. This typically involves setting a short time at full power. Consult the specific markings on your control dials for this feature.

Voice Control (if applicable)

While the product specifications mention "Voice control" and "Microphone" as an interface, this model primarily uses rotary dials. If your specific unit includes advanced voice control features, please refer to supplementary documentation or the manufacturer's website for detailed instructions on activating and using this functionality. For basic models, this feature may refer to simple audible alerts or prompts.

CARE AND MAINTENANCE

- Cleaning the Interior:** After each use, wipe the interior with a damp cloth to remove food splatters. For stubborn stains, use a mild detergent and water. Do not use abrasive cleaners or scouring pads.
- Cleaning the Exterior:** Clean the exterior surface with a soft, damp cloth. Avoid using harsh chemicals.
- Turtable:** The glass turntable and support ring can be removed for cleaning and are dishwasher safe.
- Door Seal:** Keep the door seal clean to ensure proper closure and efficient operation.
- Power Cord:** Regularly check the power cord for any damage. If damaged, it must be replaced by a qualified

service agent.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is securely in outlet; Close door firmly; Check household fuse/circuit breaker.
Food not heating	Incorrect cooking time/power level set; Microwave-safe dish not used.	Adjust time/power; Use appropriate cookware.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Unusual noise during operation	Turntable not correctly placed; Food container touching oven walls.	Ensure turntable is seated properly; Reposition food container.

SPECIFICATIONS

- Model:** Teka MW-20 BF
- Type:** Freestanding Microwave Oven
- Power Output:** 800 Watts
- Material:** Stainless Steel (Internal components), White (Exterior)
- Color:** White
- Control Type:** Rotary Dials (Touch)
- Special Features:** Defrost, Express Cooking, (Voice Control - refer to operating section for clarification)
- ASIN:** B0055ZOT3Y

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or visit the official Teka website. For technical support, service, or spare parts, please contact Teka customer service through their official channels. Always provide your model number (MW-20 BF) and purchase date when seeking assistance. You can find more information and contact details on the [Teka Brand Store on Amazon](#).