

## Teka 40578550

# Teka TMW 20.2 BIS Microwave Oven Instruction Manual

Model: 40578550

Brand: Teka

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Teka TMW 20.2 BIS integrated microwave oven. Designed for modern kitchens, this 800-watt, 18-litre capacity appliance offers convenient and quick cooking solutions. Please read these instructions thoroughly before using the appliance and keep them for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic safety precautions, including the following:

- Read all instructions before using the appliance.
- Ensure the appliance is properly grounded. Connect only to properly grounded outlets.
- Do not operate the oven when empty.
- Do not attempt to operate this oven if it is damaged, particularly the door, door seals, or cavity. Contact qualified service personnel.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Close supervision is necessary when the appliance is used by or near children.
- Regularly clean the oven and remove any food deposits. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

## 3. PRODUCT FEATURES

The Teka TMW 20.2 BIS microwave oven combines functionality with a sleek design, featuring a stainless steel finish and an intuitive button interface.

- **Capacity:** 18 Litres
- **Microwave Power:** 800 Watts
- **Material:** Durable glass components for the door and turntable.
- **Color:** Stainless Steel
- **Installation Type:** Integrated, designed for seamless kitchen integration.

- **Interface:** User-friendly button controls with a digital display.
- **Timer Function:** Includes a convenient timer for precise cooking.



Front view of the Teka TMW 20.2 BIS integrated microwave oven, featuring a stainless steel finish, a digital display, and a control panel with various function buttons and a rotary knob.

## 4. INSTALLATION AND SETUP

Proper installation is crucial for the safe and efficient operation of your microwave oven. As an integrated model, it requires specific cabinet dimensions.

1. **Unpacking:** Carefully remove all packaging materials and accessories. Inspect the oven for any damage, such as dents or a broken door. Do not install if damaged.
2. **Placement:** This appliance is designed for integrated installation into a kitchen cabinet. Ensure adequate ventilation space around the oven as specified in the installation template provided with the product packaging.
3. **Electrical Connection:** Plug the oven into a properly installed and grounded electrical outlet. Ensure the voltage and frequency match the ratings on the appliance's rating label. Do not use extension cords.
4. **Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a soft, damp cloth.
5. **Setting the Clock:** Upon first connection to power, the display may show '0:00' or similar. Refer to the control panel section to set the current time.

## 5. OPERATING YOUR MICROWAVE OVEN

Your Teka microwave oven features intuitive controls for various cooking functions.

### 5.1 Control Panel Overview

The control panel consists of a digital display and a series of buttons and a rotary knob for setting functions, time, and power levels.

- **Digital Display:** Shows time, cooking settings, and indicators.
- **Function Buttons:** Select cooking modes (e.g., microwave, defrost).
- **Time/Weight Buttons:** Adjust cooking time or defrost weight.
- **Power Level Button:** Cycles through available power levels.
- **Start/Pause Button:** Initiates or temporarily stops cooking.
- **Stop/Clear Button:** Cancels current operation or clears settings.

## 5.2 Basic Microwave Cooking

1. Place food in a microwave-safe container and place it on the glass turntable.
2. Close the oven door securely.
3. Press the 'Microwave' function button (if applicable) or directly set the cooking time using the time adjustment buttons/knob.
4. Select the desired power level by pressing the 'Power Level' button repeatedly until the desired level is displayed (e.g., 800W for full power).
5. Press the 'Start' button to begin cooking. The oven will automatically stop when the set time expires.

## 5.3 Defrosting Food

Your microwave offers defrosting by time or by weight.

- **Defrost by Time:** Select the defrost function and set the desired defrosting time.
- **Defrost by Weight:** Select the defrost function and input the weight of the food. The oven will automatically calculate the defrosting time.
- During defrosting, it is recommended to turn or separate food items periodically for even thawing.

## 6. CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Cleaning the Interior:** After each use, wipe the interior with a damp cloth to remove any food splatters. For stubborn stains, use a mild detergent solution. Do not use abrasive cleaners or scouring pads.
- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. For stainless steel, use a specialized stainless steel cleaner to maintain its luster.
- **Cleaning the Turntable:** The glass turntable and turntable ring can be removed for cleaning. Wash them in warm soapy water or in a dishwasher. Ensure they are dry before placing them back in the oven.
- **Odor Removal:** To remove odors from the oven, combine a cup of water with the juice and peel of one lemon in a microwave-safe bowl. Microwave on high for 5 minutes. Wipe the interior with a soft cloth.

## 7. TROUBLESHOOTING

If you encounter any issues with your microwave oven, refer to the table below for common problems and their solutions.

| Problem             | Possible Cause   | Solution   |
|---------------------|--|--|
| Oven does not start | Door not closed properly; Power cord unplugged; Fuse blown or circuit breaker tripped. | Ensure door is firmly closed; Check power cord connection; Check household fuse/circuit breaker. |

| Problem                 | Possible Cause   | Solution   |
|-------------------------|--|--|
| Food not cooking evenly | Food not stirred/turned; Incorrect power level/time; Turntable not rotating. | Stir or turn food during cooking; Adjust power/time settings; Ensure turntable is correctly placed and rotates freely. |
| Light not working       | Bulb burnt out.  | Contact qualified service personnel for bulb replacement.  |
| Oven smells/smokes      | Food residue inside; Overcooked food.  | Clean oven interior thoroughly; Adjust cooking time/power to prevent overcooking.                                      |

## 8. TECHNICAL SPECIFICATIONS

Detailed specifications for the Teka TMW 20.2 BIS microwave oven:

| Specification              | Value                  |
|----------------------------|------------------------|
| Brand                      | Teka                   |
| Model Name                 | TMW 20.2 BIS           |
| Model Number               | 40578550               |
| Color                      | Stainless Steel        |
| Dimensions (L x W x H)     | 32.5 x 59.5 x 39 cm    |
| Capacity                   | 18 Litres              |
| Microwave Power            | 800 Watts              |
| Material                   | Glass (door/turntable) |
| Installation Type          | Integrated             |
| Interface                  | Buttons                |
| Timer Function             | Yes                    |
| International Article Code | 08421152746745         |

## 9. WARRANTY AND CUSTOMER SUPPORT

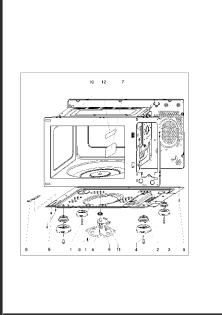
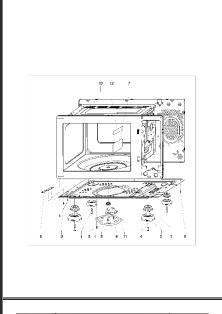
For information regarding the warranty of your Teka TMW 20.2 BIS microwave oven, please refer to the warranty card or documentation provided at the time of purchase. This typically outlines the terms and conditions of the manufacturer's warranty.

Should you require technical assistance, spare parts, or have any questions not covered in this manual, please contact Teka customer support or an authorized service center. Contact details can usually be found on the manufacturer's official website or in your purchase documentation.

Always ensure that any repairs or servicing are carried out by qualified personnel to maintain the safety and

validity of your appliance's warranty.

## Related Documents

|   |   |
|---|---|
|    | <p><b><a href="#">Instrukcja Obsługi Teka MS 620 BIS, ML 820 BIS, ML 8200 BIS - Kuchenka Mikrofalowa</a></b><br/>Kompletna instrukcja obsługi dla kuchenek mikrofalowych Teka MS 620 BIS, ML 820 BIS i ML 8200 BIS. Zawiera informacje o bezpieczeństwie, funkcjach, obsłudze, konserwacji i rozwiązywaniu problemów.</p> |
|    | <p><b><a href="#">Teka TMW.18BI Microwave Exploded Diagram and Parts List</a></b><br/>Detailed exploded view and parts identification for the Teka TMW.18BI microwave oven, providing a visual guide to its components for service and repair purposes.</p>   |
|   | <p><b><a href="#">Teka TMW 18 BI Microwave Oven Exploded View and Assembly Guide</a></b><br/>Detailed exploded view diagrams and assembly information for the Teka TMW 18 BI microwave oven, illustrating component parts and their arrangement for assembly.</p>   |
|  | <p><b><a href="#">Teka NEO Series Ovens: Design and Technology</a></b><br/>Discover the Teka NEO Series ovens, featuring innovative design, advanced technology, and user-friendly features like Push-Pull controls, BrightClean enamel, and AirFry function for a superior cooking experience.</p>                       |

Documents - Teka – 40578550



## [pdf] User Manual

19 23 Micros 10 Maquetaci n 1 MARISA 25719870 8410 manual s icecat biz

Microondas Teka, se integran contigo Teka dispone de una de las gamas de columnas de cocción instaladas y mandos. Medidas exteriores marco incluido mm: 595 ancho, 390 alto, 325 fondo Color: Inox Ref.: **40578550** Precio: 371,00 RAEE: 2,59

lang:es score:26 filesize: 605.8 K page\_count: 5 document\_date: 2010-02-22