



[Manuals.plus](#) /

> [NU](#) /

> NU DP081A Digital Photo Frame User Manual

## NU DP081A

# NU DP081A Digital Photo Frame User Manual

Model: DP081A

## 1. INTRODUCTION

---

Thank you for choosing the NU DP081A Digital Photo Frame. This device allows you to display your favorite digital photos and videos with ease. Please read this manual carefully before operating the device to ensure proper use and to maximize its lifespan. Keep this manual for future reference.

## 2. SAFETY INFORMATION

---

- Do not expose the device to rain or moisture to prevent fire or electric shock hazards.
- Do not open the casing. Refer all servicing to qualified personnel.
- Use only the power adapter supplied with the device. Using an incorrect adapter may damage the device and void your warranty.
- Keep the device away from direct sunlight, heat sources, and extreme temperatures.
- Avoid placing heavy objects on the device.
- Clean the screen with a soft, dry cloth. Do not use liquid cleaners or aerosols.

## 3. PACKAGE CONTENTS

---

Please check the package contents upon unboxing. If any items are missing or damaged, contact your retailer.

- NU DP081A Digital Photo Frame
- Power Adapter
- User Manual (this document)

## 4. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your NU DP081A Digital Photo Frame.



**Image 4.1:** Front view of the NU DP081A Digital Photo Frame, showing the 8-inch display and a detachable stand. The frame is black with a simple, clean design.

#### 4.1 Front Panel

- **8-inch LCD Screen:** Displays photos and videos.

#### 4.2 Rear Panel / Side Panel

- **Power Input:** Connects to the AC power adapter.
- **USB Port:** For connecting USB flash drives.
- **SD/MMC Card Slot:** For inserting SD or MMC memory cards.
- **Control Buttons:** Navigation and menu control (specific layout may vary, refer to on-screen prompts).
- **Stand Slot:** For attaching the included stand.

## 5. SETUP

---

### 5.1 Power Connection

1. Insert the small end of the power adapter into the DC IN port on the back or side of the photo frame.
2. Plug the other end of the power adapter into a standard electrical outlet.
3. The frame should power on automatically or display a power indicator light.

### 5.2 Initial Setup

1. Upon first power-on, the frame may prompt you to select a language. Use the control buttons to navigate and confirm your selection.
2. Insert a USB flash drive or SD/MMC card containing your digital photos and videos into the appropriate slot.
3. The frame should automatically detect the media and begin displaying content or prompt you to select a mode (e.g., Photo, Video, Music).

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Basic Navigation

The NU DP081A is controlled via touch or physical buttons, depending on the specific model variant. Use the directional buttons (Up, Down, Left, Right) to navigate through menus and options. The 'OK' or 'Enter' button confirms selections, and the 'Menu' or 'Exit' button typically returns to the previous screen or main menu.

### 6.2 Viewing Photos

1. From the main menu, select "Photo" or "Slideshow".
2. The frame will display photos from the inserted memory card or USB drive.
3. You can typically adjust slideshow intervals, transition effects, and display order in the settings menu.

### 6.3 Playing Videos

The DP081A supports video playback. Ensure your video files are in a compatible format (e.g., AVI, MP4, MOV). Refer to the specifications section for supported formats.

1. From the main menu, select "Video".
2. Navigate to the desired video file and press 'OK' to play.
3. Playback controls (Play/Pause, Stop, Fast Forward/Rewind) are usually available via the control buttons.

### 6.4 Playing Music

The frame can also play background music during photo slideshows or as a standalone feature.

1. From the main menu, select "Music".
2. Browse your music files and select one to play.
3. Adjust volume using the dedicated buttons or through the settings menu.

### 6.5 Settings Menu

Access the settings menu to customize various aspects of your photo frame.

- **Display Settings:** Brightness, contrast, aspect ratio.
- **Slideshow Settings:** Interval, transition effects, repeat mode.
- **System Settings:** Language, time, date, auto power on/off, factory reset.
- **Memory Management:** View storage information.

## 7. MAINTENANCE

---

### 7.1 Cleaning

- Always unplug the power adapter before cleaning.
- Use a soft, dry, lint-free cloth to gently wipe the screen and frame.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the surface.

### 7.2 Storage

When not in use for extended periods, store the photo frame in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to keep the original packaging for storage.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected or faulty.	Ensure the power adapter is securely connected to both the frame and the electrical outlet. Try a different outlet.
No images displayed.	No memory card/USB drive inserted, or files are not supported.	Insert a memory card or USB drive with compatible image files (e.g., JPEG). Check file formats.
Images appear distorted.	Incorrect aspect ratio setting.	Adjust the aspect ratio setting in the display menu to match your photos.
Buttons are unresponsive.	Temporary software glitch.	Unplug the power adapter, wait 10 seconds, then plug it back in to restart the device.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	DP081A
Brand	NU
Screen Size	8 Inches
Power Source	Electric Cable
Memory Storage Capacity	256 MB (Internal)
Control Method	Touch (or Button, depending on variant)
Supported Media	SD/MMC Card, USB Flash Drive
Supported Image Formats	JPEG (Commonly supported, specific list not provided)
Supported Video Formats	AVI, MP4, MOV (Commonly supported, specific list not provided)
Supported Audio Formats	MP3 (Commonly supported, specific list not provided)
Global Trade Item Number (GTIN)	08738420001148

*Note: Specifications are subject to change without notice. For the most accurate and up-to-date information, please refer to the product packaging or manufacturer's website.*

## 10. WARRANTY INFORMATION

The NU DP081A Digital Photo Frame comes with a standard manufacturer's warranty. The duration and terms of the warranty may vary by region and retailer. Please retain your proof of purchase for warranty claims. For detailed warranty information, refer to the warranty card included in your product packaging or contact your point of purchase.

This warranty typically covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or natural disasters.

## 11. CUSTOMER SUPPORT

---

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact NU customer support. Contact information can typically be found on the product packaging, the manufacturer's official website, or through your retailer.

When contacting support, please have your product model number (DP081A) and proof of purchase ready.