

NOVY 876

NOVY 876 Ceiling Integrated Cooker Hood User Manual

Model: 876

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient installation, operation, and maintenance of your NOVY 876 Ceiling Integrated Cooker Hood. Please read this manual thoroughly before using the appliance and retain it for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your cooker hood.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- **Electrical Safety:** Ensure the power supply matches the voltage specified on the rating plate. Disconnect the appliance from the mains before any cleaning or maintenance.
- **Installation:** Installation must be performed by a qualified technician in accordance with local regulations and building codes. Ensure adequate ventilation in the room when the cooker hood is used simultaneously with gas or other fuel-burning appliances.
- **Flammable Materials:** Do not flambé under the cooker hood. Never leave frying pans unattended during use, as overheated oil can ignite.
- **Children:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Cleaning:** Regularly clean the appliance and its filters according to the instructions to prevent grease build-up, which can be a fire hazard.

3. PRODUCT OVERVIEW

The NOVY 876 is a high-quality ceiling-integrated cooker hood designed for efficient extraction of cooking

fumes and odors. Its sleek design, featuring glass and stainless steel, seamlessly blends into modern kitchen aesthetics.



Figure 1: The NOVY 876 cooker hood, shown integrated into a white ceiling. The hood features a central extraction panel with a control knob visible on the right side of the unit. The design is minimalist and flush with the ceiling surface.

Key Components:

- **Extraction Panel:** The primary surface for air intake.
- **Control Knob:** Used to adjust fan speed and lighting (if applicable).
- **Grease Filters:** Removable filters located behind the extraction panel to capture grease particles.
- **Motor Unit:** Provides the suction power for air extraction.
- **Lighting (if equipped):** Integrated lights to illuminate the cooking area.

4. SETUP AND INSTALLATION

The NOVY 876 cooker hood is designed for ceiling integration. Due to the complexity and safety requirements, professional installation is highly recommended.

General Installation Considerations:

1. **Ceiling Preparation:** Ensure the ceiling structure can support the weight of the cooker hood (approximately 17.4 kg) and that there is sufficient space for the unit and ducting.
2. **Ducting System:** Connect the cooker hood to an appropriate ducting system that vents to the outside. Ensure the ducting is correctly sized and sealed to maximize extraction efficiency and minimize noise. The hood is designed for ducted operation.
3. **Electrical Connection:** A dedicated electrical circuit may be required. All electrical connections must comply with local wiring regulations.
4. **Minimum Distance:** Maintain the minimum required distance between the cooking surface and the cooker hood as specified in local regulations and the detailed installation guide (not provided in this general manual).

For detailed installation instructions, please refer to the separate installation manual provided with your

appliance or consult a qualified installer.

5. OPERATING INSTRUCTIONS

The NOVY 876 cooker hood is operated via a control knob, typically located on the unit itself or via a remote control (if included).

Basic Operation:

- **Power On/Off:** Turn the control knob to activate or deactivate the cooker hood.
- **Fan Speed Adjustment:** Rotate the control knob to select the desired extraction speed. Higher speeds are suitable for intense cooking, while lower speeds are for lighter cooking or maintaining air quality.
- **Lighting Control:** If your model includes integrated lighting, the control knob may also be used to switch the lights on or off, or adjust their intensity.

It is recommended to switch on the cooker hood a few minutes before you start cooking and leave it running for a few minutes after you finish to ensure all fumes and odors are effectively removed.

6. MAINTENANCE

Regular maintenance is crucial for the efficient and safe operation of your cooker hood.

Cleaning the Appliance:

- **Exterior Surfaces:** Clean the glass and stainless steel surfaces with a soft cloth and a mild, non-abrasive cleaning agent. Avoid harsh chemicals or abrasive pads that could scratch the finish.
- **Grease Filters:** The metal grease filters should be cleaned regularly, typically every 2-4 weeks depending on usage.
 - a. Remove the filters by following the instructions in your detailed product manual.
 - b. Wash the filters by hand in hot soapy water or in a dishwasher on a low-temperature cycle.
 - c. Ensure filters are completely dry before re-installing them.

Failure to clean the grease filters regularly can lead to reduced extraction performance and an increased risk of fire.

7. TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

- **Cooker hood does not operate:**
 - Check if the appliance is properly plugged into the power outlet.
 - Verify if the circuit breaker has tripped.
 - Ensure the control knob is turned to an active setting.
- **Poor extraction performance:**
 - Clean the grease filters; they may be clogged.
 - Check for obstructions in the ducting system.
 - Ensure windows and doors are not creating excessive drafts that interfere with airflow.

- **Unusual noise:**
 - Check if the grease filters are correctly installed.
 - Inspect the fan for any foreign objects.
 - Ensure the ducting is securely fitted and not vibrating.

If the problem persists after checking these points, please contact a qualified service technician.

8. SPECIFICATIONS

NOVY 876 Cooker Hood Specifications

| Feature | Detail |
|------------------------|--------------------------------|
| Brand | NOVY |
| Model Number | 876 |
| Type | Ceiling Integrated Cooker Hood |
| Dimensions (L x W x H) | 83.79 x 30.1 x 30.2 cm |
| Weight | 17.4 kg |
| Material | Glass, Stainless Steel |
| Noise Level | 58 Decibels |
| Power | 15 Watts |
| Filter Type | Baffle (Deflector) |
| Extraction Capacity | 350 m ³ /h |

9. WARRANTY AND SUPPORT

NOVY products are manufactured to high-quality standards. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your purchase or visit the official NOVY website. For technical support, spare parts, or service requests, please contact your local NOVY dealer or authorized service center.

Please have your model number (876) and purchase date available when contacting support.

