

[Manuals.plus](#) /

› [SINGER](#) /

› SINGER 00562 ProSeries 9-1/2-Inch Heavy Duty Bent Sewing Scissors User Manual

SINGER 00562

SINGER 00562 ProSeries 9-1/2-Inch Heavy Duty Bent Sewing Scissors User Manual

Model: 00562 | Brand: SINGER

INTRODUCTION

The SINGER ProSeries 9-1/2-inch bent scissors are designed for precision cutting of various materials, particularly fabric. These heavy-duty shears are crafted for durability and comfort, making them suitable for dressmakers, tailors, and crafters. The blades are tempered and ground on both sides to ensure consistent sharpness, smooth cutting action, and resistance to rust. Each pair is individually inspected and hand-tested to meet quality standards and is suitable for both left- and right-handed users.



Image: SINGER ProSeries Bent Sewing Scissors positioned on a sewing pattern, accompanied by sewing pins and a marking pencil. This illustrates the typical use environment for these scissors.

KEY FEATURES

- **9.5-inch Heavy Duty Design:** Provides extended reach and leverage for cutting larger pieces of material.
- **Bent Handles:** Ergonomically designed to keep fabric flat on the cutting surface, allowing for precise, uninterrupted cuts.
- **Rubberized Comfort Grip:** Ensures a comfortable and secure hold, reducing hand fatigue during prolonged use.
- **Tempered and Ground Blades:** Stainless steel blades are treated for increased sharpness, smooth cutting, and enhanced durability.
- **Ambidextrous Use:** Designed to be comfortable and effective for both left-handed and right-handed individuals.
- **Quality Tested:** Each pair is individually inspected and hand-tested to ensure optimal performance.



SINGER®



Easily Cuts
multiple layers



Soft Grip



**Right- and Left-
Handed**

1 Pair

Image: A visual diagram highlighting the 9.5-inch length of the scissors, the soft grip feature, and their suitability for both right- and left-handed users.



**Deep-Seated Blades
and Bent Handles**
for maximum cutting
power

Image: A detailed view of the deep-seated blades and bent handle design, emphasizing how these features contribute to cutting power.



Tempered & Ground Blades
on both sides to ensure sharpness, smooth cutting and rust resistance



SINGER®

Image: A close-up shot of the scissor blades, illustrating their tempered and ground finish for superior sharpness and rust resistance.

SETUP

These scissors require minimal setup. Upon receiving your SINGER ProSeries scissors, please follow these steps:

1. **Unpack:** Carefully remove the scissors from their packaging.
2. **Inspect:** Examine the scissors for any visible damage or manufacturing defects. Ensure the blades open and close smoothly.
3. **Initial Cleaning:** Wipe the blades with a clean, dry cloth to remove any residual manufacturing oils or dust.

OPERATING INSTRUCTIONS

The SINGER ProSeries bent scissors are designed for cutting various materials, primarily fabric. Proper technique ensures clean cuts and extends the life of your scissors.

- **Holding the Scissors:** Insert your thumb into the smaller handle loop and two or more fingers into the larger loop. The rubberized grip provides comfort and control.
- **Positioning Fabric:** Lay the fabric flat on a cutting surface. The bent handle design allows the lower blade to remain flat on the surface, preventing the fabric from lifting and ensuring a straight, accurate cut.
- **Cutting Motion:** Use long, smooth strokes for continuous cuts. For intricate details, use the tips of the blades. Avoid 'chewing' the fabric with short, choppy cuts.
- **Material Suitability:** These scissors are ideal for cutting multiple layers of fabric, denim, paper, and other crafting

materials. Avoid using them on excessively thick or hard materials that may dull or damage the blades.

- **Ambidextrous Use:** The symmetrical handle design allows comfortable use for both left-handed and right-handed individuals without compromising cutting performance.

TPR Grip Handles

Designed to reduce hand fatigue and increase comfort, even in long crafting sessions



Image: A hand demonstrating the use of SINGER ProSeries scissors to cut fabric, highlighting the comfortable TPR grip handles.

Video: An official SINGER video showcasing the ProSeries Collection, including these scissors, demonstrating their features and applications in various crafting and sewing tasks.

MAINTENANCE

Proper maintenance will ensure the longevity and performance of your SINGER ProSeries scissors.

- **Cleaning:** After each use, wipe the blades with a soft, dry cloth to remove any fabric fibers, dust, or residue. For stubborn residue, a cloth lightly dampened with rubbing alcohol can be used, followed by a dry wipe.
- **Lubrication:** Occasionally, apply a small drop of sewing machine oil or a specialized scissor lubricant to the pivot point to maintain smooth operation. Wipe off any excess oil.
- **Sharpening:** Over time, even high-quality blades will dull. For best results, have your scissors professionally sharpened. If using a home sharpener, ensure it is designed for fabric shears and follow the sharpener's instructions.

carefully.

- **Storage:** Store your scissors in a dry place, ideally in a protective sheath or case, to prevent accidental damage and protect the blades from moisture and dust. Keep them away from other tools that could nick the blades.

TROUBLESHOOTING

Here are solutions to common issues you might encounter with your scissors:

- **Blades Feel Dull:** If the scissors are no longer cutting cleanly or are snagging fabric, they likely need sharpening. Refer to the 'Maintenance' section for sharpening recommendations.
- **Blades Feel Sticky or Stiff:** This can be caused by accumulated residue or lack of lubrication. Clean the blades thoroughly and apply a small amount of lubricant to the pivot point as described in the 'Maintenance' section.
- **Difficulty Cutting Specific Materials:** Ensure the material is suitable for these scissors. While heavy-duty, extremely thick or abrasive materials can be challenging. Adjust your cutting technique, ensuring long, steady strokes.
- **Uneven Cuts:** This may indicate dull blades or improper cutting technique. Ensure the fabric is flat and you are using the full length of the blades for long cuts.

SPECIFICATIONS

Model Number	00562
Brand	SINGER
Blade Material	Alloy Steel (Stainless Steel)
Handle Material	Rubber
Color	Teal
Product Dimensions (L x W)	0.63" x 3.75"
Item Weight	4.64 ounces
Blade Edge	Straight
Hand Orientation	Ambidextrous

WARRANTY AND SUPPORT

The SINGER ProSeries 9-1/2-Inch Heavy Duty Bent Sewing Scissors come with a **Lifetime Guarantee**. This guarantee covers manufacturing defects and ensures the quality of the product under normal use. For warranty claims or further assistance, please refer to the contact information provided with your product packaging or visit the official SINGER website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00566E8QK>

More documents and user manuals: **<https://manuals.plus/>**