

## Timex T5K417SU

# Timex Ironman Classic 30 Oversized Watch (Model T5K417SU) User Manual

Your guide to setting up, operating, and maintaining your Timex watch.

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

## INTRODUCTION

The Timex Ironman Classic 30 Oversized Watch is designed for durability and functionality, offering essential features for active lifestyles. This manual provides detailed instructions to help you maximize your watch's capabilities.

## SETUP

### 1. Initial Time and Date Setting

To set the time and date, locate the **SET/RECALL** button on the watch. Press and hold this button until the display begins to flash, indicating setup mode. Use the **START/SPLIT** and **STOP/RESET** buttons to adjust values, and the **MODE** button to cycle through settings such as hours, minutes, seconds, year, month, and day. Press **SET/RECALL** again to confirm and exit setup.



Image: Front view of the Timex Ironman Classic 30 Oversized Watch. The digital display shows the current time and date, with various function labels around the bezel.

## 2. Strap Adjustment

The adjustable black resin strap is designed to fit wrist circumferences up to 8 inches. Adjust the buckle to ensure a comfortable and secure fit. Avoid overtightening, which can restrict circulation, or leaving it too loose, which may affect sensor accuracy (if applicable) or cause the watch to move excessively.

## 3. Battery Information

Your watch comes with one Lithium Metal battery pre-installed. Battery life varies based on usage. When the

display dims or functions become erratic, it may be time for a battery replacement. Refer to the Maintenance section for more details.

## OPERATION

The watch features a five-button design for easy navigation and access to its various functions.



Image: Side view of the watch, highlighting the **MODE** and **SET/RECALL** buttons on the left side of the watch case.

### 1. Basic Time Display

In the default time mode, the watch displays the current time, day, date, and month. Press the **INDIGLO** button to activate the night-light for visibility in low-light conditions.

### 2. Indiglo Night-Light

Press the **INDIGLO** button (top right) to illuminate the watch face. This feature is useful for reading the time in dark environments.

### 3. Chronograph (Stopwatch)

To access the chronograph, press the **MODE** button until "CHRONO" appears on the display.

- Press **START/SPLIT** to begin timing.
- Press **START/SPLIT** again to record a lap time without stopping the main timer.
- Press **STOP/RESET** to pause the chronograph.
- Press **STOP/RESET** again (while paused) to reset to zero.

The watch can store up to 30 lap times in its memory. To recall lap times, use the **SET/RECALL** button in chronograph mode.

### 4. Countdown Timer

Navigate to the timer mode by pressing the **MODE** button.

- To set the timer, press and hold **SET/RECALL**. Adjust hours, minutes, and seconds using **START/SPLIT** and **STOP/RESET**. Press **SET/RECALL** to save.
- Press **START/SPLIT** to begin the countdown.
- Press **STOP/RESET** to pause or resume.
- When the timer reaches zero, an alarm will sound.

The timer supports up to 24 hours.

### 5. Alarms

The watch features three customizable alarms (daily, weekday, or weekend).

- Press **MODE** to cycle to the alarm mode.
- Press and hold **SET/RECALL** to select and set an alarm. Adjust the time and alarm type (daily, weekday, weekend) using **START/SPLIT** and **STOP/RESET**.
- Press **SET/RECALL** to save.
- To activate or deactivate an alarm, press **START/SPLIT** in alarm mode.

### 6. Dual Time Zones (T2)

The watch allows you to track a second time zone.

- In time mode, press **START/SPLIT** to toggle between Time Zone 1 (T1) and Time Zone 2 (T2).
- To set T2, navigate to T2 display, then press and hold **SET/RECALL**. Adjust the time as needed.

### 7. Water Resistance

This watch is water resistant to 100 meters (330 feet). It is suitable for swimming and snorkeling. **It is not suitable for scuba diving.** Avoid pressing buttons underwater to maintain water resistance integrity.

## MAINTENANCE

---

### 1. Cleaning Your Watch

Regularly clean your watch with a soft, damp cloth. For resin straps, mild soap and water can be used. Ensure the watch is completely dry before storage or prolonged use. Avoid harsh chemicals or abrasive materials.



## 2. Battery Replacement

When the battery needs replacement, it is recommended to have it done by a qualified watch technician or an authorized Timex service center. This ensures proper sealing and maintains the watch's water resistance. Attempting to replace the battery yourself may void the warranty and compromise water resistance.



Image: Back view of the watch, displaying the stainless steel case back where battery access is located.

## 3. Strap Care

The resin strap is durable but can show wear over time. Avoid prolonged exposure to direct sunlight, extreme temperatures, and harsh chemicals to extend its lifespan. Replacement straps can be purchased from authorized retailers or directly from Timex.

## TROUBLESHOOTING

Problem	Possible Cause / Solution
Display is blank or dim.	Battery may be low or depleted. Replace the battery.
Buttons are unresponsive.	Ensure no buttons are stuck. If issue persists, a soft reset (removing and reinserting battery) may be needed by a professional.
Time is inaccurate.	Re-set the time and date as per the "Initial Time and Date Setting" instructions. Ensure the watch is not exposed to strong magnetic fields.
Water appears inside the watch.	Water resistance may be compromised. Avoid further water exposure and seek professional service immediately.

For issues not listed here, please contact Timex Customer Service.

## SPECIFICATIONS

- **Model Number:** T5K417SU
- **Case Diameter:** 43mm
- **Case Material:** Resin
- **Lens Material:** Acrylic
- **Strap Material:** Resin
- **Strap Width:** 20mm
- **Water Resistance:** 100m (330ft) - Suitable for swimming and snorkeling, not diving.
- **Chronograph:** 100-hour with 30-lap memory
- **Countdown Timer:** 24-hour
- **Alarms:** 3 daily, weekday, or weekend alarms
- **Time Modes:** 24-hour military time, 2 time zones
- **Display:** Day, date, month calendar
- **Backlight:** Indiglo light-up watch dial
- **Battery:** 1 Lithium Metal battery (included)
- **Product Dimensions:** 3.94 x 3.94 x 1.97 inches
- **Item Weight:** 1.6 ounces



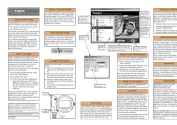



## WARRANTY AND SUPPORT

For warranty information, detailed support, or to purchase replacement parts, please visit the official Timex website or contact Timex Customer Service.

**Timex Customer Service:** 1-888-727-2931 (as per customer review, verify with official sources for current number)

You can also visit the [Timex Store on Amazon](#) for more products and information.

Related Documents - T5K417SU

	<p><a href="#">Timex Ironman Transit+ Watch User Guide</a></p> <p>Comprehensive user guide for the Timex Ironman Transit+ Watch, detailing features like heart rate monitoring, activity tracking, workout modes, and essential functions for athletes and fitness enthusiasts. Learn to use your watch effectively with this official manual.</p>
	<p><a href="#">Timex Ironman Watch User Manual</a></p> <p>Comprehensive user manual for the Timex Ironman watch, detailing features, operations, and maintenance. Covers time, chronograph, timer, alarms, occasions, INDIGLO night-light, water resistance, and warranty.</p>
	<p><a href="#">Timex Ironman Data Link USB Quick Start Guide</a></p> <p>A quick start guide for the Timex Ironman Data Link USB watch, covering software installation, watch setup, features, technical support, and warranty information.</p>
	<p><a href="#">Timex Ironman 50-Lap Watch User Manual</a></p> <p>Comprehensive user manual for the Timex Ironman 50-Lap watch, detailing features, operations, and maintenance for optimal use.</p>
	<p><a href="#">TIMEX IRONMAN R300 GPS Watch Quick Start Guide</a></p> <p>Get started with your TIMEX IRONMAN R300 GPS Watch. This quick start guide provides essential information to help you set up, pair with your smartphone, and navigate the features of your new smartwatch.</p>
	<p><a href="#">TIMEX IRONMAN Classic 50 Move+ Instruction Manual - Features, Setup, and App Guide</a></p> <p>Get detailed instructions for your TIMEX IRONMAN Classic 50 Move+ smartwatch. Learn about setup, activity tracking, app sync, and all features with this official user manual.</p>