

DJ Tech POKETDJ

DJ Tech Poket DJ Controller User Manual

Model: POKETDJ

INTRODUCTION

The DJ Tech Poket DJ is a compact and portable digital DJ controller designed for aspiring DJs and music enthusiasts. It integrates essential DJ functions into a single device, allowing users to mix and scratch tracks with ease. This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your Poket DJ controller.

PRODUCT OVERVIEW



Figure 1: Top View of Poket DJ Controller. This image displays the main control surface, including the two jog wheels, central mixer section, and various control buttons for effects, cues, and loops.



Figure 2: Rear View of Poket DJ Controller. This image shows the back panel of the device, featuring the USB connection port for connecting to a computer.

Key Features:

- USB DJ controller with integrated soundcard.
- High-quality 16-Bit @44.1kHz sound interface.
- Master output and headphone output.
- Two high definition jog wheels for precise control.
- Pitch, Scratch, Search, FX, and EQ Control capabilities.
- Multi-function buttons for autoloop, hot cues, and sampler.
- Beatmatch counter for each deck.
- Includes Deckadance LE DJ software for PC or Mac.

SETUP GUIDE

1. System Requirements

Ensure your computer meets the minimum requirements for Deckadance LE software. Typically, this includes a compatible operating system (Windows or macOS) and sufficient processing power and RAM for audio processing.

2. Software Installation

1. Insert the Deckadance LE installation disc into your computer's optical drive, or download the software from the official DJ Tech website if a download link was provided.
2. Follow the on-screen instructions to complete the software installation.
3. Once installed, launch Deckadance LE.

3. Hardware Connection

1. Connect the Poket DJ controller to an available USB port on your computer using the provided USB cable.
2. The computer should automatically detect and install the necessary drivers. If not, refer to the software's documentation for manual driver installation.
3. Connect your headphones to the headphone output jack on the controller for monitoring.
4. Connect the master output of the Poket DJ to your amplifier or powered speakers using appropriate audio cables.

Note: For optimal performance, ensure all connections are secure before powering on your audio system.

OPERATING INSTRUCTIONS

1. Loading Tracks

- Open Deckadance LE software.
- Navigate your music library within the software interface. The Poket DJ supports direct integration with iTunes libraries.
- Use the "Load" buttons on the controller (typically labeled A and B) to assign tracks to each deck.

2. Basic Mixing

- Use the central mixer section's faders to control the volume of each deck.
- Adjust the crossfader to blend between Deck A and Deck B.

- Utilize the EQ knobs (High, Mid, Low) for each deck to shape the sound.

3. Jog Wheel Functions

- **Scratch Mode:** Touch the top surface of the jog wheel to scratch the track.
- **Pitch Bend:** Use the outer rim of the jog wheel to temporarily adjust the track's speed for beatmatching.
- **Search Mode:** Hold the "Shift" button and rotate the jog wheel to quickly navigate through a track.

4. Hot Cues and Loops

- **Hot Cues:** Press the dedicated hot cue buttons to set and recall cue points within a track.
- **Auto Loops:** Use the auto loop buttons to instantly create loops of predefined lengths (e.g., 1/8, 1/4, 1/2, 1, 2, 4, 8 beats).

5. Effects (FX) Control

The Poket DJ features dedicated FX controls. Refer to the Deckadance LE software manual for detailed information on available effects and their parameters. Typically, you can select an effect and adjust its intensity using the FX knob.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the surface of the controller. Avoid using abrasive cleaners or solvents.
- **Storage:** Store the Poket DJ in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Management:** Ensure USB and audio cables are not kinked or strained to prevent damage.
- **Software Updates:** Periodically check the DJ Tech website for software and driver updates for Deckadance LE to ensure optimal performance and compatibility.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller not recognized by computer.	Loose USB connection, incorrect drivers, faulty USB port.	Ensure USB cable is securely connected. Try a different USB port. Reinstall drivers if necessary.
No sound output.	Incorrect audio output settings in software, volume levels too low, faulty audio cables.	Check audio output settings in Deckadance LE. Increase master and deck volumes. Verify audio cable connections to speakers/amplifier.
Software freezing or crashing.	Outdated software/drivers, insufficient system resources, conflicting software.	Update Deckadance LE and controller drivers. Close unnecessary applications. Restart computer.
Jog wheels unresponsive or erratic.	Dust/debris under jog wheel, software calibration issue.	Gently clean around jog wheels. Check software settings for jog wheel calibration if available.

SPECIFICATIONS

Model: POKETDJ
Brand: DJ Tech
Connectivity: USB
Audio Resolution: 16-Bit
Sampling Rate: 44.1 / 48 kHz
Line Output Level: 0.9V (Typical)
Phones Output Level: 1.3V (Typical)
THD+N (Line): 0.02% (Typical)
S/N Ratio (Line): 90dB (Typical)
Item Weight: 1.47 pounds (0.67 kg)
Product Dimensions: 6.1 x 6.1 x 3.25 inches (15.5 x 15.5 x 8.3 cm)
Color: Black

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official DJ Tech website. Specific warranty terms may vary by region and retailer.
For further assistance, please contact DJ Tech customer support through their official channels.

© 2024 DJ Tech. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0056L2XFI>

More documents and user manuals: <https://manuals.plus/>