

Manuals.plus /

- › KODAK /
- › Kodak EasyShare Z5010 Digital Camera Instruction Manual

## KODAK Z5010

# Kodak EasyShare Z5010 Digital Camera Instruction Manual

Model: Z5010

## INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Kodak EasyShare Z5010 Digital Camera. Please read it thoroughly to ensure proper use and to maximize your camera's performance.

The Kodak EasyShare Z5010 is a 14-megapixel digital camera featuring a SCHNEIDER-KREUZNACH 21x optical zoom lens with optical image stabilization, a 25mm wide-angle lens, and a 3-inch bright LCD. It incorporates Kodak's Smart Capture Technology for simplified photography.

## SETUP

### 1. Battery Installation

The Kodak EasyShare Z5010 requires four AA batteries. Open the battery compartment cover, typically located on the bottom or side of the camera. Insert the batteries according to the polarity indicators (+/-) inside the compartment. Close the cover securely.



Image: Top view of the Kodak EasyShare Z5010 camera, showing the mode dial and control buttons. The battery compartment is located on the bottom of the camera, not visible in this view.

### 2. Memory Card Insertion

The camera supports SD/SDHC memory cards. Locate the memory card slot, usually near the battery compartment.

Insert the memory card with the metal contacts facing the correct direction, as indicated by a diagram near the slot, until it clicks into place. To remove, press the card gently until it springs out.

### 3. Attaching the Lens Cap

Attach the provided lens cap to protect the camera lens when not in use. Ensure it is securely fitted. Remember to remove the lens cap before turning on the camera or taking pictures.

### 4. Initial Power On

Press the power button, typically located on the top of the camera, to turn it on. The lens will extend, and the LCD screen will activate. Follow any on-screen prompts for initial setup, such as setting the date and time.



Image: Front angle view of the Kodak EasyShare Z5010 camera, highlighting the lens and the camera's overall form factor.

## OPERATING THE CAMERA

---

### 1. Turning the Camera On/Off

Press the **On/Off** button located on the top of the camera to power it on or off. The lens will extend or retract accordingly.

### 2. Basic Photography (Smart Capture)

For most situations, set the mode dial to **Smart Capture**. This mode automatically analyzes the scene and adjusts camera settings for optimal results. To take a picture, press the shutter button halfway to focus, then press it fully to capture the image.

Other shooting modes include Landscape, Night Portrait, and Portrait, accessible via the mode dial for specific photographic scenarios.



Image: Front view of the Kodak EasyShare Z5010 camera, showing the lens and grip. This is the primary view of the camera.

### 3. Using the Zoom

Use the zoom lever, typically located around the shutter button, to adjust the 21x optical zoom. Push the lever towards 'T' (Telephoto) to zoom in and 'W' (Wide) to zoom out. The 25mm wide-angle capability allows for capturing broader scenes.

### 4. Flash Modes

The camera features a built-in flash with multiple modes: Auto, Fill-in (On), and Off. Access these settings through the camera's menu or a dedicated flash button to suit different lighting conditions.

### 5. Video Recording

To record video, switch the mode dial to the video recording icon. Press the shutter button to start recording and press it again to stop. The camera records in HD 720p resolution.

### 6. Image Playback

Press the **Playback** button (often indicated by a triangle icon) to review your photos and videos on the 3-inch bright LCD screen. Use the directional pad to navigate through your captured media.



Image: Back view of the Kodak EasyShare Z5010 camera, displaying the 3-inch LCD screen and control buttons for navigation and playback.

## MAINTENANCE

---

### 1. Cleaning the Camera

- **Lens:** Use a soft, lint-free cloth or a lens brush to gently remove dust. For smudges, use a specialized lens cleaning solution applied to the cloth, not directly to the lens.
- **LCD Screen:** Wipe with a soft, dry cloth. Avoid harsh chemicals.
- **Camera Body:** Use a soft, dry cloth to wipe away dust and fingerprints. Do not use solvents or abrasive cleaners.

### 2. Storage

Store the camera in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Remove batteries if the camera will not be used for an extended period to prevent leakage.

## TROUBLESHOOTING

---

- **Camera does not turn on:** Check if batteries are inserted correctly and fully charged. Ensure the lens cap is removed.
- **Blurry photos:** Ensure the lens is clean. Check lighting conditions and use flash if necessary. Hold the camera steady or use a tripod, especially when using high zoom or in low light.
- **Battery drains quickly:** Use fresh, high-quality AA batteries. Reduce LCD brightness or turn off unnecessary features.
- **Memory card error:** Ensure the memory card is inserted correctly. Try formatting the card (this will erase all data) or use a different card.

## SPECIFICATIONS

---

<b>Model Name</b>	Kodak EasyShare Z5010
<b>Photo Sensor Resolution</b>	14 MP
<b>Optical Zoom</b>	21x
<b>Lens Type</b>	SCHNEIDER-KREUZNACH, 25mm Wide Angle
<b>Image Stabilization</b>	Optical
<b>Screen Size</b>	3 Inches LCD
<b>Video Resolution</b>	HD 720p
<b>Supported File Format</b>	JPEG (Stills), AVC (Video)
<b>Power Source</b>	4 AA Batteries
<b>Memory Storage</b>	SD/SDHC card, 90 MB Internal
<b>Connectivity</b>	HDMI, USB
<b>Item Weight</b>	15.68 ounces

## WARRANTY AND SUPPORT

---

### Warranty Information

For detailed warranty information, please refer to the documentation included with your purchase or visit the official KODAK website. Warranty terms and conditions may vary by region and purchase date.

### Customer Support

If you encounter issues not covered in this manual or require further assistance, please visit the official KODAK support website or contact their customer service department. Contact details can typically be found on the manufacturer's website.