

Cloer 5218NA

Cloer 5218NA 12-Cup Coffee Maker Instruction Manual

Model: 5218NA | Brand: Cloer

INTRODUCTION

Thank you for choosing the Cloer 5218NA 12-Cup Coffee Maker. This appliance features a patented temperature-stabilized brewing system designed to maintain a constant water temperature of 200°F (93°C) for optimal coffee extraction. A secondary water chamber pre-heats water, ensuring consistent brewing temperature. The shower head is equipped with 18 holes for even water distribution over coffee grounds, enhancing flavor extraction. This manual provides essential information for the safe and efficient operation, maintenance, and care of your coffee maker.

Key Features:

- Automatic shut-off after 2 hours for safety and energy saving.
- Push-button swing-out removable filter basket, compatible with cone-shaped #4 filters, for easy access and cleaning.
- Pause & serve function allows pouring a cup during the brewing cycle.
- Keep warm plate to maintain coffee temperature.
- Hidden cord storage for a tidy countertop.
- Accepts Mavea Maxtra water filter cartridge (not included) for improved water quality.
- Removable water tank with graduated cup markings for convenient filling.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.
- The appliance is for household use only.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and inspect the coffee maker for any damage.
2. **Initial Cleaning:** Before first use, wash the carafe, filter basket, and lid in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
3. **Positioning:** Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of the counter.
4. **First Brew Cycle (Cleaning):**
 - Fill the water tank with cold water up to the 12-cup mark.
 - Place an empty filter (paper or permanent) into the filter basket.
 - Close the lid and place the empty carafe on the warming plate.
 - Press the **ON/OFF** button to start a brew cycle without coffee.
 - Once the cycle is complete, discard the water from the carafe. Repeat this process once or twice to ensure the system is clean.

OPERATING INSTRUCTIONS

1. Fill Water Tank:

Remove the water tank from the unit or open the top lid. Fill the water tank with fresh, cold water to your desired level using the cup markings. Ensure at least 6 cups of water are added for the unit's light to activate. Replace the water tank or close the lid securely.



Image: A hand pouring water into the coffee maker's water reservoir. The reservoir has clear markings for water levels.

2. **Prepare Filter Basket:**

Press the button to swing out the filter basket. Insert a cone-shaped #4 paper filter or a permanent gold-tone filter into the basket.



Image: A hand removing the filter basket from its swing-out compartment on the coffee maker.

3. Add Coffee Grounds:

Add the desired amount of fresh ground coffee to the filter. A general guideline is one tablespoon of coffee per cup, but adjust to your personal preference. Close the filter basket compartment.

4. Place Carafe:

Ensure the empty glass carafe is properly placed on the warming plate.



Image: A hand placing the glass carafe, containing brewed coffee, onto the warming plate of the coffee maker.

5. **Start Brewing:**

Press the **ON/OFF** button to begin the brewing cycle. The indicator light will illuminate.



Image: A close-up of the coffee maker's control panel, showing a hand pressing the ON/OFF button. The digital display shows "12:01" and "WARM" status.

6. Pause & Serve:

You can temporarily remove the carafe during brewing to pour a cup. The flow of coffee will pause. Return the carafe to the warming plate within 20 seconds to prevent overflow.

7. Automatic Shut-off:

The coffee maker will automatically shut off approximately 2 hours after the brewing cycle is complete. The warming plate will also turn off.

8. Adjustable Warming Plate Temperature:

The warming plate temperature can be adjusted. Refer to the control panel for specific settings (e.g., "WARM" indicator with bars). Press the **SET** button to cycle through warming plate temperature options.

CARE AND MAINTENANCE

Daily Cleaning:

- Always unplug the coffee maker before cleaning and allow it to cool completely.

- Wash the carafe, carafe lid, and filter basket in warm, soapy water. These parts are generally top-rack dishwasher safe, but hand washing is recommended for longevity.
- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Do not immerse the main unit in water or any other liquid.

Descaling (Mineral Deposit Removal):

Mineral deposits (calcium/lime) can build up in your coffee maker over time, affecting performance and coffee taste. Descale your coffee maker regularly, especially if you have hard water. The frequency depends on water hardness and usage, but typically every 2-4 weeks.

1. Prepare a descaling solution: Mix 2-4 tablespoons of white vinegar with water, or use a commercial descaling agent according to its instructions.
2. Pour the solution into the water tank.
3. Place an empty filter in the filter basket and the empty carafe on the warming plate.
4. Run a full brew cycle.
5. After the cycle, let the coffee maker cool for 15 minutes.
6. Discard the solution from the carafe and rinse it thoroughly.
7. Run 2-3 cycles with fresh, cold water only to rinse out any remaining descaling solution.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew or unit does not turn on.	Not enough water in the reservoir. Power cord not securely plugged in. Water level sensor issue.	Ensure at least 6 cups of water are added to the tank. Check power connection. Ensure water tank is properly seated and filled above the minimum level.
Carafe drips when pouring.	Carafe design or pouring angle. Filter basket not properly seated.	Pour slowly and carefully. Consider pouring over a sink. Ensure the filter basket is fully closed and seated.
Coffee drips from filter basket after carafe is removed (Pause & Serve).	Minor residual dripping is normal. Carafe not returned quickly enough.	Return carafe to warming plate within 20 seconds. Ensure filter basket is clean and free of debris.

Problem	Possible Cause	Solution
Brewing takes too long.	Mineral buildup in the system. Fine coffee grounds clogging the filter.	Perform a descaling cycle (see Maintenance section). Use a coarser grind of coffee.
Steam/water leaks from under the brew basket.	Lid not properly closed. Filter basket not properly seated. Excessive steam buildup.	Ensure the top lid and filter basket are securely closed. Check for any obstructions.
Warming plate turns off after 2 hours, cannot restart.	This is an automatic safety feature.	The warming plate cannot be manually restarted after the 2-hour auto-shutoff. To heat coffee again, a new brew cycle must be initiated.

SPECIFICATIONS

Brand	Cloer
Model Number	5218NA
Capacity	12 Cups (1.8-Quart/Liter)
Color	Black
Material	Stainless Steel
Operation Mode	Fully Automatic
Special Feature	Auto Shut-Off, Temperature Stabilized Brewing System
Filter Type	Reusable (Cone-shaped #4)
Manufacturer	Toastess International
GTIN / UPC	701532426251, 061283105639

WARRANTY INFORMATION

Toastess International warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase. During this 'in-warranty' period, defective products will be repaired or replaced at the discretion of the retailer and/or Toastess International. A defective product should be returned to the original place of purchase within the retailer's stipulated return/exchange period. If you are unable to have a defective product replaced under warranty by the retailer, Toastess International will repair or replace the defective product without charge.

CUSTOMER SUPPORT

For assistance, warranty claims, or further inquiries regarding your Cloer 5218NA Coffee Maker, please contact Toastess

International. You may contact them for assistance by mail, e-mail, fax, or telephone as listed in your product packaging or on their official website.

Please have your model number (5218NA) and date of purchase available when contacting customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question