

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Canon](#) /
- › [Canon imageCLASS MF3010 Laser Multifunction Printer User Manual](#)

## Canon MF3010

# Canon imageCLASS MF3010 Laser Multifunction Printer User Manual

Model: MF3010

## 1. INTRODUCTION

The Canon imageCLASS MF3010 is a compact laser multifunction printer designed for home or small office environments. This device integrates printing, copying, and scanning functionalities into a single unit, providing essential office features efficiently.

## 2. WHAT'S IN THE BOX

Upon opening the package, verify that all the following items are included:

- Canon imageCLASS MF3010 unit
- Starter Cartridge 125
- Setup Instructions
- Manuals (digital on CD-ROM)
- Power Cord
- User Software CD-ROM
- Registration Card
- Warranty Card

## 3. SETUP

### 3.1 Unpacking and Initial Preparation

Carefully remove the printer from its packaging. Remove all protective tapes and packing materials from the exterior. Open the front cover and gently remove the toner cartridge to access and remove any internal protective tabs. Reinsert the toner cartridge firmly until it clicks into place.



Image: The Canon imageCLASS MF3010 printer with its top cover open, revealing the paper input tray and the scanner bed. A stack of white paper is visible in the tray.

### 3.2 Connecting the Printer

1. Connect the provided power cord to the printer and then to a wall outlet.
2. Connect the printer to your computer using a USB cable (not included).

### 3.3 Software Installation

Insert the User Software CD-ROM into your computer's optical drive and follow the on-screen instructions to install the necessary drivers and utilities. Alternatively, visit the official Canon support website to download the latest drivers compatible with your operating system (Windows 7/Vista/XP/2000, Mac OSX 10.4.9 & up, Linux for print only).

## 4. OPERATING THE PRINTER

## 4.1 Loading Paper

Open the front paper cassette and load paper into the 150-sheet front-loading tray. Adjust the paper guides to fit the paper size. The printer supports various media types, including plain paper and labels, up to 8.5 x 14 inches.



Image: A direct front view of the Canon imageCLASS MF3010 printer, showing the paper output tray and control panel.

## 4.2 Printing Documents

The MF3010 prints black and white documents at speeds up to 19 pages per minute (ppm). Canon's Quick First Print technology ensures the first page is delivered in approximately 8 seconds. Utilize advanced print modes such as Booklet, Watermark, Toner Saver, Poster, and Page Composer through the printer driver settings on your computer.

## 4.3 Copying Documents

Place your document face down on the scanner glass. Use the control panel buttons to initiate a copy. The device copies in black and white at up to 19 ppm. The ID Card Copy feature allows for easy duplication of small documents like identification cards onto a single sheet of paper. Basic controls for adjusting zoom and darkness are available on the front panel.



Image: A three-quarter front view of the Canon imageCLASS MF3010 Laser Multifunction Printer, showcasing its compact design and control panel.

#### **4.4 Scanning Documents**

The MF3010 offers color scanning capabilities with an interpolated resolution of up to 9600 dpi. Scanned documents can be saved in various file formats, including JPEG, TIFF, BMP, and PDF. Initiate scanning through the installed software on your computer.

#### **4.5 Energy Saving Mode**

The printer is designed with an efficient energy-saving mode, consuming approximately 1.2W of power when idle. This feature helps reduce energy consumption during periods of inactivity.

### **5. MAINTENANCE**

#### **5.1 Single Cartridge System**

The Canon imageCLASS MF3010 utilizes a Single Cartridge System (Cartridge 125), which combines the toner, drum, and development unit into one easy-to-replace component. This system simplifies maintenance and ensures consistent print quality. Replace the cartridge when print quality deteriorates or the toner is depleted.

#### **5.2 Cleaning**

Regularly clean the exterior of the printer with a soft, dry cloth. For the scanner glass, use a lint-free cloth lightly dampened with glass cleaner. Avoid abrasive cleaners or direct spraying onto the device.

## 6. TROUBLESHOOTING

### 6.1 Printer Not Responding After Sleep Mode

If the printer does not wake up or respond to print commands after entering sleep mode, try sending the print job again. If the issue persists, power cycle the device by turning it off and on.

### 6.2 Paper Handling Difficulties

Due to the printer's compact design, printed pages may exhibit some curling. This can make manual duplex printing challenging. Ensure that any paper being re-fed into the tray is as flat as possible to prevent jams.

### 6.3 Driver and Software Issues

Ensure that the latest printer drivers and software are installed for your computer's operating system. Outdated or incorrect drivers can lead to functionality problems. Visit the Canon support website for driver updates.

### 6.4 Print Quality Degradation

If print quality declines (e.g., faded text, streaks), the toner cartridge may be low or nearing the end of its life. Replace the Cartridge 125 with a new one. Ensure the cartridge is properly seated.

## 7. SPECIFICATIONS

| Feature                                | Specification  |
|--|--|
| Print Speed (Monochrome)               | Up to 19 ppm   |
| Copy Speed (Monochrome)                | Up to 19 ppm   |
| First Print Out Time                   | Approx. 8 seconds  |
| Scan Resolution (Interpolated)         | Up to 9600 dpi   |
| Paper Capacity                         | 150-sheet front-loading cassette                                 |
| Maximum Media Size                     | 8.5 x 14 inches  |
| Print Media Types                      | Labels, Plain Paper  |
| Connectivity                           | USB  |
| Memory                                 | 64 MB  |
| Power Consumption (Energy Saving Mode) | Approx. 1.2W   |
| Power Consumption (On-mode)            | 18.1W  |
| Product Dimensions (D x W x H)         | 10.9" x 14.7" x 10"  |
| Item Weight                            | 18.1 pounds  |
| Operating Systems Supported            | Windows 7/Vista/XP/2000, Mac OSX 10.4.9 & up, Linux (print only) |

|                 |             |
|-----------------|-------------|
| Duplex Printing | Manual only |
|-----------------|-------------|

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

The Canon imageCLASS MF3010 comes with a limited warranty. Please refer to the Warranty Card included in your product package for specific terms, conditions, and duration of coverage.

### 8.2 Customer Support

For further assistance, technical support, or to download the latest drivers and software, please visit the official Canon support website. You may also contact Canon customer service directly using the contact information provided on the Canon website or in your product documentation.