

[Manuals.plus](#) /

› [Faber-Castell](#) /

› Faber-Castell Winner 152 Black Whiteboard Marker User Manual

Faber-Castell Winner 152

Faber-Castell Winner 152 Black Whiteboard Marker User Manual

Model: Winner 152

PRODUCT OVERVIEW

The Faber-Castell Winner 152 Black Whiteboard Marker is designed for clear and effective writing on smooth surfaces. Its alcohol-based pigment ink ensures high adhesion and easy erasability, making it suitable for whiteboards, metal, and glass.



Image: Faber-Castell Winner 152 Black Whiteboard Marker. This image displays the marker's design and color.

Key Features:

- **Smooth Surface Compatibility:** Optimized for use on whiteboards, metal, and glass.

- **High Adhesion Ink:** Ensures clear and consistent writing.
- **Easy Erasability:** Allows for clean removal from non-porous surfaces.
- **Ink Color:** Black.
- **Tip Type:** Round tip, 2.2 mm.
- **Ink Type:** Alcohol-based pigment ink.

SETUP

The Faber-Castell Winner 152 Whiteboard Marker requires no complex setup. It is ready for immediate use upon unboxing.

1. **Uncap the Marker:** Remove the cap from the marker. Ensure the cap is placed securely on the back end of the marker to prevent loss during use.
2. **Prepare Surface:** Ensure the writing surface (whiteboard, metal, or glass) is clean and dry for optimal performance.

OPERATING INSTRUCTIONS

Follow these guidelines for effective use of your whiteboard marker:

- **Writing:** Hold the marker firmly and write on the desired smooth surface. The 2.2 mm round tip provides a consistent line width.
- **Storage:** Always recap the marker tightly after each use to prevent the ink from drying out. Store markers horizontally to ensure even ink distribution to the tip.
- **Erasure:** Use a dry cloth or a dedicated whiteboard eraser to remove markings. For stubborn marks, a specialized whiteboard cleaner may be used.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your marker:

- **Recap After Use:** Always replace the cap firmly after writing to prevent the alcohol-based ink from evaporating and drying the tip.
- **Storage Conditions:** Store markers at room temperature, away from direct sunlight or extreme heat, which can cause ink to dry prematurely. Horizontal storage is recommended.
- **Cleaning the Tip:** If the tip becomes clogged with dust or residue from the writing surface, gently wipe it with a damp cloth and allow it to dry completely before recapping.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Marker not writing or ink is faint.	Cap left off, ink dried out, or marker stored vertically.	Ensure cap is always replaced. Store marker horizontally. If ink is dry, the marker may need replacement.
Marks are difficult to erase.	Surface is porous, marks left for too long, or incorrect cleaning method.	Ensure use on non-porous surfaces only. Erase marks promptly. Use a proper whiteboard eraser or cleaner.

Problem	Possible Cause	Solution
Ink smudges easily.	Ink not fully dry, or surface is oily/dirty.	Allow ink a few seconds to dry. Clean the writing surface thoroughly before use.

SPECIFICATIONS

Brand	Faber-Castell
Model Name	Winner 152
Model Number	1
Ink Color	Black
Ink Type	Alcohol-based pigment ink
Tip Size	2.2 mm (round tip)
Recommended Surfaces	Whiteboard, Metal, Glass
Item Weight	10 g
Package Dimensions	13.6 x 1.5 x 1.4 cm
ASIN	B005A3JH8I
International Article Code	07754111602990

WARRANTY AND SUPPORT

Faber-Castell products are manufactured to high-quality standards. For specific warranty information or support inquiries, please refer to the official Faber-Castell website or contact their customer service directly. Keep your purchase receipt as proof of purchase.
Official Website: www.faber-castell.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question