



[Manuals.plus](#) /

› [Teac](#) /

› Teac RC-1090 Audio Remote Control User Manual

Teac RC-1090

Teac RC-1090 Audio Remote Control User Manual

Model: RC-1090

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Teac RC-1090 Audio Remote Control. The RC-1090 is a compact, ergonomic infrared remote designed to control a single audio device. Please read this manual thoroughly before using the product.



Image of the Teac RC-1090 Audio Remote Control, showing its compact design and button layout.

2. SETUP

2.1 Battery Installation

The Teac RC-1090 remote control requires batteries for operation. The specific battery type is not provided in the product specifications, but typically small remote controls use AAA or AA batteries.

1. Locate the battery compartment on the back of the remote control.

2. Slide open the battery compartment cover.
3. Insert the required batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Note: Always use fresh batteries of the same type. Do not mix old and new batteries, or different types of batteries.

3. OPERATING INSTRUCTIONS

The RC-1090 is an infrared remote control designed for direct line-of-sight operation with your compatible Teac audio device.

3.1 Button Functions

The remote features 5 buttons for controlling your audio device. While specific functions may vary depending on the audio component it is paired with, common button functions typically include:

- **Power:** Turns the audio device on or off.
- **Volume Up (+):** Increases the audio volume.
- **Volume Down (-):** Decreases the audio volume.
- **Mute:** Silences the audio output.
- **Source/Input:** Cycles through available audio input sources.

Refer to your Teac audio device's manual for exact button functionality.

3.2 Operating Range

The remote control has a maximum operating range of approximately **10 meters (33 feet)**. Ensure there is a clear line of sight between the remote's infrared emitter and the audio device's infrared receiver for optimal performance. Obstructions can interfere with the signal.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's performance degrades or it stops responding. Follow the battery installation steps outlined in Section 2.1. Remove batteries if the remote will not be used for an extended period to prevent leakage.

5. TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
 - Replace old or depleted batteries with new ones.
 - Ensure there is a clear line of sight between the remote and the audio device.
 - Verify that the remote is pointed directly at the audio device's infrared receiver.
- **Short operating range:**
 - Replace batteries, as low battery power can reduce range.
 - Remove any obstructions between the remote and the audio device.
 - Ensure the remote's infrared emitter and the device's receiver are clean and free of dust.
- **Specific buttons not working:**
 - Ensure the remote is compatible with your specific Teac audio device model.
 - Check if the button is physically stuck or damaged.

6. SPECIFICATIONS

- **Model Name:** RC-1090
- **Brand:** Teac
- **Connectivity Technology:** Infrared
- **Number of Buttons:** 5
- **Controller Type:** Button Control
- **Maximum Range:** 10 Meters
- **Max Number of Supported Devices:** 1
- **Special Feature:** Ergonomic
- **Battery Type:** Battery operated (type not specified)

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your Teac audio device or visit the official Teac website. Keep your purchase receipt as proof of purchase for any warranty claims.