

[Manuals.plus](#) /

› [Wagner](#) /

› Wagner 0525027 Power Painter Plus Airless Paint Sprayer Instruction Manual

Wagner 0525027

Wagner 0525027 Power Painter Plus Airless Paint Sprayer Instruction Manual

Model: 0525027

INTRODUCTION

The Wagner Power Painter Plus is an airless paint sprayer designed for medium-sized outdoor painting and staining projects. It provides quick coverage and a smooth finish, suitable for use with stains, sealers, oil-based, and latex paints. This manual provides essential information for the safe and effective operation and maintenance of your sprayer.

SAFETY INFORMATION

Always read and understand all safety warnings and instructions before operating the Wagner Power Painter Plus. Wear appropriate personal protective equipment, including eye protection, a respirator, and gloves. Ensure adequate ventilation when spraying. Keep children and pets away from the work area. Always disconnect the power supply before cleaning or performing maintenance.

SETUP

1. **Prepare the Work Area:** Ensure the area is clean, well-ventilated, and free of obstructions. Cover surfaces not intended for painting with drop cloths or masking tape.
2. **Material Preparation:** Stir your paint or stain thoroughly. The Power Painter Plus can handle various materials, including stains, sealers, oil-based, and latex paints. For optimal results, refer to the paint manufacturer's recommendations for thinning, if necessary.
3. **Fill the Cup:** The sprayer features a 1-quart twist-lock cup. Fill the cup with your prepared material. The provided pouring lid for a one-gallon can can assist in minimizing mess during filling.
4. **Attach the Cup:** Securely attach the filled cup to the sprayer by twisting it into place.
5. **Adjust Material Select Lever:** Set the material select lever to "paint" when spraying thicker coatings and to "stain" when spraying thinner coatings to optimize performance.
6. **Connect Power:** Plug the sprayer into a suitable power outlet.

OPERATING INSTRUCTIONS

1. **Prime the Sprayer:** Before spraying, prime the unit according to the detailed instructions in the full product manual to ensure consistent material flow and prevent sputtering. The Sure Prime Valve retains material, reducing the need for re-priming when refilling.
2. **Adjust Spray Pattern:** The Optimus dual fan pattern tip allows adjustment for either horizontal or vertical spray patterns. Rotate the tip to achieve the desired orientation for your project.
3. **Practice Spraying:** Before applying to your project, practice on a scrap piece of material to get a feel for the spray pattern and flow. Maintain a consistent distance and speed for an even finish.
4. **Spraying Technique:** Hold the sprayer perpendicular to the surface, moving your arm in smooth, even strokes. Overlap each pass by approximately 50% to ensure uniform coverage. The EZ Tilt Flexible Suction Tube allows spraying at various angles, including up, down, or sideways, for maximum mobility.
5. **Monitor Material Level:** Do not let the reservoir run dry during operation to avoid sputtering and ensure a smooth application. Refill as needed.



Image 1: A man using the Wagner Power Painter Plus to spray a wooden railing, demonstrating outdoor application.

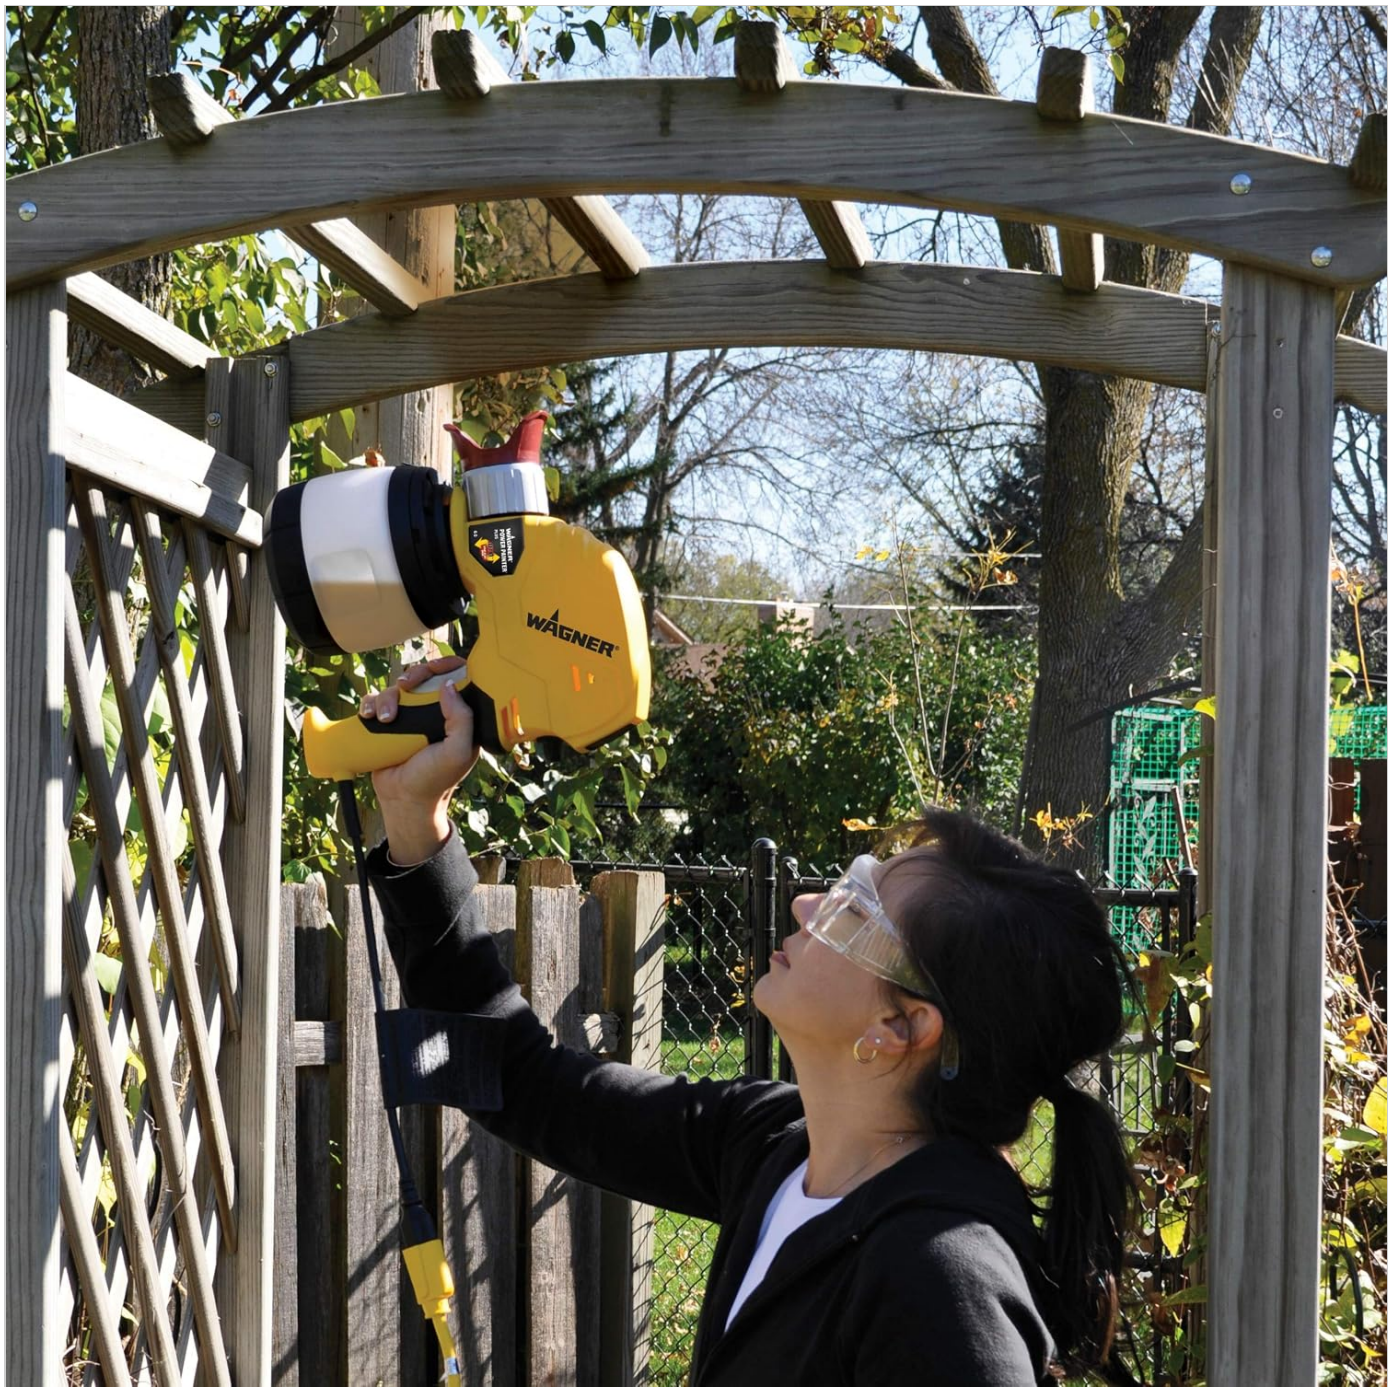


Image 2: A woman utilizing the Wagner Power Painter Plus to apply finish to a garden arbor, highlighting versatility for various outdoor structures.



Image 3: A man spraying a metal garden bench with the Wagner Power Painter Plus, illustrating its use for furniture and intricate designs.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance are crucial for the longevity and optimal performance of your Wagner Power Painter Plus. Clean the sprayer immediately after each use. The cleaning process typically takes around 30 minutes for oil-based paints and less for water-soluble materials.

Disassembly and Cleaning Steps:

1. **Remove Spray Tip Assembly:** Carefully detach the spray tip assembly from the sprayer.
2. **Unscrew Locking Nut:** Unscrew the locking nut that secures the pump housing.
3. **Remove Atomizer Valve:** Gently take out the atomizer valve, being careful not to damage it.
4. **Slide Out Pump Housing:** Separate the pump housing from the sprayer unit.
5. **Remove Piston and Spring:** Extract the piston and spring from the pump housing.

6. **Clean Piston Sleeve:** Use the provided brush to thoroughly clean the piston sleeve, removing all paint residue.
7. **Clean All Components:** Wash all disassembled parts with appropriate cleaning solution (water for latex/water-based, mineral spirits for oil-based). Ensure all paint is removed.
8. **Lubricate:** Once cleaned and dried, apply the provided lubricant to the piston and atomizer valve for protection and smooth operation between uses.
9. **Reassemble:** Reinsert the piston and spring into the pump housing, then slide the pump housing back into the spray gun. Thread the locking nut back on, compressing the spring to secure it. Place the atomizer valve back into the pump. Finally, reattach the spray tip assembly.

Official Maintenance Video:

Your browser does not support the video tag.

Video 1: This video demonstrates the disassembly, cleaning, and reassembly process for the Wagner Power Painter Plus cup gun, ensuring proper maintenance for optimal performance and longevity.

TROUBLESHOOTING

If you encounter issues with your Wagner Power Painter Plus, consider the following general troubleshooting steps:

- **No Spray or Weak Spray:** Check for clogs in the spray tip, atomizer valve, or suction tube. Ensure the material cup is sufficiently full and properly sealed. Verify the material select lever is set correctly.
- **Sputtering:** This often indicates air in the system or an insufficient material supply. Ensure the suction tube is fully submerged in paint and the cup is adequately filled. Check for loose connections.
- **Uneven Spray Pattern:** Clean the spray tip and atomizer valve thoroughly. Ensure the material is properly thinned according to manufacturer specifications.
- **Leaking:** Check all connections for tightness, especially the cup and locking nut. Inspect O-rings and seals for damage and replace if necessary.

For more detailed troubleshooting or persistent issues, refer to the comprehensive manual included with your product or visit the official Wagner Spraytech website.

SPECIFICATIONS

Feature	Detail
Brand	Wagner
Model Name	Power Painter Plus
Model Number	0525027
Tank Volume	0.25 Gallons (1 Quart)
Recommended Uses	Painting, Staining (fences, overhangs, playsets, sheds, furniture)
Material	Metal, Plastic, Nylon
Item Weight	0.01 Pounds (Note: This weight seems unusually low and might refer to a component, not the full unit. Refer to packaging for accurate total weight.)
Power Source	Corded Electric

Included Components	Power Painter Plus Sprayer
---------------------	----------------------------

WARRANTY AND SUPPORT

The Wagner Power Painter Plus comes with a **1-year warranty** covering parts and labor from the date of purchase on non-wear parts. For warranty claims, technical support, or additional product information, please visit the official Wagner Spraytech website or contact their customer service department.
Official Website: wagnerspraytech.com

© 2023 Wagner Spraytech. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question