

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Crock-Pot](#) /

› [Crock-Pot 6-Quart Countdown Programmable Slow Cooker User Manual](#)

Crock-Pot SCCPVC605-S

Crock-Pot 6-Quart Countdown Programmable Oval Slow Cooker with Dipper

Model: SCCPVC605-S | Brand: Crock-Pot

INTRODUCTION

The Crock-Pot 6-Quart Countdown Programmable Oval Slow Cooker with Dipper (Model SCCPVC605-S) is designed to simplify meal preparation, allowing you to cook meals on your schedule. This appliance features a digital timer for precise cooking control and includes a convenient Little Dipper Warmer for sauces and dips.

Its 6-quart capacity is suitable for serving 7 or more people or preparing a 6-pound roast. The removable stoneware and glass lid are dishwasher safe for easy cleanup, and the stainless steel finish complements any kitchen decor.

PRODUCT COMPONENTS

- Main Slow Cooker Unit (Stainless Steel exterior with digital control panel)
- Removable 6-Quart Oval Stoneware
- Glass Lid with Handle
- 16-Ounce Little Dipper Warmer (with lid)



Image: The Crock-Pot 6-Quart Countdown Programmable Oval Slow Cooker shown with its accompanying 16-ounce Little Dipper Warmer.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the removable stoneware and glass lid in warm, soapy water. Rinse thoroughly and dry. The main heating unit can be wiped with a damp cloth. Do not immerse the heating unit in water.
3. **Placement:** Place the slow cooker on a flat, heat-resistant surface away from walls and curtains. Ensure adequate ventilation around the unit.
4. **Insert Stoneware:** Place the clean stoneware into the heating unit.

OPERATING INSTRUCTIONS

Main Slow Cooker Operation:

1. **Prepare Food:** Place your ingredients into the removable stoneware.
2. **Secure Lid:** Place the glass lid securely on the stoneware.
3. **Plug In:** Plug the slow cooker into a standard electrical outlet. The digital display will illuminate.
4. **Select Temperature:** Press the **Select** button to cycle through temperature settings: **High**, **Low**, or **Warm**. The corresponding indicator light will illuminate.
5. **Set Timer:** Use the **Timer** up (▲) and down (▼) arrows to set the desired cooking time. The timer can be set from 30 minutes up to 20 hours.
6. **Start Cooking:** Once the temperature and time are set, the slow cooker will begin heating. The digital display will count down the remaining cooking time.

7. **Automatic Warm Setting:** After the set cooking time is complete, the slow cooker will automatically switch to the **Warm** setting. The timer will then count up the time it has been on Warm, for up to 6 hours.
8. **Turn Off:** To turn off the slow cooker at any time, press the **Off** button.



Image: Close-up view of the digital control panel, showing the 'Select', 'Timer' arrows, and 'Off' buttons, along with 'High', 'Low', and 'Keep Warm' indicators.

Little Dipper Warmer Operation:

- **Prepare:** Place desired dips, sauces, or small food items into the Little Dipper Warmer.
- **Plug In:** Plug the Little Dipper Warmer directly into an electrical outlet. It does not have adjustable settings and will begin to warm automatically.
- **Serve:** Use the Little Dipper to keep items warm during serving.
- **Unplug:** Unplug the unit when finished using.



Image: The 16-ounce Little Dipper Warmer, shown with food inside, designed for keeping small portions warm.

MAINTENANCE AND CLEANING

- **Stoneware and Lid:** The removable oval stoneware and glass lid are dishwasher safe for convenient cleaning. They can also be washed by hand with warm, soapy water.
- **Heating Unit:** To clean the exterior of the heating unit, wipe with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the heating unit in water or any other liquid.
- **Little Dipper:** The stoneware insert of the Little Dipper is removable and can be washed by hand or in the dishwasher. Wipe the exterior of the Little Dipper heating base with a damp cloth.
- **Storage:** Ensure all parts are completely dry before storing. Store the slow cooker assembled with the lid on the stoneware to protect it from dust.

TROUBLESHOOTING

If you encounter any issues with your Crock-Pot Slow Cooker, please refer to the comprehensive user manual available online or contact customer support. Common issues often relate to power supply or incorrect settings.

- **Unit Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check your household circuit breaker.

- **Food Not Cooking Properly:** Verify that the correct temperature setting (High or Low) and cooking time have been selected. Ensure the lid is properly seated to retain heat.
- **Digital Display Issues:** If the display is not functioning as expected, try unplugging the unit for a few minutes and then plugging it back in to reset.

SPECIFICATIONS

Brand	Crock-Pot
Model Number	SCCPVC605-S
Capacity	6 Quarts (Main Unit), 16 Ounces (Little Dipper)
Material	Stainless Steel exterior, Ceramic Stoneware, Glass Lid
Color	Silver
Product Dimensions	14.5"D x 14.5"W x 9"H
Item Weight	8 Pounds
Control Method	Touch, Programmable Digital Control
Dishwasher Safe Parts	Stoneware and Lid

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Crock-Pot website or the full user manual provided with your product. You may also find additional resources and recipes on the manufacturer's website.

A digital version of the user guide is available [here](#).