

Roku 3000D/3000X

Roku 2 HD Streaming Player User Manual

Model: 3000D/3000X

INTRODUCTION

The Roku 2 HD Streaming Player provides an easy and affordable way to stream a wide variety of entertainment directly to your television. This device allows access to numerous channels offering movies, TV shows, live sports, music, and more, all without the need for a personal computer. Its compact design and simple setup make it suitable for virtually any TV setup.



Image: The Roku 2 HD Streaming Player, a small black and purple puck-shaped device, is shown alongside its black remote control. The device has a subtle "Roku" logo on its front and a small white indicator light. The remote features a purple directional pad with an "OK" button, along with various playback and navigation buttons.

WHAT'S INCLUDED

Your Roku 2 HD Streaming Player package includes the following components:

- Roku 2 HD Streaming Player
- Remote control
- Two AA batteries (for the remote)
- A/V cable (red/white/yellow for standard-definition connection)
- Power adapter
- Get Started guide

Note: An HDMI cable for high-definition video output is not included and must be purchased separately if you intend to connect via HDMI.

WHAT YOU NEED

To use your Roku 2 HD Streaming Player, ensure you have the following:

- A television with either composite A/V inputs (red, white, yellow) or an HDMI input.
- High-speed internet service with a minimum speed of 1.2 Mbps. For optimal HD video streaming, 5 Mbps is recommended.
- A wireless router for Wi-Fi connectivity.
- An available AC power outlet.
- An internet-connected computer, smartphone, or tablet for initial account setup and channel management.

SETUP GUIDE

Follow these steps to set up your Roku 2 HD Streaming Player:

1. Connect to TV:

- For Standard Definition (SD): Connect the included A/V cable (red, white, yellow) from the Roku player's A/V output jack to the corresponding input jacks on your TV.
- For High Definition (HD): Connect an HDMI cable (not included) from the Roku player's HDMI port to an available HDMI input on your TV.

2. Connect Power: Insert the power adapter into the Roku player's power input and then plug the adapter into an AC power outlet. The Roku player will automatically power on.

3. Insert Batteries: Open the battery compartment on the back of the remote control and insert the two included AA batteries, observing the correct polarity.

4. Turn on TV and Select Input: Turn on your television and select the correct input source (e.g., HDMI 1, Video 1) that corresponds to where you connected the Roku player. You should see the Roku logo appear on your screen.

5. On-Screen Setup: Follow the on-screen prompts to:

- Connect to your wireless network: Select your Wi-Fi network from the list and enter your network password.
- Create or link a Roku account: You will be directed to Roku's website on a computer or mobile device to complete this step. A credit card or PayPal account is required for potential channel purchases, though many channels are free.
- Install channels: After account setup, you can select and install your preferred streaming channels.

Once the setup is complete, your Roku 2 HD Streaming Player is ready for use.

OPERATING INSTRUCTIONS

Navigating and using your Roku 2 HD Streaming Player is straightforward:

- **Home Screen:** The main screen displays all your installed channels. Use the directional pad on your remote to navigate through them.
- **Channel Store:** Access the "Channel Store" from the home screen to browse and add new channels. Channels are categorized for easy discovery.
- **Playback Controls:** When watching content, use the remote's playback buttons (play/pause, fast forward, rewind) to control media.
- **Settings:** The "Settings" menu allows you to manage network connections, display type, audio settings, and other system preferences.
- **Power Management:** The Roku player is designed to remain on in a low-power standby mode. There is no dedicated power button on the device or remote. To power off completely, disconnect the power adapter.

MAINTENANCE

To ensure optimal performance and longevity of your Roku 2 HD Streaming Player:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device and remote. Do not use liquid cleaners or aerosols.
- **Ventilation:** Ensure the device is placed in a well-ventilated area and that its vents are not obstructed to prevent overheating.
- **Software Updates:** The Roku player automatically checks for and installs software updates. Ensure it remains connected to the internet to receive these updates, which provide new features and performance improvements.
- **Battery Replacement:** Replace the remote control batteries when they are depleted. Use AA batteries.

TROUBLESHOOTING

If you encounter issues with your Roku 2 HD Streaming Player, try the following solutions:

Problem	Possible Solution
No picture or sound.	Ensure the Roku player is properly connected to the TV and power outlet. Verify your TV is set to the correct input source (HDMI or A/V). Try unplugging the Roku player's power adapter for 10 seconds, then plug it back in.
Cannot connect to Wi-Fi.	Check if your wireless router is on and functioning correctly. Ensure you are entering the correct Wi-Fi password. Move the Roku player closer to your wireless router, or try restarting your router.
Remote control not working.	Replace the AA batteries in the remote. Ensure there are no obstructions between the remote and the Roku player.

Problem	Possible Solution
Streaming quality is poor or buffering.	Check your internet speed (a minimum of 1.2 Mbps is needed, 5 Mbps for HD). Reduce network congestion by limiting other internet activities on your network. Restart your router and the Roku player.

SPECIFICATIONS

Feature	Detail
Model Number	3000D/3000X
Dimensions (L x W x H)	3.3 x 3.3 x 0.9 inches
Weight	0.3 ounces
Video Output	HDMI (up to 720p HD), Composite RCA (SD)
Audio Output	HDMI, Composite RCA
Connectivity	Built-in Wireless (Wi-Fi b/g/n)
Ports	HDMI, A/V Output Jack, MicroSD Card Slot (for additional storage), 10/100 RJ-45 Ethernet Port (on some models, e.g., 3000X)
Power	AC Adapter
Remote Control	Standard IR remote (uses 2 AA batteries)

WARRANTY AND SUPPORT

The Roku 2 HD Streaming Player typically comes with a 90-day manufacturer warranty. For specific warranty details, please refer to the documentation included with your product or visit the official Roku support website.

For technical support, troubleshooting assistance, or to access the latest user guides and FAQs, please visit the official Roku support page. You can often find solutions to common issues and contact information for customer service there.

Legal Disclaimer:

Please note that this product may have shipping restrictions. For example, it may not be shipped to Hawaii, Alaska, Puerto Rico, or AFO/APO addresses. Please verify shipping eligibility before purchase.

© 2023 Roku. All rights reserved. Roku and the Roku logo are trademarks or registered trademarks of Roku, Inc.

Related Documents - 3000D/3000X

	<p>Power Acoustik Class D Amplifiers: MA4-3000D, MA1-2300D, MA5-2500D - User Guide Detailed specifications, features, and installation guide for Power Acoustik's Class D Full Range & Monoblock Amplifiers, including models MA4-3000D, MA1-2300D, and MA5-2500D. Learn about power ratings, crossover settings, and wiring.</p>
	<p>Canon EOS Rebel T100 / EOS 3000D Instruction Manual Comprehensive guide to the Canon EOS Rebel T100 (EOS 3000D) digital camera, covering setup, shooting modes, image quality, focusing, playback, and printing. Learn to capture stunning photos and videos with this user-friendly DSLR.</p>
 User Guide SE3600 16x411 Portable Router	<p>TP-Link BE3600 Wi-Fi 7 Portable Router: User Guide and Setup Get started with your TP-Link BE3600 Wi-Fi 7 Portable Router (TL-WR3602BE). This user guide details setup, features, various operating modes, and essential safety and compliance information. Perfect for home and travel, it ensures optimal wireless connectivity.</p>
	<p>Bostik ISOGRIP® Adhesives: ICC-ES Evaluation Report ESR-1140 for Sandwich Panels Comprehensive ICC-ES evaluation report (ESR-1140) for Bostik's ISOGRIP® Adhesives. Details product specifications, applications in structural sandwich panels, installation guidelines, and compliance with IBC, IRC, and California building codes.</p>
	<p>Godox GMC-U1 Camera Control Cable Instruction Manual Instruction manual for the Godox GMC-U1 camera control cable, detailing its features, compatibility, installation, operation, and warranty information. This cable allows for camera control when used with Godox GM55 monitors.</p>
	<p>FortiOS 6.4.3 Release Notes Official release notes for FortiOS version 6.4.3, detailing new features, enhancements, resolved issues, and known issues for Fortinet's network security operating system. Includes supported models and upgrade information.</p>

Documents - Roku – 3000D/3000X

Media Player and Set-Top Box Model Reference with 5-Digit Codes

A comprehensive database of various media players, set-top boxes, and related electronic devices, listing brands, model names, and their corresponding 5-digit identification codes. This reference is ideal for compatibility checks and product identification across a wide range of manufacturers.

lang:es score:24 filesize: 552.37 K page count: 33 document date: 2021-12-21

[pdf]

Jason Godwin Streaming Remote Full Model List 2019 ga 2 218847838 677950538 1559118729

838813408 1553085636 oneforall.co.uk sites/default/files/04/Brand/5_Digit_Code_Compatibility/Why_doesn't_the_Streamer_remote_work_with_my_device_freesForAll_is_designed_to_Boxes_which_can_be_controlled_via_Infrared_also_known_as_IR_It_cannot_control_boxes_only_by_RF_Radio_Frequency_Please_check_our_One_10Moons_T2_33626_T2H_3GO_HDPLAY352_36565_RCA_DSB772WE_34346_DSB778W_DSB872WR_DSB872WRB_vollständige_Kompatibilitätsliste_Warum_funktioniert_die_Fernbedienung_nicht_mit_meinem_Gerät_AllBrand_AllFull_ListFull_List5_DSB872WRBMele_M1_53156_Memup_MediaDisk160GO_25413_MediaDisk320GO_Seagate_FreeAgent_Theater_31365_FreeAgentGoFlexTV_Page_Warum_Gerät_Why_ourOne_AllStreaming_0oneforall_2019oneforall_1553085636oneforall|||

Brand 10Moons 10Moons 3GO 4geek A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan
A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan
A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan ABS ABS
ABS Acer Acer Acer Acer Adam Internet AIR Tone AirTV AirTV Akaso Akaso
Alienware Alienwar...

lang:it score:12 filesize: 770.97 K page_count: 32 document_date: 2019-04-03

Bas Zwiers Brand Model 5 Digit Code 10Moons T2 33626 T2H 3GO HDPLAY352 36565 4geek
MedleyHMR500HD 26451 A C Ryan ACRPV73100 3 Streamer remote full brand list One For All Full
Compatibility List 31424 Magic TV MB200 46622 R800D1 Magnavox AllChannelsOn 16631 Xbox
Xbox360HDDVD 24364 XboxOne 41415 XboxOneMediaRemote XboxOneS Xiaomi 1G 41345 3S DK
MDZ05AA MDZ06AA MDZ09AA oneforall sites default files 2019 07 us co uk nz australia au
Brand 10Moons 10Moons 3GO 4geek A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan
A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan
A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan A.C.Ryan ABS ABS
ABS Acer Acer Acer Acer Adam Internet AIR Tone AirTV AirTV Akaso Akaso
Alienware Alienwar

lang:es score:12 filesize: 769.03 K page count: 33 document date: 2019-07-29

Comprehensive Consumer Electronics Model List

A detailed catalog listing various consumer electronics devices, including media players, set-top boxes, and accessories, along with their model numbers and associated codes.

lang:it score:10 filesize: 1.1 M page_count: 32 document date: 2019-03-01