

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [AMS](#) /
- › AMS Pendule 211/1 Wall Clock Instruction Manual

AMS 211/1

AMS Pendule 211/1 Wall Clock Instruction Manual

Model: 211/1

[Introduction](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the AMS Pendule 211/1 wall clock. This manual provides comprehensive instructions for the safe and efficient setup, operation, and maintenance of your new clock. Please read this manual thoroughly before use and retain it for future reference.



Figure 1: AMS Pendule 211/1 Wall Clock

2. SETUP

2.1 Unpacking

1. Carefully remove the clock from its packaging.
2. Inspect the clock for any signs of damage. If damaged, do not proceed with setup and contact customer support.
3. Remove all protective films or packaging materials from the clock face, hands, and pendulum.
4. Retain the packaging for future transport or storage.

2.2 Battery Installation

The AMS Pendule 211/1 requires batteries (not included) for operation. Please use the specified battery type.

1. Locate the battery compartment cover on the back of the clock.
2. Remove the cover by sliding or unlatching it.
3. Insert the required batteries (e.g., 1x AA or 1x C, refer to the compartment label for exact type) according to the polarity indicators (+ and -).
4. Replace the battery compartment cover securely.

2.3 Mounting the Clock

Ensure the clock is mounted securely on a stable wall surface.

1. Choose a suitable location on a wall, away from direct sunlight, extreme temperatures, or vibrations.
2. Use an appropriate wall anchor and screw for your wall type (e.g., drywall, concrete). The mounting point should be strong enough to support the clock's weight.
3. Hang the clock securely using the keyhole slot on the back. Ensure it is level.

2.4 Setting the Time

Your AMS Pendule 2111/1 clock features an analog display. Some models may include a radio-controlled mechanism for automatic time synchronization.



Figure 2: Example Clock Face with Radio Controlled Symbol

1. **Manual Setting:** Locate the time-setting knob or wheel on the back of the clock. Gently turn this knob to move the minute and hour hands clockwise until the correct time is displayed. Avoid turning the hands counter-clockwise.
2. **Radio-Controlled (if applicable):** If your clock is radio-controlled, it will attempt to synchronize with a time signal after battery installation. Place the clock near a window for better signal reception. This process may take several minutes or hours. Once synchronized, the clock will automatically display the correct time.

2.5 Pendulum Setup

The pendulum is a decorative and functional element of your clock.

1. Carefully unpack the pendulum if it was separate from the main clock body.
2. Attach the pendulum to its hook or hanging mechanism inside the clock case. Ensure it hangs freely and does not touch the sides of the case.
3. Gently push the pendulum to one side to start its swing. It should swing evenly.

3. OPERATING INSTRUCTIONS

3.1 Reading the Time

The AMS Pendule 211/1 features a clear analog display with hour, minute, and second hands for precise timekeeping.

- The **short hand** indicates the hour.
- The **long hand** indicates the minute.
- The **thin sweeping hand** indicates the second.

3.2 Alarm Function

Your clock is equipped with an alarm function. Refer to the specific controls on the back or side of your clock for alarm setting.

1. **Set Alarm Time:** Locate the alarm setting knob/dial (often separate from the main time setting). Turn it to set the desired alarm time.
2. **Activate Alarm:** Find the alarm ON/OFF switch or button. Move it to the "ON" position to activate the alarm.
3. **Deactivate Alarm:** To turn off the alarm sound, move the alarm switch to the "OFF" position.

3.3 Pendulum Operation

Once the pendulum is installed and started, it should swing continuously. If it stops, gently restart it.

- Ensure the clock is level on the wall to allow for an even pendulum swing.
- Avoid obstructing the pendulum's movement.

4. MAINTENANCE

4.1 Cleaning

Regular cleaning will help maintain the appearance of your clock. The frame is made of Acrylonitrile Butadiene Styrene (ABS).

- Wipe the clock's exterior with a soft, dry, lint-free cloth.
- For stubborn marks, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the finish.
- Do not spray cleaning solutions directly onto the clock.
- Keep the clock away from excessive dust and moisture.

4.2 Battery Replacement

Replace batteries when the clock starts losing time or stops functioning.

1. Follow the steps in Section 2.2 "Battery Installation" to replace old batteries with new ones of the correct type.
2. Dispose of used batteries responsibly according to local regulations.

5. TROUBLESHOOTING

If you encounter issues with your AMS Pendule 211/1, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Clock not running	Dead or incorrectly installed batteries.	Check battery polarity; replace with fresh batteries.

Problem	Possible Cause	Solution
Clock losing/gaining time	Weak batteries; interference (for radio-controlled models); mechanism issue.	Replace batteries. For radio-controlled, move to a location with better signal. If problem persists, contact support.
Pendulum not swinging	Not properly installed; obstruction; clock not level.	Ensure pendulum is correctly hooked and swings freely. Check if the clock is level. Gently restart the pendulum.
Alarm not sounding	Alarm not activated; incorrect alarm time set; low battery.	Ensure alarm switch is ON. Verify alarm time setting. Replace batteries.

6. SPECIFICATIONS

Feature	Detail
Brand	AMS
Model	211/1
ASIN	B005DRWNZ0
Display Type	Analog
Shape	Rectangular
Frame Material	Acrylonitrile Butadiene Styrene (ABS)
Alarm	Yes
Batteries Included	No

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.

For further assistance, you may visit the official AMS website or contact their customer service department.



© 2023 AMS. All rights reserved.

This manual is subject to change without notice.