

[manuals.plus](#) /

› [Logitech](#) /

› [Logitech Wireless Touchpad User Manual](#)

## Logitech 910-002345

# Logitech Wireless Touchpad User Manual

Model: 910-002345

## INTRODUCTION

---

The Logitech Wireless Touchpad is designed to provide intuitive multi-touch navigation for your computer. Its large touch surface allows for easy pointing, scrolling, and swiping, enhancing your interaction with web content and applications. This device offers a clutter-free wireless experience with a compact Unifying receiver.



*Figure 1: Top view of the Logitech Wireless Touchpad, showcasing its large touch surface and the Logitech logo.*

## SETUP

---

1. **Insert Batteries:** The touchpad requires two AA batteries, which are included. Locate the battery compartment on the underside of the touchpad and insert the batteries, ensuring correct polarity.
2. **Connect Unifying Receiver:** The Logitech Wireless Touchpad utilizes a tiny Unifying receiver for wireless connectivity. Plug this USB receiver into an available USB port on your Windows 7 computer.
3. **Power On:** Locate the On/Off switch on the underside of the touchpad and slide it to the "On" position.
4. **Driver Installation:** While the touchpad may function with basic features upon connection, it is recommended to download and install the latest drivers and software (such as Logitech SetPoint) from the official Logitech website for full functionality and customization options.



Figure 2: Side view of the Logitech Wireless Touchpad, illustrating its slim profile.

## OPERATING INSTRUCTIONS

---

The Logitech Wireless Touchpad supports intuitive multi-touch gestures for seamless navigation within Windows 7. Below are common gestures:

- **Point and Click:** Move one finger across the touch surface to control the cursor. Press down on the surface or use the physical buttons at the bottom for left-click.
- **Right-Click:** Use the physical right button at the bottom of the touchpad.
- **Two-Finger Scroll:** Slide two fingers up or down to scroll vertically. Slide two fingers left or right to scroll horizontally.
- **Three-Finger Swipe:** Swipe three fingers up to show all open windows (Windows Flip 3D). Swipe three fingers down to show the desktop.
- **Four-Finger Swipe:** Swipe four fingers left or right to switch between open applications.

For optimal performance, ensure your fingers are clean and dry when using the touchpad. The large 5-inch touch surface provides ample space for comfortable gesture execution.



Figure 3: Angled view of the Logitech Wireless Touchpad, highlighting the touch surface and physical buttons.

## MAINTENANCE

To ensure the longevity and optimal performance of your Logitech Wireless Touchpad, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth to gently wipe the touch surface. For stubborn smudges, slightly dampen the cloth with water. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** When the battery indicator light (if present) signals low power, or if performance degrades, replace the two AA batteries. Always use fresh, high-quality alkaline batteries.
- **Storage:** When not in use for extended periods, turn off the touchpad using the On/Off switch to conserve battery life. Store it in a clean, dry environment away from extreme temperatures.

## TROUBLESHOOTING

If you encounter issues with your Logitech Wireless Touchpad, refer to the following common troubleshooting steps:

Problem	Solution
Touchpad is unresponsive.	<ol style="list-style-type: none"><li>1. Ensure the touchpad is turned on.</li><li>2. Check battery levels and replace if necessary.</li><li>3. Ensure the Unifying receiver is securely plugged into a USB port.</li><li>4. Try plugging the receiver into a different USB port.</li><li>5. Restart your computer.</li></ol>
Gestures are not working correctly.	<ol style="list-style-type: none"><li>1. Ensure you are using Windows 7, as this touchpad is designed for it.</li><li>2. Verify that Logitech SetPoint software is installed and updated.</li><li>3. Practice the gestures to ensure correct finger placement and movement.</li></ol>
Intermittent connection.	<ol style="list-style-type: none"><li>1. Move the touchpad closer to the Unifying receiver.</li><li>2. Avoid placing the receiver near other electrical devices that might cause interference.</li><li>3. Ensure no large metal objects are between the touchpad and the receiver.</li></ol>

For further assistance, please visit the official Logitech support website.

## SPECIFICATIONS

Feature	Detail
Brand	Logitech
Model Number	910-002345
Connectivity	Wireless (Logitech Unifying receiver)
Compatibility	Windows 7 computers only
Dimensions (L x W x H)	5.71 x 1.22 x 5.67 inches
Item Weight	8 ounces
Batteries	2 AA batteries (included)

Feature	Detail
Touch Surface Size	5-inch diagonal

## WARRANTY AND SUPPORT



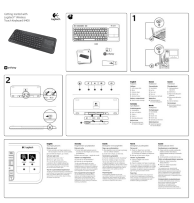
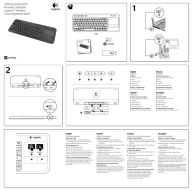
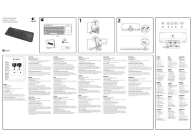
This product comes with a standard manufacturer's warranty. For detailed warranty information, product registration, and technical support, please visit the official Logitech support website. You can also find downloadable drivers and software there.

The product package includes a User Guide and the Wireless Touchpad itself. Additional support resources are available online.

For the most up-to-date information and support, please visit: [Logitech Support](#)

© 2023 Logitech. All rights reserved.

## Related Documents - 910-002345

	<p><a href="#">Logitech K400 Plus Wireless Touch Keyboard Setup Guide</a></p> <p>Comprehensive setup guide for the Logitech K400 Plus Wireless Touch Keyboard, featuring a full-size keyboard, integrated touchpad, shortcut keys, and Unifying receiver technology for seamless connectivity and enhanced control.</p>
	<p><a href="#">Logitech K400 Plus Wireless Touch Keyboard User Guide</a></p> <p>A comprehensive guide to the Logitech K400 Plus Wireless Touch Keyboard, covering its features, setup, shortcut keys, touch tap and scrolling functions, Logitech Options software, and system compatibility.</p>
	<p><a href="#">Logitech Wireless Touch Keyboard K400 Getting Started Guide</a></p> <p>Learn how to set up and use your Logitech Wireless Touch Keyboard K400 with the Unifying receiver, including touchpad gestures, hotkeys, and troubleshooting tips.</p>
	<p><a href="#">Logitech Wireless Touch Keyboard K400 Getting Started Guide</a></p> <p>A guide to setting up and using the Logitech Wireless Touch Keyboard K400, including features, touchpad gestures, and troubleshooting.</p>
	<p><a href="#">Logitech K400 Wireless Touch Keyboard: Setup, Features &amp; Gestures Guide</a></p> <p>Learn how to set up and use your Logitech K400 Wireless Touch Keyboard. This guide covers installation, touchpad gestures, hotkeys, and Logitech Unifying technology for seamless control of your PC connected to a TV.</p>



### [Logitech K400 Wireless Touch Keyboard: Setup and Features Guide](#)

Learn how to set up and use your Logitech K400 Wireless Touch Keyboard with integrated touchpad. This guide covers installation, touchpad gestures, hotkeys, and Unifying receiver connectivity for seamless control of your computer or TV.