

## Sauder 411802

# Sauder HomePlus Wardrobe/Storage Cabinet 411802 Instruction Manual

Model: 411802 | Brand: Sauder | Finish: Sienna Oak

## INTRODUCTION

This instruction manual provides detailed guidance for the assembly, operation, and maintenance of your Sauder HomePlus Wardrobe/Storage Cabinet, model 411802. Please read all instructions carefully before beginning assembly and retain this manual for future reference.





*Figure 1: Sauder HomePlus Wardrobe/Storage Cabinet (Sienna Oak)*

## IMPORTANT SAFETY INFORMATION

---

- Ensure the cabinet is level and stable to prevent tipping.
- Do not exceed the specified weight limit for shelves and drawers.
- Keep electrical cords away from the back panel to avoid entanglement or damage.
- Assembly requires two adults.
- Always use appropriate tools as specified in the assembly guide.

## COMPONENTS OVERVIEW

---

Your Sauder HomePlus Wardrobe/Storage Cabinet includes various components designed for sturdy construction and functionality. Key features include:

- Two framed panel doors with metal handles.
- One adjustable interior shelf.
- One garment rod for hanging clothes.
- One easy-gliding storage drawer.
- Adjustable base levelers for stability on uneven surfaces.
- Enclosed back panel with cord access.

All necessary materials, hardware, and detailed assembly instructions are included in the package.

## SETUP AND ASSEMBLY INSTRUCTIONS

---

Follow the step-by-step instructions provided in your assembly booklet. For visual assistance, refer to the videos below for specific hardware and component assembly.

### 1. Identifying Rails for Drawers

Proper identification of drawer rails is crucial for correct assembly. This video demonstrates how to distinguish between cabinet left/right and drawer left/right rails.

*Video: How to Identify Rails for Drawer Assembly*

### 2. Assembling Cam and Dowel Fasteners

This video illustrates the correct method for assembling cam and dowel fasteners, ensuring a secure connection between cabinet panels.

*Video: How to Assemble Cam and Dowel Fasteners*

### 3. Attaching the Back Panel

The back panel is essential for the unit's stability and squareness. This video guides you through the process of attaching the back panel securely.

*Video: How to Attach the Back Panel to Your Unit*

### 4. Installing and Adjusting Adjustable Hinges

Learn how to install and fine-tune the adjustable hinges to ensure proper door alignment and smooth operation.

*Video: How to Install and Adjust Adjustable Hinges*

## OPERATION

---

### Doors

The cabinet features two framed panel doors. Open and close the doors using the provided metal handles. Ensure doors are properly aligned for smooth operation; refer to the hinge adjustment video in the Setup section if needed.

### Drawer

The bottom storage drawer operates on easy-gliding slides. Pull the handle to open and push to close. Avoid forcing the drawer if it encounters resistance.

### Adjustable Shelf

The interior shelf can be adjusted to different heights to accommodate various items. To adjust, remove the shelf,

reposition the shelf pins to the desired height, and then place the shelf back on the pins.

Garment Rod

Utilize the interior garment rod for hanging clothing items. Ensure the weight distributed on the rod does not exceed its capacity.

MAINTENANCE

- **Cleaning:** Wipe the cabinet surfaces with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the Sienna Oak finish.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Retighten as necessary to maintain stability.
- **Leveling:** Re-check the adjustable base levelers periodically to ensure the cabinet remains stable and level, especially if moved.

TROUBLESHOOTING

Doors are not aligning properly:

Refer to the "Installing and Adjusting Adjustable Hinges" video in the Setup section. Adjust the hinge screws to correct horizontal, vertical, and depth alignment.

Drawer is sticking or not gliding smoothly:

Check that the drawer rails are correctly installed and free from obstructions. Ensure all screws on the rails are tightened. Avoid overloading the drawer.

Cabinet feels wobbly:

Ensure the back panel is securely attached and all fasteners are tightened. Adjust the base levelers to ensure all four corners are firmly on the floor and the unit is stable.

SPECIFICATIONS

Brand	Sauder
Model Number	411802
Product Dimensions (D x W x H)	20.95" x 28.98" x 71.18"
Color	Sienna Oak
Material	Engineered Wood (Top, Back), Oak (Frame), Metal (Handle)
Item Weight	119 Pounds
Number of Shelves	1 (Adjustable)
Number of Compartments	2
Assembly Required	Yes
Care Instructions	Wipe with Damp Cloth



*Figure 2: Product Dimensions Diagram*

## WARRANTY AND SUPPORT

This Sauder HomePlus Wardrobe/Storage Cabinet is backed by a **5-year limited warranty** covering parts. For warranty claims, replacement parts, or additional support, please contact Sauder customer service directly. Refer to the contact information provided in your product packaging or visit the official Sauder website.

## PRODUCT OVERVIEW

Explore additional views of the Sauder HomePlus Wardrobe/Storage Cabinet in various settings to understand its versatility and design.



*Figure 3: Cabinet in a bedroom, closed.*





Figure 4: Cabinet in a bedroom, doors open.

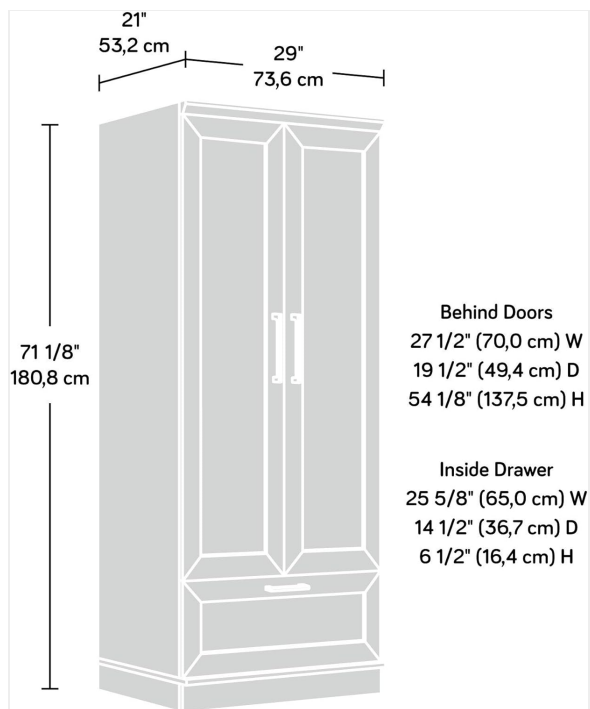


Figure 5: Cabinet in a laundry room.



*Figure 6: Cabinet in a kitchen/pantry.*