

[Manuals.plus](#) /

› [Sauder](#) /

› Sauder Palladia Panel TV Stand (Model 411864) User Manual

Sauder 411864

Sauder Palladia Panel TV Stand (Model 411864) User Manual

Brand: Sauder | Model: 411864

INTRODUCTION

This manual provides essential instructions for the assembly, operation, and maintenance of your Sauder Palladia Panel TV Stand, Model 411864. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image: The Sauder Palladia Panel TV Stand, Model 411864, shown in a living room setting with a television placed on its top surface. The stand features a rich cherry finish, two cabinet doors, and an open central shelving area.

SETUP AND ASSEMBLY

Carefully unpack all components and hardware. Ensure all parts are present before beginning assembly. Assembly requires basic tools and can be completed by following the step-by-step instructions provided in the included assembly guide. For visual guidance on specific fastener types, refer to the videos below.

Product Placement

Place the TV stand on a level surface to ensure stability. Avoid placing the unit in direct sunlight or near heat sources to prevent material damage. Keep away from excessive moisture. This stand is designed to accommodate TVs up to 50 inches weighing 70 lbs or less.



Image: The Sauder Palladia Panel TV Stand, Model 411864, displayed in a room with decorative vases and a framed picture, showcasing its aesthetic integration into a home environment.

Dimensions

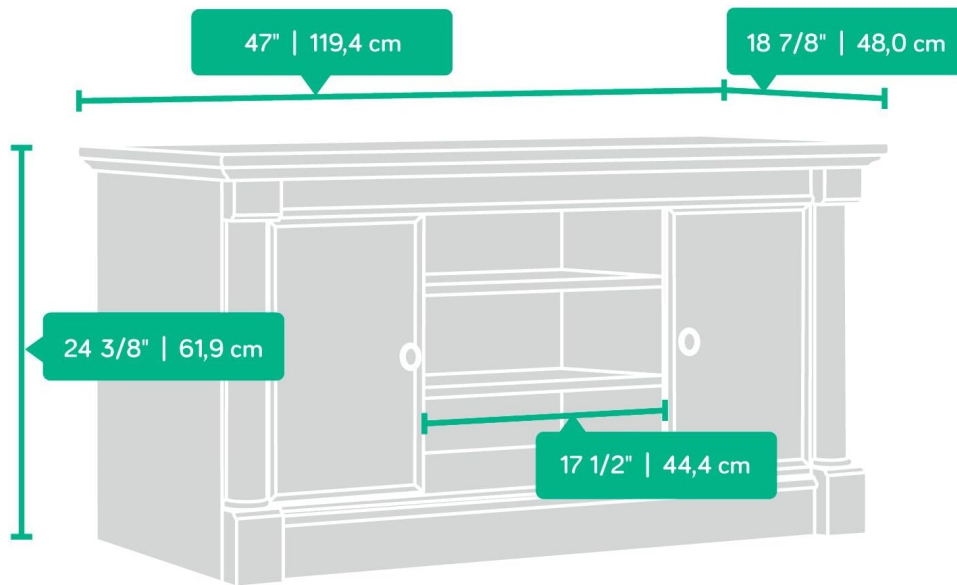


Image: A diagram illustrating the key dimensions of the TV stand: 47 inches (119.4 cm) width, 18 7/8 inches (48.0 cm) depth, and 24 3/8 inches (61.9 cm) height. The central shelf area is 17 1/2 inches (44.4 cm) wide.

Assembly Fastener Guide: Cam and Dowel

Your browser does not support the video tag.

Video: This instructional video demonstrates the correct method for assembling components using the cam and dowel fastening system, a common technique in Sauder furniture assembly. It shows how to insert the cam dowel and then secure it with the hidden cam by turning it 210 degrees to lock.

Assembly Fastener Guide: Twist Lock Fastener

Your browser does not support the video tag.

Video: This video illustrates how to attach the Sauder Twist-Lock fastener. It demonstrates inserting the fastener into the pre-drilled hole and tightening it with a screwdriver until it is as tight as possible, ensuring a secure connection between furniture panels.

OPERATING INSTRUCTIONS

Adjustable Shelves

The TV stand features two adjustable shelves in the open central section and one adjustable shelf behind each door. To adjust a shelf, carefully remove any items, lift the shelf, and reposition the shelf pins to the desired height. Ensure all four pins are securely in place before placing items back on the shelf.

Cable Management

Utilize the enclosed back cut-outs to route cables and cords for your audio/video equipment. This helps maintain a tidy appearance and prevents cable clutter.

MAINTENANCE

Cleaning

To clean the surface of your TV stand, wipe with a dry cloth. For more thorough cleaning, a damp cloth can be used, followed immediately by a dry cloth to remove any moisture. Avoid using harsh chemicals or abrasive cleaners, as these may damage the finish.

General Care

Regularly check all fasteners to ensure they remain tight. Loose fasteners can compromise the stability and integrity of the unit. Avoid dragging the unit when moving; always lift it to prevent damage to the legs and frame.

TROUBLESHOOTING

Unit Instability

- **Issue:** The TV stand feels wobbly or unstable.
- **Solution:** Ensure the unit is placed on a completely level surface. Check all cam and twist-lock fasteners and tighten them as much as possible using a screwdriver.

Doors Not Aligning

- **Issue:** Cabinet doors do not close properly or are misaligned.
- **Solution:** Verify that the hinges are correctly installed and tightened. Adjust the hinge screws as needed to align the doors. Refer to the assembly instructions for detailed hinge adjustment procedures.

SPECIFICATIONS

Brand	Sauder
Model Number	411864
Color	Select Cherry
Material Type	Engineered Wood
Item Dimensions (L x W x H)	47.01 x 18.9 x 24.37 inches
Item Weight	90 Pounds
TV Size Accommodation	Up to 50 inches
Weight Capacity (TV)	70 lbs or less
Number of Shelves	3 (2 central, 1 behind each door)
Assembly Required	Yes

WARRANTY INFORMATION

This Sauder product is covered by a 5-year parts warranty. For specific details regarding warranty claims or coverage, please refer to the warranty documentation included with your purchase or contact Sauder customer support.

CUSTOMER SUPPORT

Should you require further assistance with assembly, parts replacement, or have any questions regarding your Sauder Palladia Panel TV Stand, please contact Sauder customer support. Contact information can typically be found on the manufacturer's website or in the packaging materials.

