

[Manuals.plus](#) /

› [Hamilton Beach](#) /

› Hamilton Beach Fresh Grind Electric Coffee Grinder User Manual

Hamilton Beach 80335R

Hamilton Beach Fresh Grind Electric Coffee Grinder

Model: 80335R

Your guide to fresh coffee and spices.

PRODUCT OVERVIEW

The Hamilton Beach Fresh Grind Electric Coffee Grinder is designed for precision grinding of coffee beans, spices, and more. Its intuitive design ensures ease of use and cleaning, providing fresh grounds for your daily brewing needs.

Key Features:

- **Easy Cleanup:** Dishwasher-safe grinding bowl made from durable stainless steel, removable for easy filling and pouring.
- **Grind Capacity:** Grinds enough beans to brew up to 12 cups of coffee, suitable for single servings or full pots.
- **Simple & Intuitive Operation:** One-touch button control for grinding; press to grind, release to stop.
- **Durable Stainless Steel Blades:** Efficiently grinds coffee beans, herbs, and spices.
- **Hidden Cord Storage:** Integrated cord storage at the base reduces clutter and simplifies storage.





Figure 1: Hamilton Beach Fresh Grind Electric Coffee Grinder.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire,

electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not immerse cord, plug, or grinder in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.

SETUP

Before first use, wash the removable grinding bowl and lid in warm, soapy water, then rinse and dry thoroughly. Ensure the grinder base is unplugged from the power outlet.

1. Place the grinding bowl securely into the grinder base.
2. Unwind the necessary length of the power cord from the hidden storage area at the base of the unit.
3. Plug the grinder into a standard electrical outlet.

Reduce clutter

With hidden cord storage



Figure 2: The grinder features convenient hidden cord storage at its base.

OPERATING INSTRUCTIONS

This grinder is designed for simple, one-touch operation to achieve your desired grind consistency.

1. Remove the clear lid and the removable grinding bowl from the base.
2. Add whole coffee beans or spices to the grinding bowl. The bowl has markings to indicate maximum fill levels for coffee (up to 12 cups) and spices. Do not overfill.
3. Place the grinding bowl back into the base, ensuring it is seated correctly.
4. Securely place the clear lid onto the grinding bowl. The grinder will not operate unless the lid is properly in place.
5. Press and hold the power button located on the front of the unit to begin grinding.
6. Grind for the desired duration to achieve your preferred coarseness:
 - For a coarse grind (e.g., French press), pulse briefly.
 - For a medium grind (e.g., drip coffee), hold for a few seconds.

- For a fine grind (e.g., espresso), hold for a longer duration.

7. Release the button to stop grinding.

8. Unplug the unit before removing the lid and grinding bowl to access your freshly ground contents.



Figure 3: Simple one-touch operation for grinding.



Grinds enough to brew up to 12 cups

Great for a quick cup or a full pot

Figure 4: The grinder can process enough beans for up to 12 cups of coffee.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your coffee grinder.

1. Always unplug the grinder before cleaning.
2. Remove the clear lid and the stainless steel grinding bowl from the base.
3. The grinding bowl is dishwasher safe for convenient cleaning. It can also be washed by hand with warm, soapy water.
4. Wipe the exterior of the grinder base with a damp cloth. Do not immerse the base in water or any other liquid.
5. Ensure all parts are completely dry before reassembling and storing the grinder.

Easy to clean, fill and pour

With removable
dishwasher safe
grinding bowl
made from
durable
stainless
steel



Figure 5: The removable grinding bowl is dishwasher safe for easy cleaning.

Durable stainless steel blades

Grind anything from coffee beans to herbs and spices



Figure 6: The grinder features durable stainless steel blades for efficient grinding.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not turn on.	Not plugged in; Lid not properly secured.	Ensure unit is plugged into a working outlet; Ensure lid is securely locked into place.
Inconsistent grind.	Insufficient grinding time; Overfilling.	Increase grinding duration or pulse more frequently; Do not exceed MAX fill line.
Grinder is loud or vibrates excessively.	Overfilling; Foreign object in grinding chamber.	Reduce amount of ingredients; Unplug and check for obstructions.

SPECIFICATIONS

- **Brand:** Hamilton Beach
- **Model Number:** 80335R
- **Color:** Black
- **Product Dimensions:** 3.74"L x 3.54"W x 7.13"H
- **Item Weight:** 1.3 pounds
- **Voltage:** 110V
- **Frequency:** 60 Hz
- **Blade Material:** Stainless Steel
- **Grinding Bowl Material:** Stainless Steel (removable)
- **Country of Origin:** China

Hamilton Beach®



Fresh Grind™ Coffee Grinder

Figure 7: Product dimensions for easy placement and storage.

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for this product at this time.

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official user guide or contact Hamilton Beach customer service.

You can also download the official User Guide (PDF)[here](#).

© 2024 Hamilton Beach. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question