

Dynex DX-C114201

Dynex Micro USB Cable DX-C114201 Instruction Manual

Model: DX-C114201

INTRODUCTION

This manual provides instructions for the proper use and care of your Dynex Micro USB Cable, model DX-C114201. This cable is designed for connecting devices with a Micro USB port to a standard USB port for both charging and data transfer purposes.



Image: Dynex Micro USB Cable. This image displays the cable with its two distinct connectors: a smaller Micro USB connector on one end, typically used for mobile devices, and a larger standard USB-A connector on the other end, commonly found on computers or wall chargers. The cable itself is black.

SETUP

- 1. Identify Ports:** Locate the Micro USB port on your device (e.g., smartphone, tablet, camera) and a standard USB-A port on your power source (e.g., wall adapter, computer, power bank).
- 2. Connect Micro USB:** Gently insert the Micro USB connector end of the cable into the Micro USB port on your device. Ensure the connector is oriented correctly to avoid damage. Do not force the connection.
- 3. Connect Standard USB:** Insert the standard USB-A connector end of the cable into the USB-A port on your power source or computer.
- 4. Verify Connection:** For charging, your device should indicate that it is receiving power. For data transfer, your device should recognize the connected storage or peripheral device.

transfer, your computer should recognize the connected device.

OPERATING INSTRUCTIONS

Charging Devices

- Connect the cable as described in the "Setup" section.
- Ensure the power source (wall adapter, computer USB port) is active.
- Monitor your device's screen for charging indicators. Charging times may vary depending on the device and power source.

Data Transfer

- Connect your device to a computer using the cable.
- On your device, you may need to select a "File Transfer" or "MTP" (Media Transfer Protocol) mode from the notification panel.
- Your computer should display the connected device as a removable drive or media device. You can then drag and drop files between your computer and the device.
- Always safely eject or disconnect your device from the computer before physically removing the cable to prevent data corruption.

MAINTENANCE

- **Storage:** Store the cable in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling or bending the cable sharply, which can damage internal wires.
- **Cleaning:** If necessary, gently wipe the cable and connectors with a soft, dry, lint-free cloth. Do not use liquid cleaners or solvents.
- **Handling:** Always grasp the connector head when plugging or unplugging the cable, rather than pulling on the cable itself. This prevents strain on the cable-connector junction.
- **Inspection:** Periodically inspect the cable for any signs of wear, fraying, or damage to the insulation or connectors. Discontinue use if damage is observed.

TROUBLESHOOTING

Device not charging:

- Ensure both ends of the cable are securely connected.
- Try a different USB port or power adapter.
- Verify that your device's charging port is clean and free of debris.
- Test the cable with another compatible device if possible to determine if the issue is with the cable or the device/power source.

Computer not recognizing device for data transfer:

- Ensure the cable is firmly connected to both the device and the computer.
- On your device, check the notification panel for USB connection options and select "File Transfer" or "MTP".
- Try a different USB port on your computer.

- Restart both your device and computer.
- Ensure necessary drivers are installed on your computer for the connected device.

Loose connection:

- If the cable feels loose in the port, gently check for debris in the device's port.
- Avoid excessive wiggling or bending of the cable while connected, as this can damage the port or cable.

SPECIFICATIONS

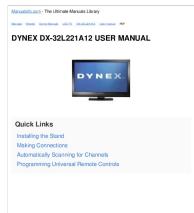
Brand	Dynex
Model Number	DX-C114201 (Item Model Number: 4326668128)
Connector Type	USB-A (Male) to Micro USB (Male)
Cable Type	Micro USB
Recommended Uses	Charging and data transfer for devices with Micro USB ports
Compatible Devices	Smartphone, Tablet, Power Bank, Camera, Laptop, Personal Computer, Router, Mouse, GPS Navigation System, Docking Station, Television, Scanner, etc.
Number of Pins	5
Product Dimensions	7 x 4 x 4 inches (packaging dimensions)
Item Weight	1.6 ounces
UPC	600603141058
ASIN	B005EYMQ2C

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Dynex Micro USB Cable DX-C114201, please refer to the documentation included with your purchase or visit the official Dynex website. Contact information for customer service is typically available on the manufacturer's product packaging or website.

© 2023 Dynex. All rights reserved.

Related Documents - DX-C114201

	<p><u>Dynex DX-19L200A12 19-inch LCD TV User Guide</u></p> <p>Comprehensive user guide for the Dynex DX-19L200A12 19-inch LCD TV. Covers setup, connections, operation, picture and audio settings, troubleshooting, safety, and warranty. Learn how to get the most out of your Dynex television.</p>
	<p><u>Dynex DX-32L221A12/DX-40L260A12 LCD TV User Manual</u></p> <p>Comprehensive user manual for Dynex DX-32L221A12 and DX-40L260A12 LCD TVs, covering setup, operation, connections, settings, and troubleshooting. Learn to optimize your viewing experience.</p>
	<p><u>Dynex DX-40L150A11 40-Inch LCD HDTV User Manual</u></p> <p>User manual for the Dynex DX-40L150A11 40-inch 1080p LCD HDTV, providing setup, operation, and troubleshooting information.</p>
	<p><u>Dynex DX-MB5K22K Portable Battery Quick Setup Guide</u></p> <p>Quick setup guide and safety information for the Dynex DX-MB5K22K 5000 mAh portable battery charger. Learn how to charge your device and the power bank, and understand its specifications and legal notices.</p>
	<p><u>Dynex DX-PS06CC Cross-Cut Paper Shredder User Guide</u></p> <p>User guide for the Dynex DX-PS06CC cross-cut paper shredder, covering safety instructions, setup, operation, maintenance, troubleshooting, specifications, and warranty information.</p>
	<p><u>Dynex 55" LCD TV DX-55L150A11 User Guide</u></p> <p>User guide for the Dynex 55-inch LCD TV, model DX-55L150A11. Covers setup, connections, operation, picture and sound adjustments, troubleshooting, maintenance, specifications, and warranty information.</p>