

Rohl C7108NPN

Rohl C7108NPN Country Kitchen Handspray User Manual

Model: C7108NPN | Brand: Rohl

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Rohl C7108NPN Country Kitchen New Style Handspray. Designed for use with Rohl A3608 and A3606 Anti-Drip systems, this handspray delivers reliable performance and a polished nickel finish.



Image: The Rohl C7108NPN Country Kitchen Handspray, showcasing its polished nickel finish and ergonomic design. This handspray is a replacement or accessory component for compatible Rohl kitchen faucet systems.

KEY FEATURES

- New style handspray design for enhanced functionality.
- Constructed from high-quality brass for durability and a substantial feel.
- Features an anti-drip mechanism to prevent leaks.
- Polished Nickel finish for a classic aesthetic.
- Weighs approximately 3 pounds, indicating robust construction.

SETUP AND INSTALLATION

The Rohl C7108NPN handspray is designed as a replacement or accessory for compatible Rohl kitchen faucet systems (A3608 and A3606 Anti-Drip). Please ensure you have the necessary components before beginning installation.

Required Components (Not Included):

- **Escutcheon Plate (C7129):** This plate is necessary for proper mounting and aesthetic finish.
- **Handspray Hose (C7092):** A compatible hose is required to connect the handspray to your faucet's water supply.

Installation Steps:

1. Ensure the main water supply to your kitchen faucet is turned off.
2. If replacing an existing handspray, carefully disconnect the old handspray and hose from the faucet assembly.
3. Attach the new handspray hose (C7092) to the inlet connection of the Rohl C7108NPN handspray. The handspray features a female inlet connection. Ensure a secure, watertight seal.
4. Connect the other end of the handspray hose to the designated port on your Rohl A3608 or A3606 faucet system.
5. Install the escutcheon plate (C7129) if applicable, following the instructions provided with the plate.
6. Slowly turn on the main water supply and check for any leaks at all connection points. Tighten connections as needed.
7. Test the handspray's operation.

Note: For detailed instructions specific to your Rohl faucet model, please refer to its original installation manual. Professional installation is recommended if you are unsure about any steps.

OPERATING INSTRUCTIONS

The Rohl C7108NPN handspray is designed for simple and effective operation.

- **Activation:** To activate the water flow from the handspray, press and hold the thumb button located on the top of the handspray handle.
- **Water Flow Control:** The water flow rate and temperature are controlled by your main kitchen faucet's handle. The handspray acts as a diversion from the main spout.
- **Deactivation:** Release the thumb button to stop the water flow from the handspray. Water will then typically divert back to the main faucet spout, depending on your faucet's design.

While the thumb button requires continuous holding for operation, this design ensures precise control over water delivery.

MAINTENANCE AND CARE

Proper care will ensure the longevity and continued performance of your Rohl handspray.

Cleaning the Finish:

- Clean the polished nickel finish regularly with a soft, damp cloth.

- Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.
- For stubborn spots, use a mild soap solution and rinse thoroughly with clean water, then dry with a soft cloth.

Addressing Clogged Nozzles:

Over time, mineral deposits from water can clog the handspray nozzles, affecting spray performance. If you notice reduced or erratic water flow:

1. Carefully remove the handspray from its hose connection.
2. Submerge the nozzle end of the handspray in a solution of white vinegar for several hours (e.g., 2-4 hours, or overnight for severe clogging).
3. After soaking, use a soft brush (like an old toothbrush) to gently scrub away any loosened deposits from the nozzles.
4. Rinse the handspray thoroughly with clean water before reattaching it.

Regular cleaning of the nozzles can prevent significant mineral buildup.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Reduced or erratic water flow from handspray.	Clogged nozzles due to mineral buildup.	Soak the nozzle end in white vinegar to dissolve mineral deposits. Gently scrub and rinse. (Refer to Maintenance section).
Handspray leaks at connection point.	Loose connection or worn washer/gasket.	Ensure connections are tight. Check and replace any worn washers or gaskets in the hose connection.
Thumb button is stiff or difficult to press.	Mineral buildup around the button mechanism.	Soak the handspray in white vinegar, focusing on the button area. Work the button gently while soaking.
No water from handspray.	Main water supply off, faucet not diverting water, or severe clog.	Check if main water supply is on. Ensure your main faucet is set to divert water to the handspray. Check for severe clogs in the handspray or hose.

PRODUCT SPECIFICATIONS

Attribute	Detail
Model Number	C7108NPN
Brand	Rohl
Material	Nickel (Brass construction)
Exterior Finish	Polished Nickel
Item Dimensions (L x W x H)	6.8 x 2.7 x 1.8 inches
Item Weight	15.2 ounces (approx. 0.95 lbs)
Inlet Connection Type	Female
Valve Type	Globe Valve (internal mechanism)
Compatible Faucet Systems	Rohl A3608 and A3606 Anti-Drip

WARRANTY INFORMATION

The Rohl C7108NPN Country Kitchen Handspray is backed by a **Limited Lifetime Warranty**. This warranty covers defects in material and workmanship under normal use and service.

For specific terms, conditions, and limitations of the warranty, please refer to the official warranty documentation provided by Rohl at the time of purchase or visit the Rohl website. Keep your proof of purchase for warranty claims.

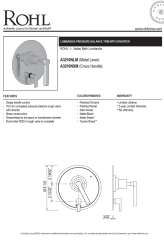
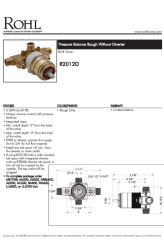


CUSTOMER SUPPORT

Should you require further assistance, have questions regarding installation, operation, or maintenance, or need to make a warranty claim, please contact Rohl customer support.

Please have your product model number (C7108NPN) and proof of purchase readily available when contacting support to expedite the process.

Contact information for Rohl can typically be found on their official website or on the packaging of your product.

Related Documents - C7108NPN

	<p>ROHL Lombardia Pressure Balance Trim with Diverter - A3210NLM/A3210NXM</p> <p>Detailed specifications for the ROHL Lombardia Pressure Balance Trim with Diverter, featuring single handle control, brass construction, and available finishes like Polished Chrome and Matte Black. Includes model numbers A3210NLM (Metal Lever) and A3210NXM (Cross Handle).</p>
	<p>ROHL R2012D Pressure Balance Rough Without Diverter Installation Guide</p> <p>Explore the ROHL R2012D Pressure Balance Rough Without Diverter, a key component for luxurious showers. This guide details features, specifications, installation, and warranty information from ROHL.</p>
	<p>Rohl Arcana™ Bathroom Hardware Installation Instructions</p> <p>Step-by-step installation guide for Rohl Arcana™ toilet paper holders and towel bars, including model numbers CIS18, CIS1/18, CIS1/24, and CIS1/30.</p>
	<p>ROHL 3/4\"</p>

