

Henry NUMHENRYX

Numatic Henry Extra Vacuum Cleaner User Manual

Model: HVX200 | Brand: Henry



Image: The Henry Extra vacuum cleaner shown with its full range of accessories, including various nozzles and extension tubes.

1. SETUP GUIDE

1.1 Unpacking

Carefully remove all components from the packaging. Ensure all listed accessories are present. Retain

packaging for future storage or transport.

1.2 Assembly

1. Attach the flexible hose to the front inlet of the vacuum cleaner by twisting it clockwise until secure.
2. Connect the stainless steel extension tubes together, then attach them to the hose handle.
3. Select the appropriate floor tool or accessory and attach it to the end of the extension tubes.



Image: The Henry Extra vacuum cleaner fully assembled with its hose and standard floor tool, ready for use.

1.3 Initial Use

Before first use, ensure a dust bag is correctly installed inside the drum. Plug the power cord into a suitable electrical outlet. The Henry Extra features a 33-foot cord with a rewind storage system for convenience.

2. OPERATING INSTRUCTIONS

2.1 Powering On/Off

To turn the vacuum cleaner on, press the red power switch located on the top of the unit. Press it again to turn the unit off. The AutoSave Technology optimizes power consumption.

2.2 Using Attachments

The Henry Extra comes with a comprehensive XS1 accessory kit for various cleaning tasks:

- **290mm Combination Floor Tool:** Suitable for both carpets and hard floors. Adjust the brush setting using the foot pedal on the tool.
- **Airobrush (AB290):** Provides excellent carpet care and is ideal for picking up pet hair.
- **300mm MultiFlo Dry Brush Nozzle:** Designed for efficient dry vacuuming on various surfaces.
- **240mm Crevice Tool (32mm):** For reaching narrow gaps and tight corners.
- **150mm Upholstery Nozzle (32mm) with Slide-on Brush:** For cleaning furniture and delicate surfaces.
- **65mm Soft Dusting Brush (32mm):** For dusting delicate items and surfaces.
- **Stainless Steel Tube Bend with NPC Volume Control (32mm):** Allows for suction control.



Image: A split image demonstrating the versatility of the floor tool, showing its effective use on both carpeted and hard floor surfaces.

3. MAINTENANCE

3.1 Dust Bag Replacement

The Henry Extra uses high-efficiency dust bags. Replace the dust bag when it is full or when suction power noticeably decreases. To replace:

1. Unclip the two latches on the sides of the vacuum head and lift the head off.
2. Carefully remove the full dust bag from its holder. The bag features a self-seal tab for hygienic disposal.
3. Insert a new dust bag, ensuring it is properly seated within the drum.
4. Replace the vacuum head and secure the latches.



Image: A hand demonstrating the process of inserting a new self-sealing dust bag into the vacuum cleaner's main compartment.

3.2 Filter Maintenance

The 3-stage Microfresh filter system enhances filtration standards to 98%. Regularly check and clean the filter to maintain optimal performance. The filter is located beneath the vacuum head. Gently tap off any accumulated dust or debris. Replace the filter if it appears damaged or excessively worn.



Image: An overhead view into the Henry Extra vacuum cleaner, showing the internal filter system in place.

3.3 Hose and Accessory Care

Inspect the hose and accessories periodically for blockages or damage. Clear any obstructions to ensure consistent airflow and suction. Wipe down the exterior of the vacuum cleaner with a damp cloth as needed.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord unplugged, tripped circuit breaker, faulty switch.	Check power connection, reset circuit breaker, contact support if switch is faulty.
Loss of suction	Full dust bag, blocked hose/tool, clogged filter.	Replace dust bag, clear blockages, clean or replace filter.

Problem	Possible Cause	Solution
Unusual noise	Blockage in fan/motor, worn motor bearings.	Check for and remove blockages. If noise persists, contact support.
Motor overheating	Blocked airflow, prolonged heavy use.	Check for blockages in hose, tools, and filter. Allow unit to cool down before resuming use.

5. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Henry
Model Name	HVX200 (NUMHENRYX)
Capacity	9 Liters
Wattage	620 watts
Motor Horsepower	0.9 Horsepower
Noise Level	72 dB
Filter Type	Cartridge (Microfresh)
Cord Length	33 feet (approx. 10 meters)
Product Dimensions	14.9 x 14.9 x 19.6 inches
Item Weight	23.7 pounds

6. WARRANTY AND SUPPORT

6.1 Warranty Information

The Numatic Henry Extra Vacuum Cleaner comes with a 3-year manufacturer's warranty. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

6.2 Customer Support

For technical assistance, spare parts, or warranty inquiries, please contact Numatic customer support. Refer to the contact information provided on the product packaging or the official Numatic website.

