

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [GDFStudio](#) /

> [Christopher Knight Home Roseville Accent Lounge Chair Instruction Manual](#)

GDFStudio 234490

Christopher Knight Home Roseville Accent Lounge Chair Instruction Manual

Model: 234490

[Instructions](#) [Overview](#) [Safety Information](#) [Setup](#) [Operating](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. OVERVIEW

This manual provides essential information for the safe and proper assembly, operation, and maintenance of your Christopher Knight Home Roseville Accent Lounge Chair. Please read all instructions carefully before use and retain this manual for future reference.



Figure 1: Christopher Knight Home Roseville Accent Lounge Chair, showcasing its blue floral and vine pattern on a light background.

2. SAFETY INFORMATION

Please observe the following safety guidelines to prevent injury or damage to the product:

- **Maximum Weight Capacity:** This chair has a maximum weight capacity of 250 pounds (113 kg). Do not exceed this limit.
- **Stable Surface:** Always ensure the chair is placed on a stable, level surface to prevent tipping.
- **Avoid Hazards:** Do not place the chair near heat sources, open flames, or in areas where it could be exposed to excessive moisture.
- **Children and Pets:** Keep children and pets away from the chair during assembly.
- **Regular Inspection:** Periodically check all connections and fasteners to ensure they remain tight. Retighten as necessary.
- **Proper Use:** Use the chair only for its intended purpose as a lounge chair. Avoid standing on the chair or using it as a step stool.

3. SETUP AND ASSEMBLY

Your Christopher Knight Home Roseville Accent Lounge Chair requires some assembly, primarily attaching the

legs.

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components are present. The legs are typically stored in a zippered compartment underneath the chair.
2. **Position Chair:** Gently place the chair upside down on a soft, clean surface (e.g., a blanket or carpet) to protect the fabric and floor.
3. **Attach Legs:** Locate the four chair legs. Align each leg with the pre-drilled holes or mounting plates on the underside of the chair. Screw each leg firmly into place. Hand-tighten initially, then use a wrench if provided, ensuring they are secure but do not overtighten.
4. **Upright Chair:** With assistance, carefully turn the chair upright.
5. **Final Check:** Ensure the chair is stable and does not wobble. If it wobbles, recheck the tightness of each leg.



Figure 2: Chair dimensions for planning placement and assembly.

4. OPERATING INSTRUCTIONS

The Christopher Knight Home Roseville Accent Lounge Chair is designed for comfortable seating in indoor environments.

- **Placement:** Position the chair in your desired indoor location, ensuring it is on a flat, stable surface.
- **Seating:** Sit gently on the chair. Avoid sudden impacts or excessive force when sitting down.

- **Movement:** When moving the chair, lift it rather than dragging it to prevent damage to the legs or floor.



Fabric+Blue Flowers

Figure 3: The lounge chair positioned in a room, demonstrating its intended use.

5. CARE AND MAINTENANCE

Proper care will extend the life and appearance of your chair.

- **Cleaning:** For general cleaning, wipe the fabric with a clean, damp cloth. For spills, blot immediately with a clean, dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Vacuuming:** Regularly vacuum the chair using an upholstery attachment to remove dust and debris.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading of the fabric.
- **Leg Maintenance:** Periodically check and tighten the leg screws to ensure stability.



Figure 4: Detail of the chair's fabric pattern, highlighting the floral design.

6. TROUBLESHOOTING

If you encounter any issues with your chair, refer to the following common solutions:

Problem	Possible Cause	Solution
Chair wobbles	Loose legs or uneven surface.	Ensure all legs are securely tightened. Move the chair to a level surface.
Fabric appears faded	Prolonged exposure to direct sunlight.	Relocate the chair away from direct sunlight or use curtains/blinds.
Stains on fabric	Spills not cleaned promptly.	Blot fresh spills immediately. For set-in stains, consult a professional upholstery cleaner.

7. PRODUCT SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	GDFStudio (Christopher Knight Home)
Model Name	Roseville
Item Model Number	234490
Color	Blue Flowers
Product Dimensions	32"D x 51"W x 36"H
Size	Large
Material	Wood (Frame), Polyester (Fill Material), Suede (Upholstery Fabric Type)
Item Weight	52 Pounds
Maximum Weight Recommendation	250 Pounds
Back Style	Scrolled Back
Arm Style	With Arms
Indoor/Outdoor Usage	Indoor
UPC	817056012242

8. WARRANTY AND SUPPORT

For warranty information or product support, please contact the manufacturer, Christopher Knight Home, or the retailer from whom you purchased the product. Keep your proof of purchase for any warranty claims. You may also visit the [product page on Amazon](#) for additional details or to contact customer service.