



Manuals.plus /

- › Epson /
- › Epson WP4000/4500 Series Ink Cartridge XXL Magenta T7013 User Manual

Epson 235E584

Epson WP4000/4500 Series Ink Cartridge XXL Magenta T7013 User Manual

Model: 235E584 | Part Number: C13T701340

PRODUCT OVERVIEW

This manual provides instructions for the installation, operation, and maintenance of the Epson WP4000/4500 Series XXL Magenta Ink Cartridge (T7013, Part Number C13T701340). This cartridge is designed for use with Epson WorkForce Pro series printers, including models WP-4015, WP-4025, WP-4095, WP-4515, WP-4525, WP-4535, WP-4545, and WP-4595.

EPSON
EXCEED YOUR VISION
インクカートリッジ / Ink cartridge

Magenta
T7013



* Actual yield will vary depending on images printed and usage conditions. For more information visit www.epson.eu/pageyield



XXL

● 3400 pages*

WorkForce Pro:
WP-4015 / WP-4025
WP-4095 / WP-4515
WP-4525 / WP-4535
WP-4545 / WP-4595



C13T701340
Made in Japan

EPSON®
EXCEED YOUR VISION

エプソン純正 / Genuine Epson

Figure 1: Epson XXL Magenta Ink Cartridge T7013 packaging. The packaging displays the cartridge color (Magenta), size (XXL), model number (T7013), and an estimated page yield of 3400 pages. It also lists compatible WorkForce Pro printer models and features DURABrite Ultra Ink technology. The UPC is 8715946487113.

The cartridge utilizes DURABrite Ultra Ink, known for its quick-drying, smudge-resistant, fade-resistant, and water-resistant properties, making it suitable for both plain and glossy paper.

SETUP AND INSTALLATION

1. **Unpack the Cartridge:** Carefully remove the new ink cartridge from its packaging. Avoid touching the green circuit board or the ink port to prevent damage or ink leakage.
2. **Prepare the Printer:** Ensure your Epson WorkForce Pro printer is turned on. Open the printer's ink cartridge cover. The print head will move to the replacement position.
3. **Remove Old Cartridge:** If replacing an existing cartridge, gently press the tab on the old cartridge and lift it straight out of its slot. Dispose of the used cartridge responsibly according to local regulations.
4. **Insert New Cartridge:** Insert the new Magenta T7013 cartridge into the correct color slot. Push it down firmly until it clicks into place. Ensure it is seated securely.
5. **Close Cover:** Close the ink cartridge cover. The printer will begin an initialization process, which may take a few minutes. Do not turn off the printer during this process.
6. **Confirm Installation:** Once initialization is complete, the printer's display (if applicable) should indicate that the cartridge is recognized and ready for use.

OPERATING GUIDELINES

Once installed, the ink cartridge operates automatically as part of your printer's system. Follow these guidelines for optimal performance:

- **Print Quality:** For best print quality, use genuine Epson paper.
- **Ink Levels:** Monitor ink levels through your printer's software utility. Replace cartridges when prompted by the printer or when print quality degrades significantly.
- **Storage:** Store unopened ink cartridges in their original sealed packaging in a cool, dark place. Avoid extreme temperatures.

MAINTENANCE

Proper maintenance ensures the longevity of your ink cartridge and printer:

- **Nozzle Check:** If print quality issues arise (e.g., missing lines, faded colors), perform a nozzle check using your printer's utility software.
- **Head Cleaning:** If the nozzle check pattern is incomplete, perform a print head cleaning. This process uses ink, so perform it only when necessary.
- **Print Regularly:** To prevent ink from drying out in the print head, it is recommended to print at least once a month.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer does not recognize cartridge.	Cartridge not seated correctly or protective tape not removed.	Remove and reinsert the cartridge firmly. Ensure all protective tape has been removed. Clean the chip contacts with a lint-free cloth if necessary.
Faded or missing colors in prints.	Low ink level or clogged print nozzles.	Check ink levels. Perform a nozzle check and print head cleaning through your printer's utility software.
Ink leakage.	Improper handling or damaged cartridge.	Ensure cartridge is inserted correctly. If leakage persists, the cartridge may be faulty; contact support.

SPECIFICATIONS

- **Product Name:** Epson WP4000/4500 Series Ink Cartridge XXL Magenta
- **Model Number:** T7013 (Epson Part Number: C13T701340)
- **Manufacturer Model Number:** 235E584
- **Ink Color:** Magenta
- **Ink Type:** DURABrite Ultra Ink
- **Estimated Page Yield:** 3400 pages* (Actual yield varies considerably based on images printed, print settings, temperature, and frequency of printing.)
- **Compatible Printers:** Epson WorkForce Pro WP-4015, WP-4025, WP-4095, WP-4515, WP-4525, WP-4535, WP-4545, WP-4595
- **Item Weight:** 3.88 ounces
- **Product Dimensions:** 0.06 x 0.03 x 0.01 inches
- **GTIN (UPC):** 08715946487113
- **Country of Origin:** Japan
- **First Available Date:** August 6, 2012

**Page yield information is based on ISO/IEC 24711 and 24712 test patterns.*

WARRANTY AND SUPPORT

Epson ink cartridges are manufactured to high quality standards. For information regarding warranty coverage and technical support, please refer to the documentation provided with your Epson printer or visit the official Epson support website. Keep your purchase receipt as proof of purchase for warranty claims.

Epson Official Website: www.epson.com

Epson Page Yield Information: www.epson.eu/pageyield (as indicated on product packaging)