

[Manuals.plus](#) /

› [ZEIKOS](#) /

› ZEIKOS ZE-WRC6 RC-6 Wireless Remote Control Instruction Manual

ZEIKOS ZE-WRC6

ZEIKOS ZE-WRC6 RC-6 Wireless Remote Control Instruction Manual

INTRODUCTION

Thank you for choosing the ZEIKOS ZE-WRC6 RC-6 Wireless Remote Control. This device is designed to provide a convenient and effective way to trigger your Canon camera's shutter remotely, minimizing camera shake and enhancing image clarity. Please read this manual carefully to ensure proper setup and operation.

PRODUCT OVERVIEW

The ZEIKOS ZE-WRC6 RC-6 is an infrared wireless remote control that functions as a replacement for the Canon RC-6. It allows you to activate your camera's shutter from a distance of approximately 12 feet (3.6 meters) in front of the camera. This is particularly useful for self-portraits, group shots, or any situation where direct contact with the camera might introduce unwanted movement.

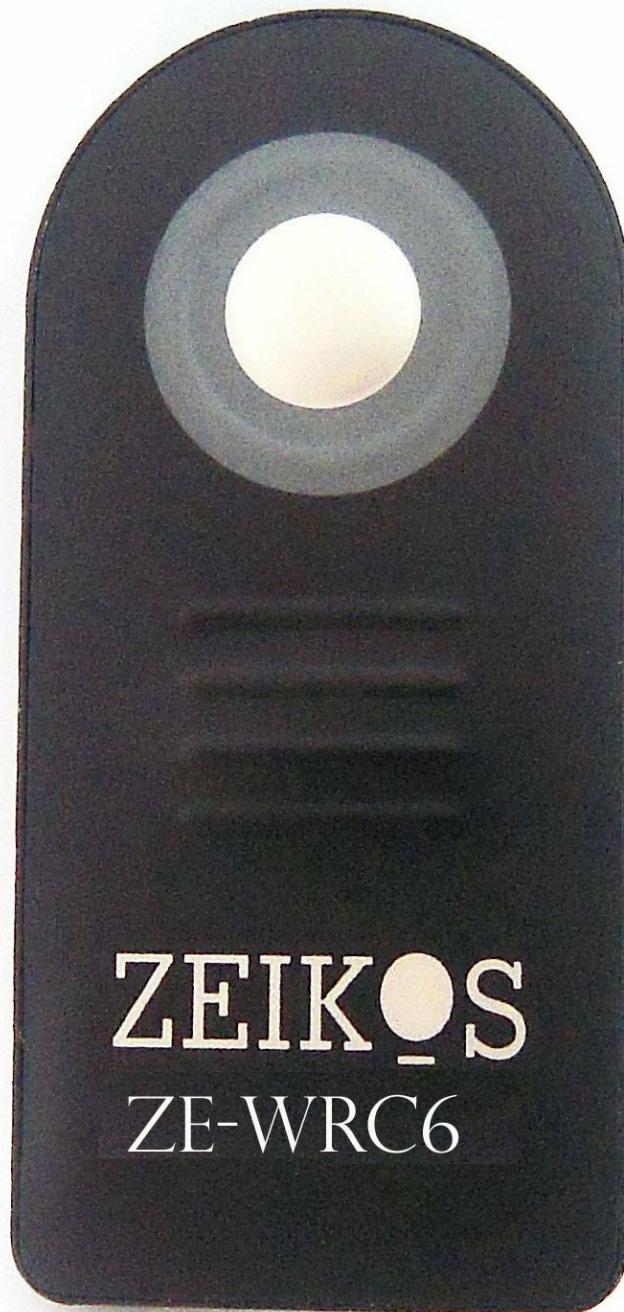


Image: The ZEIKOS ZE-WRC6 RC-6 Wireless Remote Control, a compact black device with two buttons.

Compatible Cameras

This remote control is compatible with a wide range of Canon EOS and Rebel cameras, including but not limited to:

- **Canon EOS Rebel Series:** SL1, T1i, T2i, T3i, T4i, T5i, T6i, T6s, T7, XT, XTi, XSi, 100D, 300D, 350D, 400D, 450D, 500D, 550D, 600D, 650D, 700D
- **Canon EOS Series:** 5D Mark II, 5D Mark III, 5D Mark IV, 5DS R, 6D, 60D, 7D, 70D

SETUP

1. Battery Installation

The remote control requires one CR2 battery, which is included. To install or replace the battery:

1. Locate the battery compartment on the back of the remote control.

2. Open the battery compartment cover.
3. Insert the CR2 battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

2. Camera Preparation

Before using the remote control, you must enable the remote control function on your Canon camera. The exact steps may vary slightly depending on your camera model, but generally involve:

1. Turn on your camera.
2. Access the camera's menu or drive mode settings.
3. Select the self-timer/remote control mode. This is often represented by an icon showing a clock or a remote control symbol.
4. Choose either the immediate release mode (usually indicated by a single remote icon) or the 2-second delay mode (usually indicated by a remote icon with a '2' or '2s').
5. Ensure the camera's infrared receiver (usually located on the front grip or near the lens mount) is unobstructed and facing the general direction of the remote control.

OPERATING INSTRUCTIONS

Once your camera is set to remote control mode, you can operate the ZEIKOS ZE-WRC6 RC-6.

Immediate Shutter Release

1. Point the remote control towards the camera's infrared receiver.
2. Press the larger button on the remote control. The camera will immediately trigger the shutter.

2-Second Delay Shutter Release

1. Ensure your camera is set to the 2-second delay remote control mode.
2. Point the remote control towards the camera's infrared receiver.
3. Press the smaller button on the remote control. The camera will trigger the shutter after a 2-second delay.

Note: The effective range of the remote control is approximately 12 feet (3.6 meters) directly in front of the camera's infrared receiver. Obstructions or strong light sources may affect performance.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or solvents.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** If the remote control is not functioning, replace the CR2 battery. Remove the battery if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not trigger shutter.	Camera not in remote control mode.	Set camera to self-timer/remote control mode.

Problem	Possible Cause	Solution
	Battery is dead or incorrectly installed.	Replace battery or check polarity.
	Obstruction between remote and camera.	Ensure a clear line of sight to the camera's IR receiver.
	Remote is out of range.	Move closer to the camera (within 12 feet).
Remote only works intermittently.	Weak battery.	Replace battery.
	Strong ambient light interference.	Try using the remote in an area with less direct sunlight or strong artificial light.

SPECIFICATIONS

Feature	Detail
Brand	ZEIKOS
Model Number	ZE-WRC6
Connectivity Technology	Infrared
Control Type	Button Control
Compatible Devices	Canon Cameras (various EOS and Rebel models)
Maximum Supported Devices	1
Operating Range	Approximately 12 feet (3.6 meters)
Battery Type	1 x CR2 (included)
UPC	811709017899
ASIN	B005FMJYA0

WARRANTY AND SUPPORT

Specific warranty information for the ZEIKOS ZE-WRC6 RC-6 Wireless Remote Control is not provided in this document. For details regarding warranty coverage, returns, or technical support, please refer to the product packaging or contact the retailer or manufacturer directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B005FMJYA0>

More documents and user manuals: **<https://manuals.plus/>**