

## Livex 2356-07

# Livex Lighting Monterey Outdoor Wall Lantern Instruction Manual

Model: 2356-07 (Also applicable to 2251-07, 2351-07)

## INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Livex Lighting Monterey Outdoor Wall Lantern. Please read all instructions carefully before beginning installation and retain this manual for future reference. This fixture is designed for outdoor use and features a durable bronze finish with clear beveled glass panels.

## SAFETY INFORMATION

- **WARNING:** To avoid electric shock, ensure power is turned off at the circuit breaker or fuse box before installation, servicing, or changing bulbs.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring.
- This fixture is intended for outdoor use. Ensure all wiring connections are properly sealed to prevent water intrusion.
- Do not exceed the maximum wattage specified for the bulbs.
- Handle glass components with care to prevent breakage.

## PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Monterey Outdoor Wall Lantern Fixture
- Mounting Hardware (Mounting plate, screws, wire nuts)
- Instruction Manual

*Note: Bulbs are not included and must be purchased separately.*

## SETUP AND INSTALLATION

Follow these steps for proper installation:

1. **Turn off Power:** Locate the circuit breaker or fuse box that controls the power to the desired installation location. Turn off the power completely.
2. **Prepare Mounting Surface:** Ensure the mounting surface is clean, dry, and structurally sound.
3. **Attach Mounting Plate:** Secure the mounting plate to the electrical junction box using the provided screws. Ensure the plate is level and firmly attached.
4. **Make Electrical Connections:** Carefully connect the fixture's wires to the house wires using the provided wire nuts. Match the wires as follows:
  - Black (Live/Hot) fixture wire to Black (Live/Hot) house wire.
  - White (Neutral) fixture wire to White (Neutral) house wire.
  - Green or Bare Copper (Ground) fixture wire to Green or Bare Copper (Ground) house wire.

Ensure all connections are secure and insulated.

5. **Mount the Fixture:** Carefully align the fixture with the mounting plate and secure it in place using the provided screws or nuts. Ensure the fixture is flush against the mounting surface.
6. **Install Bulbs:** Insert the appropriate candelabra base bulbs (not included) into the sockets. Refer to the specifications section for maximum wattage.
7. **Restore Power:** Once installation is complete and all connections are secure, turn the power back on at the circuit breaker or fuse box.



Image: Livex Lighting Monterey Outdoor Wall Lantern. This image displays the complete assembled outdoor wall lantern, featuring a bronze finish, clear beveled glass panels, and three candelabra-style bulb sockets visible inside the lantern enclosure. The fixture is designed to be mounted to a wall, with a decorative curved arm extending from the wall plate to support the lantern body.

## OPERATING INSTRUCTIONS

---

Once properly installed and powered, the Livex Lighting Monterey Outdoor Wall Lantern operates via the wall switch or external control (e.g., dimmer, timer, photocell) to which it is connected. Ensure the correct type and wattage of bulbs are installed for optimal performance and safety.

## MAINTENANCE

- **Cleaning:** To clean the fixture, turn off the power and allow it to cool. Wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or glass.
- **Bulb Replacement:** Turn off the power before replacing bulbs. Allow old bulbs to cool before removing. Replace with new candelabra base bulbs of the specified wattage.
- **Inspection:** Periodically inspect the fixture for any signs of wear, damage, or loose connections. Address any issues promptly.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on	No power to fixture Loose wiring connection Faulty bulb Faulty wall switch	Check circuit breaker/fuse. Verify all wire connections are secure (power off). Replace bulb. Test or replace switch.
Light flickers	Loose bulb Loose wiring connection Incorrect bulb type/wattage	Tighten bulb. Check wiring connections (power off). Ensure correct bulb type and wattage.
Glass panels are loose	Retaining clips/screws are loose	Carefully tighten retaining clips or screws holding the glass panels.

## SPECIFICATIONS

Attribute	Detail
Brand	Livex
Model Number	2356-07 (Also 2251-07, 2351-07)
Product Dimensions (30" H model)	30" H x 16" W x 15" D
Material	Bronze
Color	Bronze finish, Clear glass
Light Fixture Form	Wall Lantern
Indoor/Outdoor Usage	Outdoor
Power Source	Corded Electric
Bulb Type (30" H model)	(4) 60W Candelabra Base Bulbs (not included)
Item Weight	9.5 Pounds
Mounting Type	Wall Mount

## WARRANTY AND SUPPORT

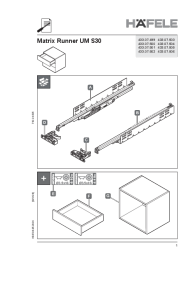 


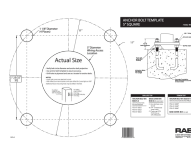 
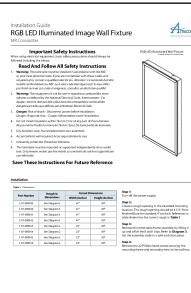 

For warranty information or technical support, please contact Livex Lighting directly. Keep your purchase receipt as proof

of purchase. Contact details can typically be found on the manufacturer's official website or product packaging.



© 2023 Livex Lighting. All rights reserved.

Related Documents - 2356-07

	<p><a href="#">HAFELE Matrix Runner UM S30 Installation Guide</a></p> <p>Detailed installation instructions for the HAFELE Matrix Runner UM S30 drawer slide system, including dimensions, drilling patterns, and assembly steps.</p>
	<p><a href="#">Sepura TETRA/Nødnett Håndterminaler SC20 og SC21 Brukerveiledning (Brannvesen Oppsett)</a></p> <p>Detaljert brukerveiledning for Sepura TETRA/Nødnett håndterminaler, modeller SC20 og SC21, spesielt konfigurert for brannvesen. Dekker funksjoner som nød-alarm, CallOut, samtale, funksjoner og hurtigtaster.</p>
	<p><a href="#">Sepura SC20/SC21 TETRA Nødnett Brukerveiledning</a></p> <p>Omfattende brukerhåndbok for Sepura SC20 og SC21 TETRA/Nødnett kommunikasjonsterminaler med BRANN oppsett. Dekker funksjoner som nød-alarm, CallOut, repeater-modus, hurtigtaster og menyhåndtering.</p>
	<p><a href="#">RAB Anchor Bolt Template for 5" Square Poles</a></p> <p>This document provides an actual size template and installation details for RAB's 5" square lighting poles, specifying anchor bolt kits and base cover kits for both drilled and tenon top configurations.</p>
	<p><a href="#">Amico RGB LED Illuminated Image Wall Fixture Installation Guide   MRI Compatible</a></p> <p>Comprehensive installation guide for the Amico RGB LED Illuminated Image Wall Fixture, including safety instructions, dimensions, wiring diagrams, and mounting procedures. MRI compatible.</p>
	<p><a href="#">SW-MOTECH Motorcycle Protection Accessories - Mounting Instructions</a></p> <p>Comprehensive mounting instructions and parts lists for SW-MOTECH motorcycle protection accessories including crash bars, engine guards, handguards, and axle sliders. Detailed guides for installation and maintenance.</p>

