

Dyson DC41 Animal

Dyson DC41 Animal Bagless Vacuum Cleaner User Manual

Model: DC41 Animal

INTRODUCTION

The Dyson DC41 Animal is an upright bagless vacuum cleaner engineered for powerful and efficient cleaning across various floor types. It integrates advanced Radial Root Cyclone™ technology for consistent, strong suction and Ball™ technology for exceptional maneuverability.

Key Features:

- **Radial Root Cyclone™ Technology:** Captures more microscopic dust and dirt.
- **Automatic Cleaner Head Adjustment:** Self-adjusts for optimal contact on all floor types, including hard floors.
- **Ball™ Technology:** Enables smooth steering and easy navigation around obstacles.
- **Lightweight and Durable Design:** Built for ease of use and longevity.
- **5-Year Warranty:** Provides extended coverage for peace of mind.

SETUP

Unpacking and Assembly

Carefully remove all components from the packaging. Assemble the main body, handle, and cleaner head by following the included diagrams. Ensure all connections click securely into place to prevent loss of suction or instability during operation.

Initial Checks

Before the first use, verify that the clear bin is correctly fitted and securely attached to the main body. Confirm that all filters are properly inserted into their designated compartments. Ensure the power cord is free from damage before plugging into an electrical outlet.

OPERATING INSTRUCTIONS

Powering On/Off

To turn the vacuum cleaner on or off, press the red power button located on the main body of the unit.

Ball™ Technology and Maneuverability

The DC41 Animal utilizes Dyson's patented Ball™ technology, which allows for smooth steering and effortless navigation around furniture and other obstacles. The vacuum's low center of gravity, with essential components housed within the ball, provides enhanced stability and ease of movement.



This image illustrates the internal engineering of the Dyson Ball, which houses essential components like the motor, contributing to the vacuum's low center of gravity and enhanced maneuverability.

This video demonstrates the Dyson DC41 Animal's Ball™ technology, showcasing its ability to steer smoothly and navigate around obstacles with ease.

Automatic Cleaner Head Adjustment

The cleaner head of the DC41 Animal automatically adjusts its height to maintain optimal contact and suction across different floor types. This feature ensures consistent cleaning performance whether you are vacuuming carpets or hard floors, eliminating the need for manual adjustments.

Radial Root Cyclone™ Technology

Dyson's Radial Root Cyclone™ technology is designed to capture more microscopic dust and dirt. This system channels airflow to maximize suction power, efficiently separating debris from the air and trapping it in the clear bin.

Using Attachments

The hose and wand detach in one swift motion, providing instant access for high-reach cleaning. Additional tools, specifically designed by Dyson engineers, can be attached to the wand for specialized tasks such as cleaning stairs, upholstery, or reaching into tight and awkward spaces.



The image shows the Dyson DC41 Animal with its wand fully extended, demonstrating its capability for cleaning high areas like ceilings or curtain rails.



This image displays a person using a specialized attachment tool on the Dyson DC41 Animal to effectively clean pet hair and allergens from sofa upholstery.

MAINTENANCE

Emptying the Clear Bin

To empty the clear bin, press the red button on the handle to release the bin from the main body. Position the bin over a trash receptacle and press the red button on the bottom of the bin to release the dirt. Close the bin base securely after emptying. Avoid overfilling the bin to maintain optimal suction.

This video provides a step-by-step guide on how to easily empty the clear bin of the Dyson DC41 Animal, highlighting the hygienic one-touch release mechanism.

Washing Filters

The Dyson DC41 Animal features washable filters designed for lifetime use. Refer to the filter compartment for specific instructions on removal and recommended cleaning frequency (typically every 3 months). Wash filters with cold water only, without detergent, and allow them to air dry completely for at least 24 hours in a warm, dry place before reinserting. Do not use a washing machine or tumble dryer.

TROUBLESHOOTING

- **Reduced Suction:** Check the clear bin for blockages and ensure it is not overfilled. Inspect the cleaner head, hose, and wand for any obstructions. Clean or wash filters as recommended.
- **Brush Bar Not Rotating:** Ensure the vacuum is in the correct operating position (handle tilted back). Check for obstructions around the brush bar. If cleaning hard floors, ensure the brush bar is not intentionally turned off.
- **General Clogs:** If a clog is suspected, carefully disconnect the hose and wand, and inspect all accessible airways for debris. Use a long, blunt object to dislodge any blockages. Never use sharp objects that could damage the vacuum.
- **Vacuum Not Standing Upright:** Ensure the handle is pushed fully forward until it clicks into the upright locked position.

SPECIFICATIONS

Brand:

Dyson

Model Name:

DC41 Animal

Item Model Number:

DC41 Animal New

UPC:

879957005372

Color:

Iron/Purple

Item Weight:

0.01 Ounces (Note: This weight seems unusually low and may refer to a component, not the full unit.)

Product Dimensions:

12.2 x 14.3 x 41.9 inches

Recommended Uses:

Hard Floor, Carpet

Noise Level:

82 Decibels

Style:

Bagless Upright Vacuum Cleaner

Vacuum Collection Technology:

Cyclonic (Radial Root Cyclone™)

Control Method:

Touch / Push Button

Batteries Required:

No

Import:

Made in USA and Imported

WARRANTY AND SUPPORT

The Dyson DC41 Animal Bagless Vacuum Cleaner is covered by a **5-year warranty**, ensuring protection against manufacturing defects and malfunctions under normal use. For detailed warranty terms and conditions, please refer to the documentation included with your product or visit the official Dyson website. For technical assistance, troubleshooting guidance, or to purchase genuine Dyson replacement parts and accessories, please contact Dyson Customer Support. You can find contact information and additional resources on the official Dyson website: [Visit the Dyson Store](#).